

FRENIC-VG Series

NEW

FRENIC-VG



FUJI INVERTERS

High performance enabled by the comprehensive use of Fuji technology.

Easy maintenance for the end-user.

Maintains safety and protects the environment.

Opens up possibilities for the new generation.

The Dawn of a New Era

The FRENIC-VG is ushering in a new era with the best performance in the industry.



NEW FRENIC-VG

FUJI INVERTERS

High performance enabled by the comprehensive use of Fuji technology.

Easy maintenance for the end-user.

Maintains safety and protects the environment.

Opens up possibilities for the new generation.

With the FRENIC-VG, Fuji has concentrated its technologies to deliver the best-performing inverter on the market. In addition to basic performance, this model features the following dramatic improvements: support for previously difficult applications due to technical and capability limitations, easier, more user-friendly maintenance, and environmental friendliness and safety. Fuji Electric proudly introduces the FRENIC-VG to the world.

FRENIC-VG CONCEPT

Improved control capacity

- High overload resistance (200% 3sec)
- Low torque ripple
- Improved torque accuracy ($\pm 3\%$)
- Improved sensorless control performance (torque increased at low speed)
- Improved quick response (600Hz)
- Improved auto tuning accuracy

A wide range of applications

- Triple ratings available on intended use
- Synchronous motor drive
- Servo function
- Various optional cards supported (20 types or more)

Easier maintenance and greater reliability

- Quicker adjustment, start, replacement, and restoration times
USB port, high functional loader, compatibility with earlier models, and ASR auto tuning
- Fault diagnosis
Trace back, clock function, and fault information
- Reliability
Individual output of serious and minor alarms, long-life parts, and PG fault detection function

Environmental friendliness and safety

- Conformity to functional safety standards
(Standard: STO incorporated) (Option: STO, SS1, SLS, and SBC can be incorporated)
- Environmental resistance
RoHS (standard), durable against salt corrosion and sulfidizing gas
- Supports harmonics suppression (12-pulse rectification)
(Applicable capacity: supports the capacity of 132 kW or higher for each unit)




Improved Control Performance

Materialized industry's best control performance


Induction Motor

Achieved speed response of 600Hz

(Tested with a dedicated motor with PG under vector control with speed sensor: about six times greater than our conventional model)

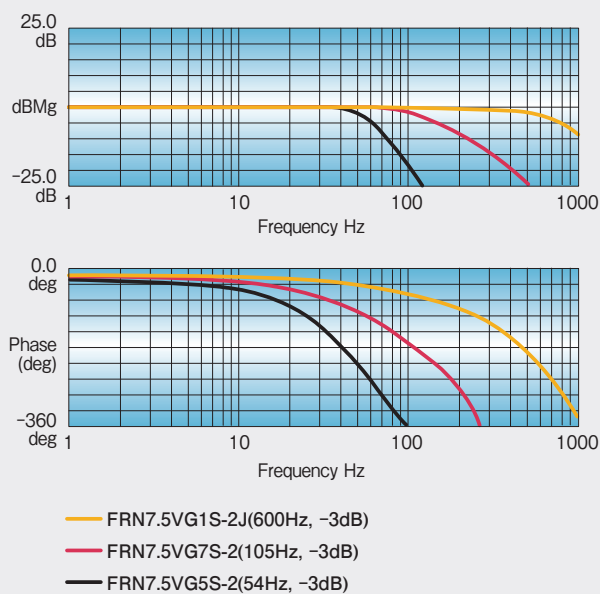


Follow-up characteristics under impact load

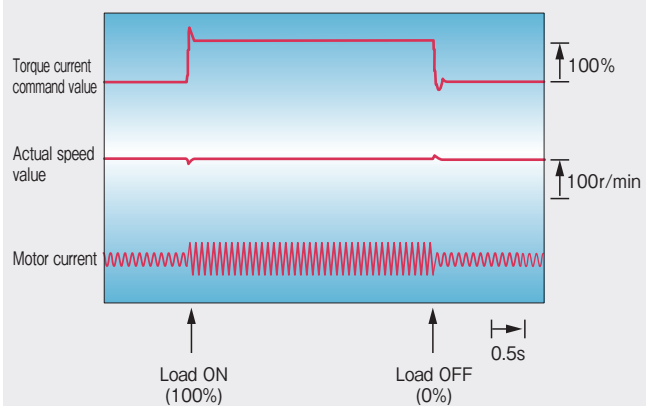

FRN37VG1S-4J, at 500r/min operation

Uneven rotation Reduced by one-third*


*Compared to our conventional model

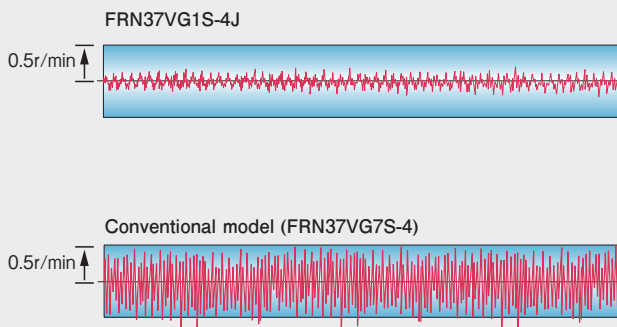

At 30r/min operation

Speed and torque characteristics

Torque accuracy $\pm 3\%$

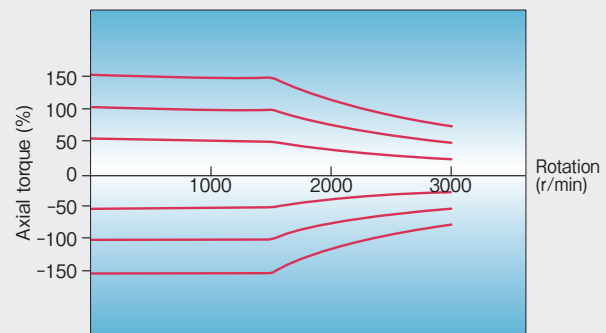

FRN37VG1S-4J



A Wide Range of Applications

Ratings for intended use

The operation mode for the motor is selected according to motor load condition. Motors larger by one or two frames can be driven with medium load (MD) and light load (LD) use.

Specification	Applied load	Feature	Applicable overload rating
HD	High Duty Spec (standard)	Powerful drive at low noise	Current: 150% 1min/200% 3sec
MD*3	Middle Duty Spec	Can drive motors of frames one size larger *1	Current: 150% 1min, carrier 2kHz *2
LD	Low Duty Spec	Can drive motors of frames one or two sizes larger *1	Current: 120% 1min

(Notes) *1: Varies depending on the motor specification and power supply voltage.

*2: This will increase noise. Check the motor installation environment.

*3: The MD specification comes with only 400V series (90 to 400 kW).

Capacity range expanded of brake circuit

Having a standard built-in brake circuit (with 200V 55kW or less and 400V 160KW or less), is useful when applying the inverter to the vertical transfer machine, which is frequently used under the regenerative load.

Servo function (coming soon)

The following functions are enabled.

- Position control by built-in APC
- The ABS encoder I/F option card with 17-bit high resolution has been prepared.

This is soon to be supported for position control.

- Pulse column input enabled (optional)
 - The SX and E-SX bus I/F option card has been prepared.
- This is soon to be supported for position control.

Multi-drive function (Induction and synchronous motors)

- Highly efficient drive is achieved in driving together with our synchronous motor.
- Settings allow you to switch between induction and synchronous motor operation.



GNF2 series



GNB2 series



GNS1 series

	Induction motor	Synchronous motor
Sensor provided	MVK series	GNF2 series
Sensorless	—	(Coming soon) GNB2 series GNS1 series (High efficiency)

A wide range of options

- The new model offers options that enable various interfaces, including high-speed communication.
 - Options can be used by just inserting them into the connectors inside the inverter. Up to five cards can be mounted.
- (There are some restrictions on how optional cards may be combined. Contact Fuji for details)

Type	Name		Type
Analog card	Synchronized interface*1		OPC-VG1-SN
	F/V converter*1		OPC-VG1-FV
	Aio expansion card		OPC-VG1-AIO
	Ai expansion card		OPC-VG1-AI
Digital card (for 8-bit bus)	Di interface card		OPC-VG1-DI
	Dio expansion card		OPC-VG1-DIO
	PG interface expansion card	+5V line driver	OPC-VG1-PG
		Open collector	OPC-VG1-PGo
		NEW (NEW) ABS encoder with 17-bit high resolution	OPC-VG1-SPGT
	PG card for synchronous motor drive	Line driver	OPC-VG1-PMPG
		Open collector	OPC-VG1-PMPGo
	T-Link interface card		OPC-VG1-TL
Digital card (for 16-bit bus)	CC-Link interface card		OPC-VG1-CCL
	SX bus interface card		OPC-VG1-SX
	NEW E-SX bus interface card		OPC-VG1-ESX
	User programming card*1		OPC-VG1-UPAC
Safety card	NEW Functional safety card		OPC-VG1-SAFE
Field bus interface card	PROFIBUS-DP interface card*1		OPC-VG1-PDP
	DeviceNet interface card*1		OPC-VG1-DEV
Control circuit terminal	Terminal block for high-speed serial communications		OPC-VG1-TBSI


*1 Coming soon

Easier Maintenance and Greater Reliability

Upgraded PC loader functions


FRENIC-VG Loder can be used via the USB connector (mini B) equipped on the front cover.

- The front cover does not have to be removed.
- No RS-485 converter is needed.
- Commercial cables can be used.

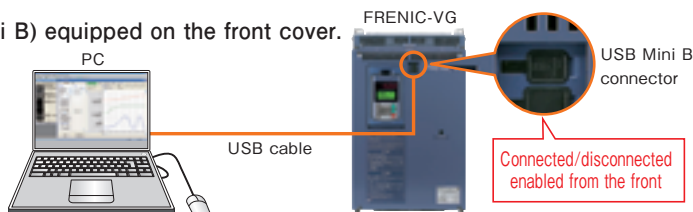

[Fault diagnosis using the trace back function]

Edited on the trace screen on the loader

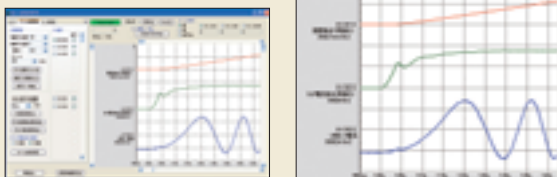

- Internal data and date around the fault are recorded.
- NEW** The real-time clock (clock function) is built-in as standard.
- Data are backed up by battery.
- (NOTE) Battery: 30kW or more (built-in as standard), up to 22kW (available as option:OPK-BP)
- Trace waveform can be checked on the PC loader

[Easy edit and detail monitor]

Data editing and detailed data monitor analysis operations are must easier than with a conventional PC loader.

- Function code setting** User-defined displays (customized displays), data explanation display for each code.
- Trace function** Real-time trace: for long-term monitoring
Historical trace: for detailed data diagnosis for short periods
Trace back: for fault analysis (last three times)

(Note) Real-time and historical traces are available in the fare-paying loader software (WPS-VG1-PCL). The trace data can be stored in the internal memory even when the power is shut off (for inverters with 22kW or less, this function is available using the optional battery for memory backup).

Multifunctional KEYPAD

- Wide 7-segment LED ensures easy view.
- Backlighted LCD display allows the operator to see the display clearly, even on a dark control panel.
- **NEW** Enhanced copy function
The function codes can be copied to other inverters easily. (Three patterns of function codes can be stored.) Copying data in advance reduces restoration time when problems occur, by replacing the KEYPAD when changing the unit.

- Remote control operation is available.
The KEYPAD can be remotely operated by extending the cable length at the RJ connector.
- JOG (jogging) operation can be executed using the KEYPAD.
- **NEW** The HELP key displays operation guidance.




More reliable functions

Save alarm data

Detailed data are stored for the last four alarms, including:

- Time to sound alarm
- Speed setting value
- Detection speed value
- Torque command value
- Temperature (heat sink, internal temperature)
- Accumulated operation time
- Output current detection value
- Magnetic-flux reference value
- I/O status

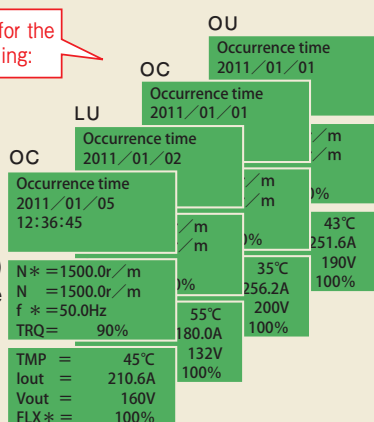

- **NEW** The number of alarm data to be stored has been increased from the conventional model.

With the real-time clock function built-in as standard, the latest and the last three pieces of alarm data on time, speed command, torque, current and others can be stored. This enables machine units to be checked for abnormalities.

⇒Previously alarm data were deleted to overwrite spin-off alarm data. This is resolved with the new VG model.

Alarm severity selection

Alarm severity (serious and minor) can be selected, eliminating the risk of critical facility stoppage due to a minor fault.

	30-relay output	Y-terminal output	Inverter output	Selection
Motor overload, communications error, DC fan lock, etc.	Not output (minor fault)	Provided	Operation continued	Can be selected for each function.
	Output	None	Shutoff	
Blown fuse, excessive current, ground fault, etc.	Output	None	Shutoff	Fixed

PG fault diagnosis

- **NEW** The PG interface circuit incorporated as standard detects disconnection of the power supply line as well as the PG signal line.
- Operation can be continued in sensorless mode during PG disconnection or fault. (Soon to be supported)

Old model: The inverter was stopped by a trip and the motor runs freely.

New model: The mode is automatically switched to sensorless vector control mode when a PG fault is detected, minimizing effect to the machined products.

(Control performance during the sensorless control is lower than with PG vector control. Check operating conditions in advance by combining the sensorless mode to your units or machines to see whether the torque applied at low speed is sufficient or not.)

- **NEW** A mode that judges if it is a PG fault or fault on the inverter side was added
Simulated output mode is provided at the PG pulse output terminal (FA and FB). Operation can be checked by connecting this to the PG input terminal.



Components with a longer service life

For the various consumable parts inside the inverter, their designed lives have been extended to 10 years, which also extended the equipment maintenance cycles.

Life-limited component name	Planned life
Cooling fan	10 years
Smoothing capacitor on main circuit	
Electrolytic capacitors on PCB	

Life conditions

Ambient temperature: 40°C, load factor: 100% (HD spec), 80% (MD and LD specs)

(Note) The planned life is determined by calculation, and is not a guaranteed value.

Useful functions for test run and adjustment

- Customization of function code display
(Individual items on the loader can be set to display or not.)
- Each communications I/O map input/output status is displayed (for PLC software debug) on the loader or KEYPAD (KEYPAD is soon to be supported).
- **NEW** Simulated fault alarm issued by a special operation on the KEYPAD
- **NEW** Monitor data hold function
- Simulated operation mode
Simulated connection allows the inverter to be operated with internal parts in the same way as if they were connected to the motor, without actually being connected.
- The externally input I/O monitor and PG pulse states can be checked on the KEYPAD.
- ASR auto tuning (Soon to be supported)

Adaptation to Environment and Safety

Conforms to safety standards (Soon to be supported)

- The safety function STO that conforms to the function safety standard EN61800-5-2 is incorporated as standard.
- The safety functions STO, SS1, SLS, and SBC that conform to safety standard EN61800-5-2 can be incorporated by adding the function safety option OPC-VG1-SAFE. (Available only when combined with the dedicated motor MVK.)

Safety function STO: Safe Torque Off

This function shuts down the output of torque with the motor immediately.

Safety function SS1: Safe Stop 1

This function decreases the motor speed to shut down the motor by torque output OFF by the STO function immediately when the motor reaches the specified speed or after the specified time has elapsed.

Safety function SLS: Safely Limited Speed

This function prevents the motor from rotating over the specified speed.

Safety function SBC: Safe Brake Control

This functions outputs signals the control the motor brake.


Enhanced lifetime alarm

- Lifetime alarms can be checked readily on the KEYPAD and the PC loader (optional).
- Facility maintenance can be performed much easier thanks to lifetime alarms.

Items			
Inverter accumulated time (h)	No. of inverter starts (times)	Facility maintenance warning Accumulated time (h) No. of starts (times)	Inverter lifetime alarm information is displayed.

Easy wiring (removable control terminal block)

- The terminal block can be connected to the inverter after control wiring work is complete. Wiring work is simplified.
- Restoration time for updating equipment, problem occurrence, and inverter replacement has been drastically reduced. Just mount the wired terminal block board to the replaced inverter.

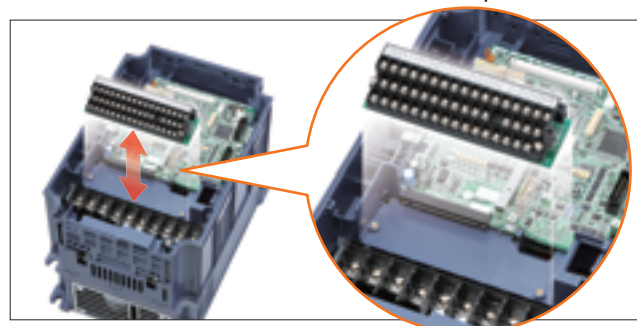

Enhanced environmental resistance

Environmental resistance has been enhanced compared to conventional inverters.

- (1) Environmental resistance of cooling fan has been enhanced.
- (2) Ni and Sn coatings are employed on copper bars.

Environmental resistance has been enhanced on the FRENIC-VG compared to conventional models; however, the following environments should be examined based on how the equipment is being used.

- a.Sulfidizing gas** (used as a part of the business such as with tire manufacturers, paper manufacturers, sewage treatment, and the textile industry)
- b.Conductive dust and foreign particles** (such as with metal processing, extruding machines, printing machines, and waste treatment)
- c. Others:** under unique environments not included under standard environments

Contact Fuji before using the product in environments such as those indicated above.

RoHS Directive compliance

VG complies with European regulations that limit the use of specific hazardous substances (RoHS) as a standard.

Six hazardous substances

Lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyl (PBB), and polybrominated biphenyl ether (PBDE)


(Note) Does not apply to the parts of some inverter models.

About RoHS

Directive 2002/95/EC, promulgated by the European Parliament and European Council, limits the use of specific hazardous substances included in electrical and electronic devices.

Application Examples

Large crane and overhead crane

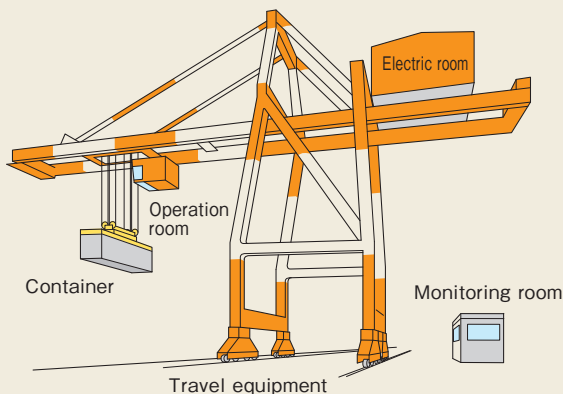

High reliability


VG supports your facility with long life service and high reliability.

The trace back function allows easy fault diagnosis.

System support

The bus system is supported to allow centralized control of elevation, traverse, and trolley, as well as centralized monitoring of running conditions.

Application to plants

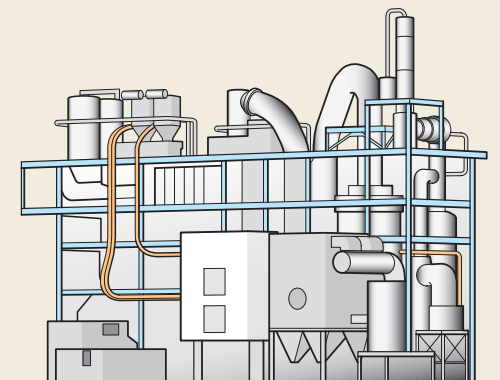


Control with high speed and high accuracy

In addition to high speed and high accuracy, VG contributes to stable facility operation with high reliability and long service life. The trace back function makes diagnosing the cause of problems easy when an abnormality arises.

System support

Centralized control and monitoring are achieved by supporting various fieldbuses.

Servo press: large size for automobiles, small size for machines such as crimping terminal processing machines

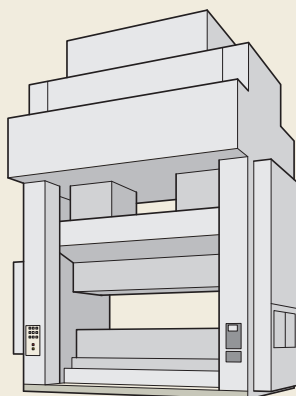

Position control


The press position is controlled based on an instantaneous position command given by the CNC of the high order.

Control with high responsibility contributes to shortening of the operation cycle.

Precision synchronization control

Large machines are driven with several motors to increase thrust. Precision synchronization control of several inverters and motors using the high-speed bus system can be applied.

Winding equipment (paper and metal)

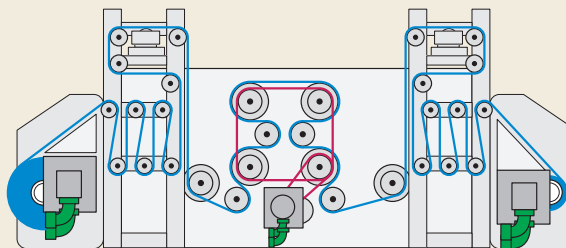

Tension control


Tension-type winding control capability with high accuracy torque control has been improved. Dancer-type winding control capability by the speed control with high speed response has been improved.

System support

The controller that calculates winding diameter achieves constant tension control.



Feeding part of semiconductor manufacturing device, wire saw

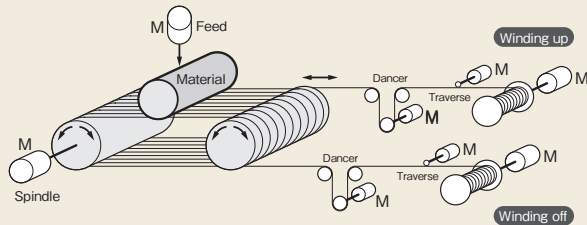


Smooth torque characteristic

The smooth drive characteristic in which torque ripple is suppressed contributes to machining quality.

System support

The system has been made simple and highly efficient by connecting and controlling the spindle that drives wires and the small-capacity servo that drives the traverse axis and winding up and off axes in the same bus system.

Test equipment for automobiles

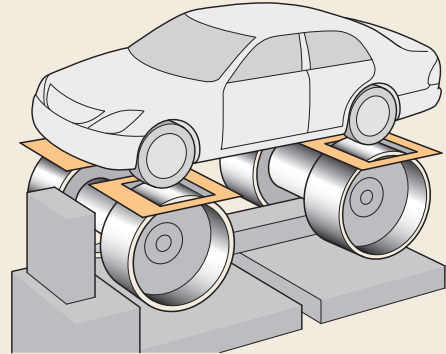


High-speed response control

High-speed rotation and torque control with high response are available for engine and transmission tests.

System support

The system can be supported in cases such as the vehicle body inertia simulation function for a brake test apparatus by combining with the controller.

Shipboard winch

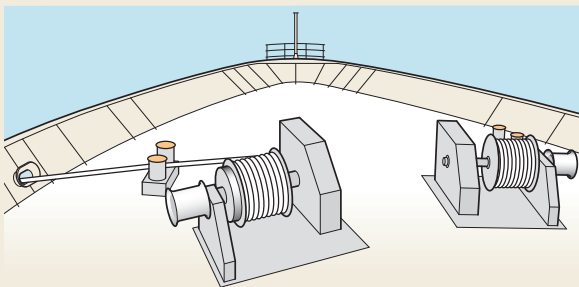


High reliability and tension control

Torque is controlled up to extra low speed using the sensorless feature.

Stable drive is maintained against load variation caused by waves.

Flying shear (Cutting while moving)

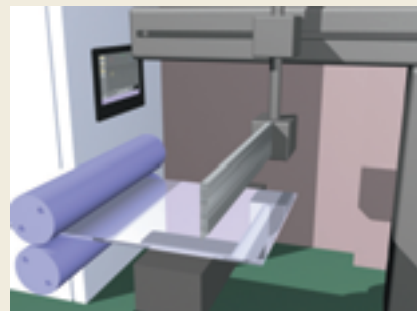

Position control

Position control is performed according to the position command given by the high-order CNC. The machine cuts the blank while moving at the same speed as the blank.

System support

The system is configured by a controller that calculates synchronous operation among the blank feed axis, cutter feed axis and cut axis.

Variation

Nominal applied motor (kW)	200V Series		400V Series		
	HD (150% 1min.,200% 3sec.)	LD (120% 1min.)	HD (150% 1min.,200% 3sec.)	MD (150% 1min.)	LD (120% 1min.)
Applied load	High Duty Spec	Low Duty Spec	High Duty Spec	Middle Duty Spec	Low Duty Spec
0.75	FRN0.75VG1S-2J				
1.5	FRN1.5VG1S-2J				
2.2	FRN2.2VG1S-2J				
3.7	FRN3.7VG1S-2J		FRN3.7VG1S-4J		
5.5	FRN5.5VG1S-2J		FRN5.5VG1S-4J		
7.5	FRN7.5VG1S-2J		FRN7.5VG1S-4J		
11	FRN11VG1S-2J		FRN11VG1S-4J		
15	FRN15VG1S-2J		FRN15VG1S-4J		
18.5	FRN18.5VG1S-2J		FRN18.5VG1S-4J		
22	FRN22VG1S-2J		FRN22VG1S-4J		
30	FRN30VG1S-2J		FRN30VG1S-4J		
37	FRN37VG1S-2J	FRN30VG1S-2J	FRN37VG1S-4J		FRN30VG1S-4J
45	FRN45VG1S-2J	FRN37VG1S-2J	FRN45VG1S-4J		FRN37VG1S-4J
55	FRN55VG1S-2J	FRN45VG1S-2J	FRN55VG1S-4J		FRN45VG1S-4J
75	FRN75VG1S-2J	FRN55VG1S-2J	FRN75VG1S-4J		FRN55VG1S-4J
90	FRN90VG1S-2J	FRN75VG1S-2J	FRN90VG1S-4J		FRN75VG1S-4J
110		FRN90VG1S-2J	FRN110VG1S-4J	FRN90VG1S-4J	FRN90VG1S-4J
132			FRN132VG1S-4J	FRN110VG1S-4J	FRN110VG1S-4J
160			FRN160VG1S-4J	FRN132VG1S-4J	FRN132VG1S-4J
200			FRN200VG1S-4J	FRN160VG1S-4J	FRN160VG1S-4J
220			FRN220VG1S-4J	FRN200VG1S-4J	FRN200VG1S-4J
250				FRN220VG1S-4J	
280			FRN280VG1S-4J		FRN220VG1S-4J
315			FRN315VG1S-4J	FRN280VG1S-4J	
355			FRN355VG1S-4J	FRN315VG1S-4J	FRN280VG1S-4J
400			FRN400VG1S-4J	FRN355VG1S-4J	FRN315VG1S-4J
450				FRN400VG1S-4J	FRN355VG1S-4J
500			FRN500VG1S-4J		FRN400VG1S-4J
630			FRN630VG1S-4J		FRN500VG1S-4J
710					FRN630VG1S-4J

*When a motor which is larger than the inverter by one frame or more for FRN55VG1□-2J/4J or higher inverters (applicable motor 75kW or more), the type of DC reactor, which is a standard accessory, is different among HD, MD and LD specifications. (Shifted by one frame)

How to read the model number

FRN 5.5 □ VG 1 S - 2 J □ □

Code	Series name
FRN	FRENIC Series
Code	Nominal applied motor capacity
0.75	0.75kW
1.5	1.5kW
2.2	2.2kW
3.7	3.7kW
5.5	5.5kW
?	?
630	630kW(HD) 710kW(LD)
Code	Cabinet
None	Unit type
Code	Application range
VG	High performance vector control

Code	Language
J	Japanese
E	English
C	Chinese
Z	Optional language
Code	Input power source
2	Three-phase 200V
4	Three-phase 400V
Code	Structure
S	Standard
Code	Developed inverter series
1	Series

(Note) Built-in options: Not provided, braking relation: The standard specification type shown in above list is employed for the standard model.

Caution! The product detail described in this document is intended for selecting a model. When using a product, read the Instruction Manual carefully and use the product properly.



Standard Specifications

HD specification for high duty spec

Three-phase 200V series (unit type)

Type		FRN□VG1S-2J		0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90		
Nominal applied motor [kW]				0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90		
Rated capacity [kVA] (*1)				1.9	3.0	4.1	6.8	10	14	18	24	28	34	45	55	68	81	107	131		
Rated current [A]				5	8	11	18	27	37	49	63	76	90	119	146	180	215	283	346		
Overload current rating				150% of rated current -1min. (*2) 200% -3sec. (*3)																	
Input power	Main power Phase, Voltage, Frequency			3-phase 200 to 230V,50Hz/60Hz										3-phase 200 to 220V/50Hz, 200 to 230V/60Hz (*4)							
	Auxiliary input for control power Phase, Voltage, Frequency			Single phase 200 to 230V,50Hz/60Hz																	
	Auxiliary input for fan power Phase, Voltage, Frequency (*5)			—										Single phase 200 to 220V/50Hz, 200 to 230V/60Hz (*4)							
	Voltage/frequency variation			Voltage: +10 to -15% (Voltage unbalance: 2% or less (*6)), Frequency: +5 to -5%																	
	Rated current [A] (with DCR) (*7)			3.2	6.1	8.9	15.0	21.1	28.8	42.2	57.6	71.0	84.4	114	138	167	203	282	334		
				5.3	9.5	13.2	22.2	31.5	42.7	60.7	80.1	97.0	112	151	185	225	270	—	—		
Required power supply capacity [kVA] (*8)				1.2	2.2	3.1	5.2	7.4	10	15	20	25	30	40	48	58	71	98	116		
Braking method /braking torque				Braking resistor discharge control: 150% braking torque, Separately installed braking resistor (option), Separately installed braking unit (option for FRN75VG1S-2J or higher)																	
Carrier frequency [kHz] (*9)				2 to 15														2 to 10			
Approx. weight [kg]				6.2	6.2	6.2	6.2	6.2	6.2	11	11	11	12	25	32	42	43	62	105		
Enclosure				IP20 closed type										IP00 open type (IP20 closed type is available as option)							

Three-phase 400V series (unit type)

Type		FRN□VG1S-4J		3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	280	315	355	400	500	630
Nominal applied motor [kW]				3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	280	315	355	400	500	630
Rated capacity [kVA] (*1)				6.8	10	14	18	24	29	34	45	57	69	85	114	134	160	192	231	287	316	396	445	495	563	731	891
Rated current [A]				9.0	13.5	18.5	24.5	32.0	39.0	45.0	60.0	75.0	91.0	112	150	176	210	253	304	377	415	520	585	650	740	960	1170
Overload current rating				150% of rated current -1min. (*2)												200% -3sec. (*3)											
Input power	Main power Phase, Voltage, Frequency	3-phase 380 to 480V,50Hz/60Hz												3-phase 380 to 440V/50Hz, 380 to 480V/60Hz (*4)													
	Auxiliary input for control power Phase, Voltage, Frequency	Single phase 380 to 480V,50Hz/60Hz																									
	Auxiliary input for fan power Phase, Voltage, Frequency (*5)	—												Single phase 380 to 440V/50Hz, 380 to 480V/60Hz (*4)													
	Voltage/frequency variation	Voltage: +10 to -15% (Voltage unbalance: 2% or less (*6)), Frequency: +5 to -5%																									
	Rated current [A] (with DCR) (*7) (without DCR)	7.5	10.6	14.4	21.1	28.8	35.5	42.2	57.0	68.5	83.2	102	138	164	210	238	286	357	390	500	559	628	705	881	1115		
	Required power supply capacity [kVA] (*8)	5.2	7.4	10	15	20	25	30	40	48	58	71	96	114	140	165	199	248	271	347	388	436	489	610	773		
Braking method /braking torque				Braking resistor discharge control: 150% braking torque, Separately installed braking resistor (option), Separately installed braking unit (option for FRN200VG1S-4J or higher)																							
Carrier frequency [kHz] (*9)				2 to 15												2 to 10										2 to 5	
Approx. weight [kg]				6.2	6.2	6.2	11	11	11	11	25	26	31	33	42	62	64	94	98	129	140	245	245	330	330	555	555
Enclosure				IP20 closed type												IP00 open type (IP20 closed type is available as option)											

Note 1) The specifications above are established when the function code F80 = 0 (HD specification) is applied. When used with the HD specification with 75kW or more, the DC Reactor is provided as standard.

*1) The rated output voltage is 220V for 200V series and 440V for 400V series.

*2) When the inverter output frequency converted value is 10Hz or less, the inverter may trip early due to overload depending on the conditions such as ambient temperature.

*3) When the inverter output frequency converted value is 5Hz or less, the inverter may trip early due to overload depending on the conditions such as ambient temperature.

*4) 200V series: Make an individual order for 220 to 230V/50Hz.

400V series: The inverters with the power supply of 380 to 398V/50Hz and 380 to 430V/60Hz must be switched with the connector inside the inverter. The output of the inverter with 380V may drop depending on situations. For the detail, refer to the FRENIC-VG User Manual 10.5.

*5) The auxiliary power input is used as an AC fan power input when combining the unit such as high power factor PWM converter with power regenerative function. (Generally not used.)

*6) Voltage unbalance [%] = (Max. voltage [V] - Min. voltage [V]) / Three-phase average voltage [V] × 67

Use the AC reactor if the voltage unbalance exceeds 2%.

*7) The value is calculated on assumption that the inverter is connected with a power supply capacity of 500kVA (or 10 times the inverter capacity if the inverter capacity exceeds 50kVA) and %X is 5%.

*8) This shows values when the DC reactor is used. (Optional for 55kW or less model)

*9) The inverter may automatically reduce carrier frequency in accordance with ambient temperature or output current in order to protect itself.

Standard Specifications

MD specification for middle duty spec

Three-phase 400V series

Type		FRN□VG1S-4J		90	110	132	160	200	220	280	315	355	400
Nominal applied motor [kW] (*7)				110	132	160	200	220	250	315	355	400	450
Rated capacity [kVA] (*1)				160	192	231	287	316	356	445	495	563	640
Rated current [A]				210	253	304	377	415	468	585	650	740	840
Overload current rating				150% of rated current -1min.									
Input power	Main power Phase, Voltage, Frequency			3-phase 380 to 440V/50Hz, 380 to 480V/60Hz (*2)									
	Auxiliary input for control power Phase, Voltage, Frequency			Single phase 380 to 480V, 50Hz/60Hz									
	Auxiliary input for fan power Phase, Voltage, Frequency (*3)			Single phase 380 to 440V/50Hz, 380 to 480V/60Hz (*2)									
	Voltage/frequency variation			Voltage: +10 to -15% (Voltage unbalance: 2% or less (*4)), Frequency: +5 to -5%									
	Rated current [A] (with DCR) (*5) (without DCR)			210	238	286	357	390	443	559	628	705	789
				—									
Required power supply capacity [kVA] (*6)				140	165	199	248	271	312	388	436	489	547
Braking method /braking torque				Braking resistor discharge control: 150% braking torque, Separately installed braking resistor (option)				Braking resistor discharge control: 150% braking torque, Separately installed braking resistor (option), Separately installed braking unit (option)					
Carrier frequency [kHz]				2									
Approx. weight [kg]				62	64	94	98	129	140	245	245	330	330
Enclosure				IP00 open type (IP20 closed type is available as option)									

Note 1) The specifications above are established when the function code F80 = 3 (MD specification) is applied. When used with the MD specification with 90kW or more, the DC Reactor is provided as standard.

*1) Inverter output capacity [kVA] at 440V.

*2) The inverters with the power supply of 380 to 398V/50Hz and 380 to 430V/60Hz must be switched with the connector inside the inverter.

*3) The auxiliary power input is used as an AC fan power input when combining the unit such as high power factor PWM converter with power regenerative function. (Generally not used.)

*4) Voltage unbalance [%] = (Max. voltage [V] - Min. voltage [V])/Three-phase average voltage [V] × 67

Use the AC reactor if the voltage unbalance exceeds 2%.

*5) The value is calculated on assumption that the inverter is connected with a power supply capacity of 10 times the inverter capacity and %X is 5%.

*6) This shows values when the DC reactor is used.

*7) Since heat generation of the motor due to low carrier may be increased depending on the load condition, designate the MD specification when ordering the motor.



LD specification for low duty spec

Three-phase 200V series

Type		FRN□VG1S-2J	30	37	45	55	75	90
Nominal applied motor [kW]			37	45	55	75	90	110
Rated capacity [kVA] (*1)			55	68	81	107	131	158
Rated current [A]			146	180	215	283	346	415
Overload current rating			120% of rated current -1min.					
Input power	Main power Phase, Voltage, Frequency		3-phase 200 to 220V/50Hz, 200 to 230V/60Hz (*2)					
	Auxiliary input for control power Phase, Voltage, Frequency		Single phase 200 to 230V, 50Hz/60Hz					
	Auxiliary input for fan power Phase, Voltage, Frequency (*3)		—	Single phase 200 to 220V/50Hz, 200 to 230V/60Hz (*2)				
	Voltage/frequency variation		Voltage: +10 to -15% (Voltage unbalance: 2% or less (*4)), Frequency: +5 to -5%					
	Rated current [A] (with DCR) (*5)		138	167	203	282	334	410
	(without DCR)		185	225	270	—	—	—
	Required power supply capacity [kVA] (*6)		48	58	71	98	116	143
Braking method /braking torque			Braking resistor discharge control: 110% braking torque, Separately installed braking resistor (option), Separately installed braking unit (option for FRN75VG1S-2J or higher)					
Carrier frequency [kHz] (*7)			2 to 10				2 to 5	
Approx. weight [kg]			25	32	42	43	62	105
Enclosure			IP00 open type (IP20 closed type is available as option)					

Three-phase 400V series

Type		FRN□VG1S-4J		30	37	45	55	75	90	110	132	160	200	220	280	315	355	400	500	630
Nominal applied motor [kW]				37	45	55	75	90	110	132	160	200	220	280	355	400	450	500	630	710
Rated capacity [kVA] (*1)				57	69	85	114	134	160	192	231	287	316	396	495	563	640	731	891	1044
Rated current [A]				75	91	112	150	176	210	253	304	377	415	520	650	740	840	960	1170	1370
Overload current rating				120% of rated current -1min.																
Input power	Main power Phase, Voltage, Frequency	3-phase 380 to 480V, 50Hz/60Hz						3-phase 380 to 440V/50Hz, 380 to 480V/60Hz (*2)												
	Auxiliary input for control power Phase, Voltage, Frequency	Single phase 380 to 480V, 50Hz/60Hz																		
	Auxiliary input for fan power Phase, Voltage, Frequency (*3)	—						Single phase 380 to 440V/50Hz, 380 to 480V/60Hz (*2)												
	Voltage/frequency variation	Voltage: +10 to -15% (Voltage unbalance: 2% or less (*4)), Frequency: +5 to -5%																		
	Rated current [A] (with DCR) (*5)	68.5	83.2	102	138	164	210	238	286	357	390	500	628	705	789	881	1115	1256		
	(without DCR)	94.3	114	140	—	—	—	—	—	—	—	—	—	—	—	—	—	—		
Required power supply capacity [kVA] (*6)				48	58	71	96	114	140	165	199	248	271	347	436	489	547	611	773	871
Braking method /braking torque				Braking resistor discharge control: 110% braking torque, Separately installed braking resistor (option), Separately installed braking unit (option for FRN200VG1S-4J or higher)																
Carrier frequency [kHz] (*7)				2 to 10						2 to 5						2				
Approx. weight [kg]				25	26	31	33	42	62	64	94	98	129	140	245	245	330	330	555	555
Enclosure				IP00 open type (IP20 closed type is available as option)																

Note 1) The specifications above are established when the function code F80 = 1 (LD specification) is applied. When used with the LD specification with 55kW or more, the DC Reactor is provided as standard.

*1) The rated output voltage is 220V for 200V series and 440V for 400V series.

*2) 200V series: Make an individual order for 220 to 230V/50Hz.

400V series: When the input voltage is 380 to 398V/50Hz or 380 to 430V/60Hz, the connector inside the inverter must be switched.

*3) The auxiliary power input is used as an AC fan power input when combining the unit such as high power factor PWM converter with power regenerative function. (Generally not used.)

*4) Voltage unbalance [%] = (Max. voltage [V] - Min. voltage [V])/Three-phase average voltage [V] × 67

Use the AC reactor if the voltage unbalance exceeds 2%.

*5) The value is calculated on assumption that the inverter is connected with a power supply capacity of 500kVA (or 10 times the inverter capacity if the inverter capacity exceeds 50kVA) and %X is 5%.

*6) This shows values when the DC reactor is used. (Optional for FRN45VG1S-2J and FRN45VG1S-4J or lower model)

*7) The inverter may automatically reduce carrier frequency in accordance with ambient temperature or output current in order to protect itself.

Common Specifications

Common specifications for inverters

Item			Specifications
Control	Motor control method	For induction motor	Vector control w/ speed sensor Speed sensorless vector control V/f control
		For synchronous motor	Vector control w/ speed sensor (including magnetic pole position detection)
		Test mode	Simulated operation mode
Induction motor control	Vector control w/ speed sensor	Setting resolution	Speed setting Analog setting: $\pm 0.005\%$ of max. speed Digital setting: $\pm 0.005\%$ of max. speed
			Torque setting Torque current setting 0.01% of rated torque
		Control accuracy	Speed Analog setting: $\pm 0.1\%$ of max. speed ($25 \pm 10^\circ\text{C}$) Digital setting: $\pm 0.005\%$ of max. speed (-10 to 50°C)
			Torque $\pm 3\%$ of rated torque (w/ dedicated motor)
		Control response	Speed 600Hz *1
		Maximum speed	800Hz by inverter output frequency conversion *1
		Speed control range	1:1500 When the base speed is 1500 r/min, 1 to 1500 r/min to max. speed (w/ no. of PG pulses is 1024P/R) 1:6 (constant torque range: constant output range)
Induction motor control	Speed sensorless vector control	Setting resolution	Speed setting Analog setting: $\pm 0.005\%$ of max. speed Digital setting: $\pm 0.005\%$ of max. speed
			Torque setting Torque current setting 0.01% of rated torque
		Control accuracy	Speed Analog setting: $\pm 0.1\%$ of max. speed ($25 \pm 10^\circ\text{C}$) Digital setting: $\pm 0.1\%$ of max. speed (-10 to 50°C)
			Torque $\pm 5\%$ of rated torque
		Control response	Speed 40Hz *1
		Maximum speed	500Hz by inverter output frequency conversion *1
		Speed control range	1:250 When the base speed is 1500 r/min, 6 to 1500 r/min to max. speed 1:4 (constant torque range: constant output range)
	V/f control	Setting resolution	Analog setting: $\pm 0.005\%$ of max. speed Digital setting: $\pm 0.005\%$ of max. speed
		Output frequency control accuracy	Analog setting: $\pm 0.2\%$ of max. output frequency ($25 \pm 10^\circ\text{C}$) Digital setting: $\pm 0.01\%$ of max. output frequency (-10 to 50°C)
		Maximum frequency	500Hz
		Control range	0.2 to 500Hz 1:4 (constant torque range: constant output range)
Synchronous motor control	Vector control w/ speed sensor	Setting resolution	Speed setting Analog setting: $\pm 0.005\%$ of max. speed Digital setting: $\pm 0.005\%$ of max. speed
			Torque setting 0.01% of rated torque
		Control accuracy	Speed Analog setting: $\pm 0.1\%$ of max. speed ($25 \pm 10^\circ\text{C}$) Digital setting: $\pm 0.005\%$ of max. speed (-10 to 50°C)
			Torque $\pm 3\%$ of rated torque (w/ dedicated motor)
		Response control	Speed 600Hz *1
		Maximum speed	800Hz by inverter output frequency conversion *1

*1: Maximum value. This value may not be reached depending on the carrier frequency settings.



Item			Specifications
Synchronous motor control	Vector control w/ speed sensor	Speed control range	1:1500 (w/ no. of PG pulses is 1024P/R) When the base speed is 1500 r/min, 1 to 1500 r/min to max. speed
Control	Running and operation		KEYPAD operation: CW or CCW operation by or key, and key Digital input signal operation: FWD or REV command, coast-to-stop command, reset input, multistep speed selection command, etc.
	Speed setting		KEYPAD operation: or key External potentiometer: three terminals, 1 to 5kΩ Analog input: 0 to ±10V, 4-20mA UP/DOWN control: Speed increases when UP signal (DI) is ON, and decreases when DOWN signal (DI) is ON. Multistep speed: Up to 15 different speeds can be selected by combining four external input signals (DI). Serial link operation: RS-485 (standard). Setting through different communication options is possible. Jogging operation: or key, or FWD or REV terminals in jogging mode
	Speed detection		Induction motor: +15V, +12V complimentary output PG (insulated) / max. receivable frequency: 100kHz +5V line driver output PG (insulated): w/ option card OPC-VG1-PG installed / max. receivable frequency: 500kHz Synchronous motor: +5V line driver output PG (insulated) <ABS type> W/ option card OPC-VG1-PMPG installed / max. receivable frequency: 100kHz <ABZ type> W/ option card OPC-VG1-PG installed / max. receivable frequency: 500kHz : ABS encoder with 17-bit high resolution (TS5667N253: made by Tamagawa Seiki) Servomotor serial PG TS5667N253 (made by Tamagawa Seiki, 17bit/turn and 16bit/multi-turns), w/ option card OPC-VG1-SPGT installed
	Speed control		The PI calculation w/ feed forward term is performed. Control invariable selection The control invariable can be selected by external signals.
	Running status signal		Transistor output: Inverter running, Speed equivalence, Speed detection, inverter overload early warning, torque limiting, etc. Analog output: Motor speed, Output voltage, Torque, Load factor, etc.
	Acceleration/Deceleration time		0.01 to 3600s (4 independent settings for acceleration and deceleration selectable with external signals) (S-curve acceleration/deceleration in addition to linear acceleration/deceleration)
	Gain for speed setting		Sets the proportional relationship between analog speed setting and motor speed in the range of 0 to 200%.
	Jump speed		Jump speed (3 points) and jump hysteresis width (1 point) can be set.
	Rotating motor pick up (Flying start)		A rotating motor can be smoothly picked up by the inverter without stopping.
	Auto-restart after momentary power failure		Automatic restart is available without stopping the motor after a momentary power failure.
	Slip compensation		Compensates for the decrease of speed due to load and realizes stable operation (by V/f control w/ induction motor).
	Droop control		The motor speed droops in proportion to output torque (disabled with V/f control).
	Torque limiting		Limits the torque to predetermined values (selectable from "common to 4 quadrants", "independent driving and braking", etc.) Analog and external signal (2 steps) settings are available.
	Torque control		Analog setting: 0 to ±10V / 0 to ±150% (up to 300% by gain adjustment)
	PID control		Analog input by PID control is possible.
	Cooling fan ON/OFF control		Cooling fan is stopped during motor stoppage and low temperature to elongate the cooling fan life and reduce cooling fan noise.
	Toggle monitor control		Monitors the communications between the host device (PLC) and the inverter are functioned in a proper condition.

Common Specifications

Item			Specifications
Control	Torque bias		Internal setting (3 steps) and analog setting (hold function) are enabled by combining the fixed value (1 step, polarity switching by motor rotation direction function) and eternal signal (DI signal).
	Motor selection		Motor can be selected from three types by using (F79) or by combining the eternal signal (DI signal).
	Temperature detection		NTC thermister (Fuji Electric product or equivalent item) PTC thermister (trip level set by parameter) (for motor overheat protection)
	PG detection circuit self diagnosis		Self-diagnosis for detection circuit of the pulse encoder input signal (PA, PB)
	Load adaptive control function		Running efficiency of the unit can be improved by calculating the max. elevation speed achieved by the weight for a vertical transfer unit or other similar units.
	Multiple winding motor drive		Option: OPC-VG1-TBSI
	Reactor connection drive		Only for PG vector control and sensorless vector control
	UP/DOWN control		Speed setting is possible by combining the UP command, DOWN command, and zero clear command using the external signal (DI signal).
	Stopping function		3 types of stopping functions: STOP 1, 2 and 3.
	PG pulse output		Outputs the input pulse such as a motor PG signal by fixed or free frequency dividing. Open collector and complimentary (same voltage as PGP terminal) can be switched by setting the unit internal switch.
	Observer		Suppresses load disturbances and vibrations.
	Off-line tuning		Rotary type and non-rotary type are available for tuning the motor constant.
	On-line tuning		Used as a motor constant for compensating the temperature change.
	Position control		Standard function: position control by servo lock and built-in transmitting circuit. Options: OPC-VG1-PG (PR) : for line driver type pulse command input OPC-VG1-PGo (PR) : for open collector type pulse command input OPC-VG1-SPPG (PR): ABS encoder with 17-bit high resolution
	Pulse train synchronous operation		Options: OPC-VG1-PG (PR) : for line driver type pulse command input OPC-VG1-PGo (PR) : for open collector type pulse command input
Display and setting	KEYPAD	Display	7-segment LED, LCD w/ backlight
		Language display	Japanese, English, Chinese, Korean (French, Spanish, German, and Italy *1)
		Running/stopping	<div>• Detected speed value</div> <div>• Torque reference value</div> <div>• Output voltage</div> <div>• Load shaft speed</div> <div>• Ai adjusted value (12)</div> <div>• Presence of digital input/output signal</div> <div>• Load factor</div> <div>• Motor accumulated operation time/no. of starts (for each motor), etc.</div> <div>• Speed reference value</div> <div>• Torque calculation value</div> <div>• DC link circuit voltage</div> <div>• PID reference value</div> <div>• Ai adjusted value (Ai1)</div> <div>• Input power</div> <div>• Output frequency</div> <div>• Power consumption (motor output)</div> <div>• Magnetic-flux reference value</div> <div>• PID feedback value</div> <div>• Ai adjusted value (Ai2)</div> <div>• Motor temperature</div> <div>• Integral power consumption</div> <div>• Torque current reference value</div> <div>• Output current</div> <div>• Magnetic-flux calculation value</div> <div>• PID output value</div> <div>• Optional monitor 1 to 6</div> <div>• Heat sink temperature</div> <div>• Operation time</div>
		Setting mode	Names and data are displayed.
		Alarm mode	<div>Displays the following alarm codes;</div> <div>•dbH (Braking resistance overheat)</div> <div>•Er1 (Memory error)</div> <div>•Er4 (Network error)</div> <div>•Er8 (A/D converter error)</div> <div>•Lin (Input phase loss)</div> <div>•OH1 (Overheating at heat sink)</div> <div>•OL1 (Motor 1 overload)</div> <div>•OLU (Inverter unit overload)</div> <div>•PbF (Charging circuit error)</div> <div>•Err (Simulated fault)</div> <div>•dCF (DC fuse blown)</div> <div>•Er2 (KEYPAD panel communication error)</div> <div>•Er5 (RS-485 error)</div> <div>•Er9 (Speed disagreement)</div> <div>•LU (Undervoltage)</div> <div>•OH2 (External alarm input)</div> <div>•OL2 (Motor 2 overload)</div> <div>•OS (Overspeed)</div> <div>•dO (Excessive position deviation)</div> <div>•OPL (Output phase loss detection)</div> <div>•dCF (DC fuse blown)</div> <div>•EF (Ground fault)</div> <div>•Er3 (CPU error)</div> <div>•Er6 (Operation procedure error)</div> <div>•Erb (Inter-inverter communication error)</div> <div>•nrh (NTC thermistor disconnection)</div> <div>•OH3 (Inverter internal overheat)</div> <div>•OL3 (Motor 3 overload)</div> <div>•OU (Overvoltage)</div> <div>•dbA (Braking transistor abnormal)</div> <div>•dFA (DC fan lock)</div> <div>•EF (Ground fault)</div> <div>•Er3 (CPU error)</div> <div>•Er7 (Output wiring error)</div> <div>•Erb (Inter-inverter communication error)</div> <div>•OC (Overcurrent)</div> <div>•OH4 (Motor overheat)</div> <div>•P9 (PG error)</div> <div>•EC(Encoder communications error)</div> <div>•Et1(Encoder error)</div> <div>•ErH(Hardware error)</div>
		Minor fault	[L-AL] is displayed. Stores and displays the detailed cause that triggers the minor fault.
		Alarm during running	<div>The latest and last ten pieces of alarm codes and the latest and the last three pieces of alarm detailed data are stored.</div> <div>Stores and displays alarm date and time by the calendar and time display function [accuracy: ±27 sec/month (Ta-25°C)].</div> <div>Data stored period: 5 years or more (at ambient temperature 25°C)</div> <div>* Battery: built-in as standard for 30kW or higher models, available as option for up to 22kW models</div>

*1: Soon to be supported.



Item			Specifications
Display and setting	Loader	Historical trace	Loads sampling data retained in the inverter to display with a graph. Sampling time: 50 μ s to 1s
		Real-time trace	Loads data from the inverter on a real-time basis to display with a graph. Sampling time: 1ms to 1s
		Trace back	Loads sampling data retained in the inverter at an alarm to display with a graph. Sampling time: 50 μ s to 1s (Note that sampling is enabled at 400 μ s or more except current.) Sampling data are stored into the memory using the battery power. Data stored period: 5 years or more (at ambient temperature 25°C) * Battery: built-in as standard for 30kW or higher models, available as option for up to 22kW models
		Operation monitor	I/O monitor, system monitor, alarm history monitor
		Function code setting	Function code setting states can be checked. Also edit, transfer, comparison, initialization are available.
	Charge lamp		Lit when the power is being supplied to the inverter body. Lit only with control power.
Maintenance	Main circuit capacitor life		Auto life judgment function installed
	Common functions		<ul style="list-style-type: none"> Displays and records accumulated time for capacitor life and cooling fan operation time in the control power. Displays and records inverter operation time. Displays and records the maximum output current and the maximum internal temperature for the past one hour.
Communications	RS-485		This is a input terminal to connect computers and programmable controllers via RS-485 communications.
	USB		USB connector (Mini B type) for connection with a computer. The following operations are enabled using the inverter support loader: function code edit, transfer verification, inverter test run, and monitoring various states.
Compatibility with earlier models	VG7	Function code data	Set the VG7 function codes to activate each operation of the code (excluding the function codes for the VG7 third motor). Values read from the VG7 can be written to the FRENIC-VG without changing them by using the PC loader (except some special items).
		Communications	T-Link, SX bus, and CC-Link are fully compatible. (The host PLC software can be used without any change.) (Except some special items)
	Adaptor		An adaptor to fit the installation dimensions of earlier models is available as option.
Safety function	Standard function	Stopping function	Safe Torque Off (STO) <ul style="list-style-type: none"> Stops the inverter output transistor with the hardware and cut the torque output of the motor immediately with a digital input signal (EN1 terminal or EN2 terminal) OFF which is externally input.
Product standard	Conformance to standard		US and Canada Safety Standard UL, cUL (UL508C, C22.2 No.14) (Certification being approved) European Safety Standard EN61800-5-2: SIL2 (Certification being approved) EN62061: SIL2 (Certification being approved) Machinery Directive EN ISO13849-1: PL-d (Certification being approved) EN60204-1: stop category 0 (Certification being approved) Low Voltage Directive EN61800-5-1: over voltage category 3 (Certification being approved) EMC Directive EN61800-3 (Certification being approved), EN61326-3-1 (Certification being approved) (Emission) EMC filter built-in type: category C3 EMC filter (option): category C2 (Immunity) 2nd Env.
Installation environment	Usage environment		Indoor use only. Free from corrosive and flammable gases, dusts, and oil mist (pollution degree 2 - IEC60664-1). No direct sunlight.
	Ambient temperature		-10 to +50°C (-10 to +40°C for the unit with 22 kW or less, with closely installed in lateral arrangement)
	Ambient humidity		5 to 95% RH (No dew condensation allowed)
	Altitude		1000m or less
	Vibration		200V 55kW or less, 400V 75kW or less 200V 75kW or more, 400V 90kW or more 3mm: 2 to 9Hz or less, 9.8m/s ² : 9 to 20Hz or less, 3mm: 2 to 9Hz or less, 2m/s ² : 9 to 55Hz or less, 2m/s ² : 20 to 55Hz or less, 1m/s ² : 55 to 200Hz or less 1m/s ² : 55 to 200Hz or less
	Storage temperature		-25 to +70°C
	Storage humidity		5 to 95% RH (No dew condensation allowed)

Protective functions

Protective function details

Function	Item	Description	LED	
Protective function	Braking transistor error	Stops the inverter by detecting a braking transistor abnormality (only with the models to which the braking circuit is installed.) Be sure to shut off the inverter primary power when this alarm is detected.	<i>dbA</i>	H103
	Braking resistor overheat	Stops the inverter when the allowable value is exceeded by estimating the braking resistor temperature. Setting E35 to 37 is required depending on the used resistor.	<i>dbH</i>	E35~E37
	DC fuse blown	This is displayed by fusing at the main circuit DC part caused by short-circuit in the IGBT circuit or other similar reason. This function is provided to prevent the secondary accident. Since inverter damage may be suspected, contact Fuji immediately. (200V 75kW or more, 400V 90kW or more)	<i>dCF</i>	
	Excessive position deviation	Activated when the position deviation between the reference and the detected values exceeds the ten times of the function code o18 "Excessive deviation value" in synchronized operation.	<i>dD</i>	o18
	Encoder communications error	Activated when an encoder communications error is detected by using the ABS encoder with 17-bit high resolution (option card OPC-VG1-SPGT).	<i>EC</i>	
	Ground fault	Activated by a ground fault in the inverter output circuit. When a ground-fault current is large, the overcurrent protective function may be activated. This function is provided to protect the inverter. Connect a separate earth-leakage protective relay or an earth-leakage circuit breaker for accident prevention such as human damage and fire.	<i>EF</i>	H103
	Memory error	Activated when a fault such as "write error" occurs in the memory. [The number of times to write into the memory (nonvolatile memory) is limited (100,000 to 1,000,000 times). If data are written frequently with the all save function needlessly, data change and data save may be disabled, resulting in memory error.]	<i>Er 1</i>	
	KEYPAD communications error	Activated if a communications error is detected between the inverter control circuit and the KEYPAD when the start/stop command from the KEYPAD is valid (function code F02=0). NOTE: KEYPAD communications error does not indicate the alarm display and issue the alarm relay output when the inverter is operated by external signal input or the link function. The inverter continues operating.	<i>Er 2</i>	F02
	CPU error	Activated when a CPU error occurs.	<i>Er 3</i>	
	Network error	Activated if a communications error occurs due to noise when the inverter is operated through T-Link, SX bus or CC-Link. Activated also if a communications error is detected by the toggle monitoring function.	<i>Er 4</i>	o30,o31,H107 E01~E14 E15~E28
	RS-485 communications error	Activated if an RS-485 communications error occurs when the function code H32 is set to 0 to 2 during inverter running using RS-485 communications. The function code H38 is set between 0.1 and 60.0. This function is activated if the communications circuit is disconnected exceeding the set time.	<i>Er 5</i>	H32,H33 H36,H107
	Operation procedure error	This function is activated under the following conditions: If several pieces of network option cards (T-Link, SX bus, CC-Link, etc.) are installed. If the same setting is made to both of the switches to select the usage method though the multiple PG options can be installed. If auto tuning for H01 is started with any of the digital inputs [BX], [STOP1], [STOP2], and [STP3] turned on. If the FWD key on the KEYPAD is not pressed for 20 seconds or more after selecting the operation of auto tuning for H01.	<i>Er 6</i>	H01
	Output wiring error	Activated when the wires are not connected in the inverter output circuit at auto tuning.	<i>Er 7</i>	H01
	A/D converter error	Activated when an error occurs in the A/D converter circuit.	<i>Er 8</i>	
	Speed disagreement	Activated when the deviation between the speed reference (speed setting) and the motor speed (detected speed, predicted speed) becomes excessive. Detection level and detection time can be set using the function code.	<i>Er 9</i>	E43,E44,E45 H108
	Inter-inverter communications error	Activated if transmission error occurs during communications between inverters using the high-speed serial communications terminal block (option).	<i>Er b</i>	H107
	Simulated fault	A simulated alarm state can be generated by operating the KEYPAD or PC loader.	<i>Err</i>	H108,H142
	Encoder error	Activated when an encoder error or failure is detected by using the ABS encoder with 17-bit high resolution (option card OPC-VG1-SPGT).	<i>Et 1</i>	
	Input phase loss	The inverter is protected from being damaged due to input phase loss. Phase loss may not be detected when a load to be connected is light, or when the DC reactor is connected.	<i>L in</i>	E45
	Undervoltage	Activated if the DC link circuit voltage decreases to the undervoltage level due to a reduction in the supply voltage. The alarm output is not issued when the DC link circuit voltage decreases and the "function code F14" is set to "3 to 5". • Undervoltage detection level: 200V series: 180V DC, 400V series: 360V DC.	<i>LU</i>	F14



Function	Item	Description	LED	Related function code
Protective function	NTC thermistor disconnection	Activated if the thermistor circuit is disconnected when the application of NTC thermistors to corresponding motors (M1, 2, 3) is specified with the function codes P30, A31 and A131. Also activated with extreme low temperature (approx. -30°C or lower).	<i>nr b</i>	P30,A31,A131 H106
	Overcurrent	Cut the output if a current to the motor exceeds the inverter overcurrent specified value.	<i>OL</i>	
	Overheating at heat sink	Activated if the temperature of the heat sink to cool the rectifier diodes and the IGBTs increases due to cooling fan stoppage.	<i>OH 1</i>	
	External alarm	The inverter stops on receiving the external alarm signal (THR). It is activated by a terminal signal when the control circuit terminals (THR assignment) are connected to alarm terminals of external devices such as a braking unit or a braking resistor.	<i>OH2</i>	E01 to E14 H106
	Inverter internal overheat	Activated if the ambient temperature of the control PC board increases due to poor ventilation of the inverter.	<i>OH3</i>	
	Motor overheat	Activated if the detected temperature of the built-in NTC thermistor for motor temperature detection exceeds the data of the "function code E30 Motor overheat protection".	<i>OH4</i>	E30,H106
	Motor 1 overload	Activated when the motor 1 current (inverter output current) exceeds the operation level set by "function code F11".	<i>OL 1</i>	F11,H106
	Motor 2 overload	Activated when the motor 2 current (inverter output current) exceeds the operation level set by "function code A33".	<i>OL 2</i>	A33,H106
	Motor 3 overload	Activated when the motor 3 current (inverter output current) exceeds the operation level set by "function code A133".	<i>OL 3</i>	A133,H106
	Inverter unit overload	Activated if the output current exceeds the overload characteristic of the inverse time characteristic. The inverter is stopped according to the temperatures of the inverter cooling unit and of the switching element that is calculated from the output current.	<i>OLU</i>	F80
	Output phase detection	Stops the inverter by detecting a phase loss of the output wiring in operation.	<i>OP L</i>	H103
	Overspeed	Activated if the motor speed (detected speed value/predicted speed value) exceeds 120% (can be changed with H90) of the specified value by the function code "maximum speed".	<i>OS</i>	H90
	Overvoltage	Activated if the DC link circuit voltage exceeds the overvoltage level due to an increase of supply voltage or regenerative braking current from the motor. However, the inverter cannot be protected from excessive voltage (high voltage, for example) supplied by mistake. • Overvoltage detection level 200V series: 405V DC, 400V series: 820V DC	<i>OU</i>	
	PG error	Activated when the encoder terminal PA/PB circuits are disconnected. It is not activated when the sensorless control or the V/f control is selected.	<i>PG</i>	H104
	Charging circuit error	Activated if the bypass circuit of the DC link circuit is not formed (the magnetic contactor for the charging circuit bypass is not closed) after power is supplied. (200V 37kW or more, 400V 75kW or more)	<i>PbF</i>	
	DC fan lock	Activated when the DC fan is stopped. (200V 45kW or more, 400V 75kW or more)	<i>dFA</i>	H108
	Hardware error	Stops the inverter by detecting the LSI error on the PCB.	<i>ErH</i>	
	Minor fault (warning)	When an alarm and warning content registered as a minor fault occur, the minor fault indication [<i>L-RL</i>] is displayed on the KEYPAD. For a minor fault, the minor fault output (Y terminal) is output. However, alarm relay output (30ABC) is not output and the inverter continues operating. Items to be set (can be selected individually): Motor overheat (<i>OH4</i>), motor overload (<i>OL 1-OL 3</i>), NTC thermistor disconnection (<i>nr b</i>), external alarm (<i>OH2</i>), RS-485 communications(<i>ErS</i>), option communications error (<i>Er4</i>), inverter link error (<i>Er b</i>), simulated fault (<i>Er r</i>), DC fan lock detection (<i>dFA</i>), speed disagreement (<i>Er 9</i>), motor overheat early warning, motor overload early warning, lifetime alarm, fan overheat early warning, overheating at heat sink, inverter overload early warning, battery life The cause for each minor fault can be checked on the KEYPAD.	<i>L-RL</i>	H106 to H108 H110,H111
	Surge protection	Protects the inverter from surge voltage coming from the power source using the surge absorber which is connected to the main circuit power source terminal (L1/R, L2/S, L3/T) and the control power source terminal (Ro, To) circuit.	—	
	Main power off detection	Monitors the inverter AC input power to judge if the AC input power (main power) is established or not. If not, whether the inverter is to be operated or not can be selected. (When the power is supplied via PWM converter or DC bus connection, do not change the setting of the function code H76 as no AC input exists.)	—	H76





NOTES:

- All protective functions are reset automatically if the control power voltage decreases to where maintaining the operation of the inverter control circuit is impossible.
- The latest and last ten pieces of alarm codes and the latest and the last three pieces of alarm detailed data are stored.
- Stoppage due to a protective function can be reset by the RST key of the KEYPAD or turning OFF and then ON between the X terminal (RST assigning) and the CM. This action is invalid if the cause of an alarm is not found and resolved.(The cause of the alarm that has not been released can be checked on the KEYPAD.)
- The alarm may not be output when allocated to minor faults.

External Dimensions


External Dimensions

Inverter body

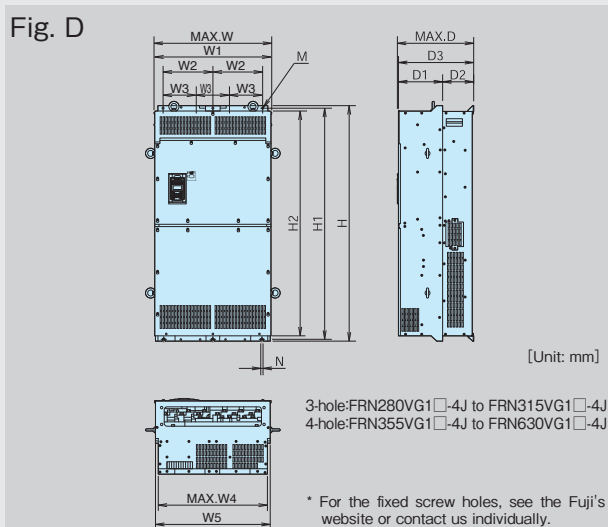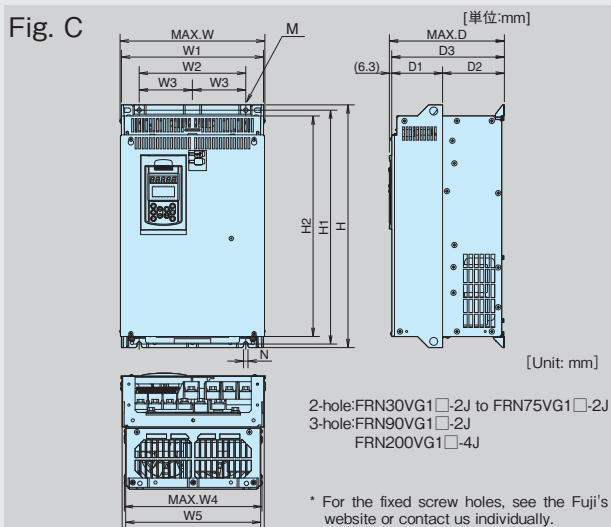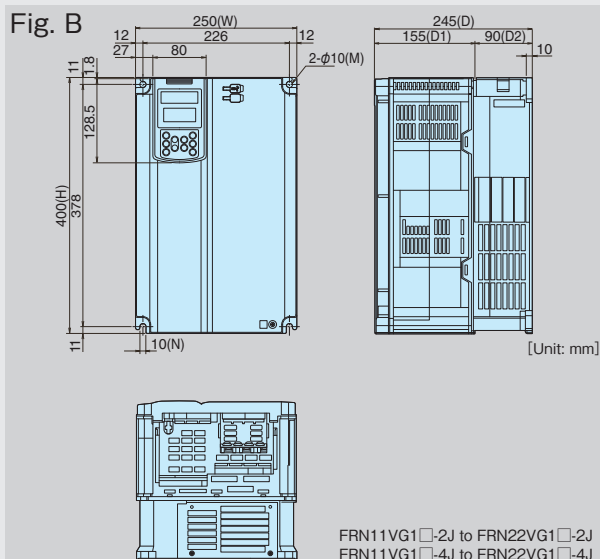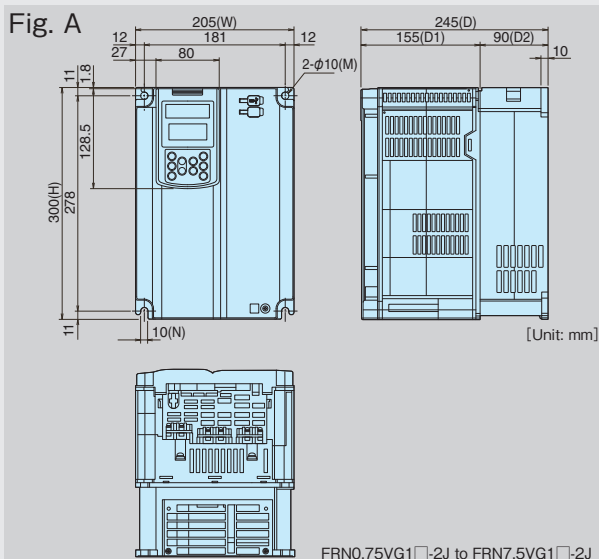

For individual external diagrams, refer to the Fuji's site. (<http://www.fujielectric.co.jp/products/inverter/download/>)

KEYPAD

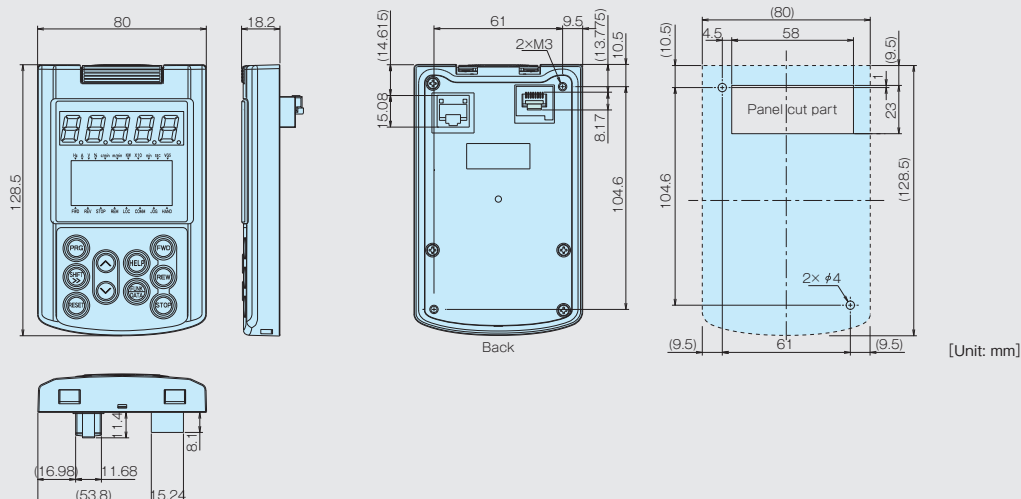



External Dimensions

(Unit: mm)

Series	Inverter type	☒	Body external dimensions																												
			W	W1	W2	W3	W4	W5	H	H1	H2	D	D1	D2	D3	M	N														
3-phase 200V	FRN0.75VG1□-2J	A	205	-	-	-	-	300	-	-	245	155	90	-	2Xφ10	10															
	FRN1.5VG1□-2J	A																													
	FRN2.2VG1□-2J	A																													
	FRN3.7VG1□-2J	A																													
	FRN5.5VG1□-2J	A																													
	FRN7.5VG1□-2J	A																													
	FRN11VG1□-2J	B	250					-	-	-	400	-	-	245			155	90	-												
	FRN15VG1□-2J	B																													
	FRN18.5VG1□-2J	B																													
	FRN22VG1□-2J	B																													
	FRN30VG1□-2J	C																		326.2	320	240	310.2	304	550	530	500	261.3	115	140	255
	FRN37VG1□-2J	C																		361.2	355	275	345.2	339	615	595	565	276.3		155	270
	FRN45VG1□-2J	C																													
	FRN55VG1□-2J	C	535.8	530	430	506.4	500.6	750	688.7	291.3	145	140	285	2Xφ15	15																
FRN75VG1□-2J	C	686.4	680	-	290	656.4	650.6	880	850	819.5	366.3	180	180	360		3Xφ15															
3-phase 400V	FRN3.7VG1□-4J	A	205	-	-	-	-	300	-	-	245	155	90	-	2Xφ10	10															
	FRN5.5VG1□-4J	A																													
	FRN7.5VG1□-4J	A																													
	FRN11VG1□-4J	B	250					-									-	-	-	-	245	155	90	-							
	FRN15VG1□-4J	B																													
	FRN18.5VG1□-4J	B																													
	FRN22VG1□-4J	B	326.2					320									240	-	310.2	304	550	530	500	261.3	115	140	255				
	FRN30VG1□-4J	C																													
	FRN37VG1□-4J	C																													
	FRN45VG1□-4J	C																													
	FRN55VG1□-4J	C																													
	FRN75VG1□-4J	C																													
	FRN90VG1□-4J	C	361.2	355	275	345.2	339	615	595	565	276.3	155	270																		
	FRN110VG1□-4J	C																													
	FRN132VG1□-4J	C																													
	FRN160VG1□-4J	C																													
	FRN200VG1□-4J	C																													
	FRN220VG1□-4J	C																													
	FRN280VG1□-4J	D	536.4	530	430	506.4	500.6	740	710	678.7	321.3	135	180	315	2Xφ15	15															
	FRN315VG1□-4J	C																													
	FRN355VG1□-4J	C																													
	FRN400VG1□-4J	C																													
FRN500VG1□-4J	C																														
FRN630VG1□-4J	C																														
FRN220VG1□-4J	D	686.4	680	-	290	656.4	650.6	1000	970	939.5	366.3	180	360	3Xφ15																	
FRN280VG1□-4J	D																														
FRN315VG1□-4J	D																														
FRN355VG1□-4J	D																														
FRN400VG1□-4J	D																														
FRN500VG1□-4J	D																														
FRN630VG1□-4J	D	1006	1000	-	300	972	966	1550	1520	1480	505.9	313.2	186.8	500	4Xφ15																
FRN3.7VG1□-4J	D	886.4	880													260	859.1	853	1400	1370	1330	446.3	260	440							

Dedicated motor Specifications (Induction motor with sensor)

3-phase 200V series standard specification

Item		Specifications																
Dedicated motor rated output [kW]		0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	
Applicable motor type (MVK_)		8095A	8097A	8107A	8115A	8133A	8135A	8165A	8167A	8184A	8185A	8187A	8207A	8208A	9224A	9254A	9256A	
Moment of inertia of rotor [kg·m ²]		0.009	0.009	0.009	0.016	0.030	0.037	0.085	0.11	0.21	0.23	0.34	0.41	0.47	0.53	0.88	1.03	
Rotor GD ² [kgf·m ²]		0.036	0.036	0.036	0.065	0.12	0.15	0.34	0.47	0.83	0.92	1.34	1.65	1.87	2.12	3.52	4.12	
Base speed/Max. speed [r/min]		1500/3600										1500/3000			1500/2400		1500/2000	
Vibration		V10 or less													V15 or less			
Cooling fan	Voltage [V], frequency [Hz]	200 to 210V/50Hz, 200 to 230/60Hz													200V/50Hz, 200, 220V/60Hz			
	Number of phases/poles	Single phase, 4P						3-phase, 4P										
	Input power [W]	40/50						90/120		150/210					80/120		270/390	
	Current [A]	0.29/0.27 to 0.31						0.49/0.44 to 0.48		0.75/0.77 to 0.8					0.76/0.8.0.8		1.9/2.0, 2.0	
Approx. weight [kg]		28	29	32	46	63	73	111	133	190	197	235	280	296	380	510	570	

* Only MVK8095A (0.75kW) is of natural air cooling type.

3-phase 400V series standard specification

Item		Specifications																		
Dedicated motor rated output [kW]		3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	
Applicable motor type (MVK_)		8115A	8133A	8135A	8165A	8167A	8184A	8185A	8187A	8207A	8208A	9224A	9254A	9256A	9284A	9286A	528KA	528LA	531FA	
Moment of inertia of rotor [kg·m ²]		0.016	0.030	0.037	0.085	0.11	0.21	0.23	0.34	0.41	0.47	0.53	0.88	1.03	1.54	1.77	1.72	1.83	2.33	
Rotor GD ² [kgf·m ²]		0.065	0.12	0.15	0.34	0.47	0.83	0.92	1.34	1.65	1.87	2.12	3.52	4.12	6.16	7.08	6.88	7.32	9.32	
Base speed/Max. speed [r/min]		1500/3600							1500/3000			1500/2400		1500/2000						
Vibration		V10 or less										V15 or less								
Cooling fan	Voltage [V], frequency [Hz]	200 to 210V/50Hz, 200 to 230V/60Hz				400 to 420V/50Hz, 400 to 440V/60Hz						400V/50Hz, 400, 440V/60Hz								
	Number of phases/poles	Single phase, 4P				3-phase, 4P														
	Input power [W]	40/50				90/120		150/210				80/120	270/390				2200		3700	
	Current [A]	0.29/0.27 to 0.31				0.27/0.24 to 0.25		0.38/0.39 to 0.4				0.39/0.4, 0.4		1.0/1.0, 10				4.6/4.3, 4.1		7.8/7.1, 7.6
Approx. weight [kg]		46	63	73	111	133	190	197	235	280	296	380	510	570	710	760	1270	1310	1630	

3-phase 400V series standard specification

Item		Specifications					
Dedicated motor rated output [kW]		250	280	300	315	355	400
Applicable motor type (MVK_)		531GA	531HA	535GA	535HA	535JA	
Moment of inertia of rotor [kg·m ²]		2.52	2.76	5.99	5.99	6.53	7.18
Rotor GD ² [kgf·m ²]		10.08	11.04	23.96	23.96	26.12	28.72
Base speed/Max. speed [r/min]		1500/2000					
Vibration		V15 or less					
Cooling fan	Voltage [V], frequency [Hz]	400V/50Hz, 400, 440V/60Hz					
	Number of phases/poles	3-phase, 4P					
	Input power [W]	3700					
	Current [A]	7.8/7.1, 7.6					
Approx. weight [kg]		1685	1745	2230	2230	2310	2420

Common specifications

Item	Specifications
Insulation class/Number of poles	Class F/4P
Terminal design	Main terminal box (lug type): 3 or 6 main circuit terminals, NTC thermistor terminals = 2 (MVK8 series), 3 (MVK9 series, 1 is reserved) Auxiliary terminal box (terminal block): Pulse generator (PGP, PGM, PA, PB, SS), cooling fan (FU, FV or FU, FV, FW)
Mounting method	Foot mounted with bracket (IMB3), NOTE: Contact FUJI for other methods.
Degree of protection, Cooling method	IP44, Totally enclosed forced-ventilation system with cooling fan motor. A cooling fan blows air over the motor toward the drive-end. (* Only MVK8095A (0.75kW) is of natural air cooling type.)
Installation location	Indoor, 1000m or less in altitude.
Ambient temperature, humidity	-10 to +40°C, 90%RH or less (no condensation)
Finishing color	Munsell N5
Standard conformity	MVK8 series: JEM1466 or JEC-2137-2000, MVK9 series, MVK5 series: JEC-2137-2000
Standard accessories	Pulse generator (1024P/R, +15V, complementary output), NTC thermistors (1 or 2 units), cooling fan (except for MVK8095A).

(Note1) The torque accuracy is $\pm 5\%$ for applicable motors with 55kW or more. When further accuracy is required, contact Fuji.

(Note2) When a dedicated motor other than the motor with 4-pole and with base speed 1500r/min is necessary, inquire separately.

External dimensions of dedicated motors (Induction motor with sensor)



MVK

Fig. A


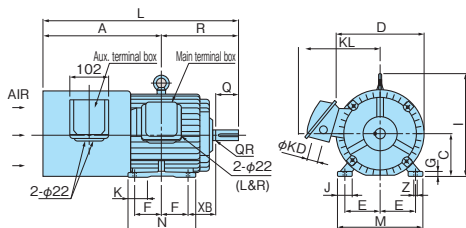


Fig. B

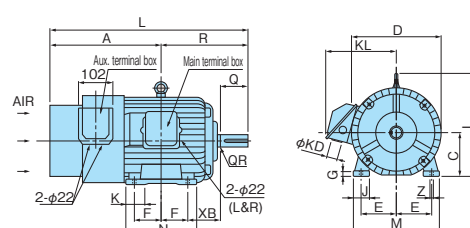

Shaft extension




Fig. C

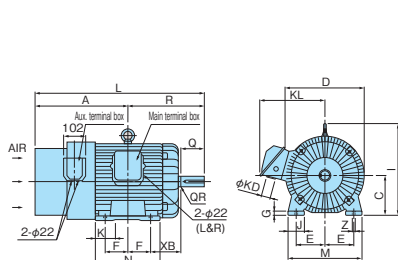


Fig. D


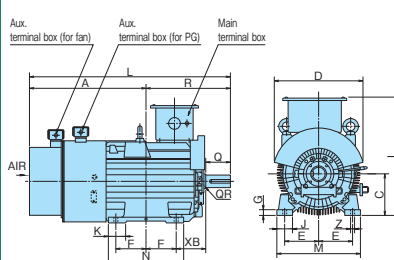


Fig. E

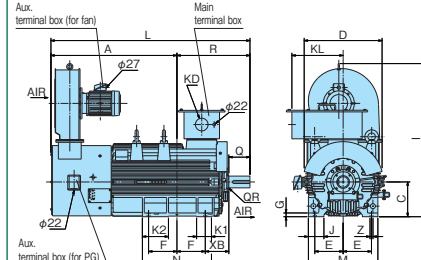

[Unit:mm]

Motor rated output [kW]	Motor type	Fig.	Dimensions																	Shaft extension							Approx. weight [kg]								
			A	C	D	E	F	G	I	J	K	K1	K2	KD	KL	L	M	N	R	XB	Z	Q	QR	S	T	U		W							
0.75	MVK8095A	A	201.5	90	204	70	62.5	10	195	35.5	35.5			27	189	370	170	150	168.5	56	10	50	0.5	24j6	7	4	8	28							
1.5	MVK8097A		277.5		203													446																	
2.2	MVK8107A		292	100		80		12.5	238		40				40	190	485	195	170	193	63	12		60	80	38k6	8	5	10	32					
3.7	MVK8115A		299	112	236	95	70	14	270						50		205	499	224	175	200			70											
5.5	MVK8113A	B	309	132	273	108	89	17	311	45		34	223	548	250	180	239	89	12	80	38k6	8	5	10	63										
7.5	MVK8135A		328																						586		212	258							
11	MVK8165A	A	400	160	321	127	105	18	376	50	63	-	-	48	272	723	300	250	323	108	14.5	110	1	42k6	8	5	12	111							
15	MVK8167A		422			127												767										300	345						
18.5	MVK8184A		435			120.5		20	428	75	75				305	786.5	350	292	351.5	121			14.5	110	1.5	48k6	9	5.5	14	190					
22	MVK8185A			180	376	139.5																													
30	MVK8187A		454			139.5						60		824.5		330	370.5					55m6	10	6	16	235									
37	MVK8207A	C	490	200	411	159	152.5	25	466	80	85			80	364	915.5	390	360	425.5	133	18.5	140	2	60m6	11	7	18	280							
45	MVK8208A																																		
55	MVK9224A		723	225	445	178	143		515		95				391	1155	436	366	432	149							65m6				380				
75	MVK9254A		693.5	250	545	203	155.5	30	743						106	1157	506	411	463.5		168							75m6	12	7.5	20	510			
90	MVK9256A	D	711.5			174.5				100	120			80	106	1194		449	483.5			24		2	75m6	12	7.5	20	570						
110	MVK9284A		764		605	184	35	798								203	1308	557	468	544															
132	MVK9286A		789.5			209.5										1359		519	569.5														760		
160	MVK528JA				280		228.5											102	413	1604	560				557	588.5	190	28	210	2	85m6		22	1230	
200	MVK528LA	1015.5		628	228.5	30	1234	125		120	210																								
220	MVK531FA													102	413												2						25	1690	
250	MVK531GA	1073	315	689	254	254		1425	150		140																							240	
280	MVK531HA	E																102	413											2				1820	
300	MVK535GA						36																												
315													180	330						1956	730	890	845	280		210					100m6	16	10	28	2310
355	MVK535HA		1111	355	778	305	355		1510	160																									
400	MVK535JA																																		

(Note 1) MVK8095A (0.75kW) is of natural cooling type (cooling system: IC410).

(Note 2) MVK8095A (0.75kW) has the cable lead-in hole of φ22 (in 1 place).

(Note 3) MVK9224A (55kW) has an auxiliary terminal box for fan shown in Fig. C.

(Note 4) Allowable tolerance of dimension: Height of rotary shaft C≤250mm..... $-\frac{0.5}{0.5}$ mm, C>250mm..... $-\frac{1.0}{1.0}$ mm

Dedicated motor Specifications (Synchronous motor with sensor)

3-phase 200V series standard specification

Item	Specifications											
Dedicated motor rated output [kW]	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90
Applicable motor type (GNF_)	2114A	2115A	2117A	2118A	2136A	2137A	2139A	2165A	2167A	2185A	2187A	2207A
Moment of inertia of rotor [kg·m ²]	0.018	0.021	0.027	0.036	0.065	0.070	0.090	0.153	0.191	0.350	0.467	0.805
Rotor GD ² [kgf·m ²]	0.072	0.084	0.107	0.143	0.259	0.281	0.360	0.610	0.763	1.401	1.868	3.220
Base speed/Max. speed [r/min]	1500/2000											
Rated current [A]	20/20	29/29	42/42	57/57	71/70	82/81	113/108	144/144	165/165	200/200	270/270	316/316
Vibration	V10 or less											
Cooling fan	Voltage [V], frequency [Hz]	200 to 240/50/60						200 to 210/50,200 to 230/60				
	Number of phases/poles	3-phase, 2P						3-phase, 4P				
	Input power [W]	38 to 44/56 to 58				54 to 58/70 to 78		90/120		150/210		
	Current [A]	0.13 to 0.16/0.18 to 0.16				0.18 to 0.18/0.22 to 0.21		0.49/0.44 to 0.48		0.75/0.77 to 0.8		
Approx. weight [kg]	51	55	69	78	100	106	127	170	192	247	325	420

3-phase 400V series standard specification

Item	Specifications											
Dedicated motor rated output [kW]	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90
Applicable motor type (GNF_)	2114A	2115A	2117A	2118A	2136A	2137A	2139A	2165A	2167A	2185A	2187A	2207A
Moment of inertia of rotor [kg·m ²]	0.018	0.021	0.027	0.036	0.065	0.070	0.090	0.153	0.191	0.350	0.467	0.805
Rotor GD ² [kgf·m ²]	0.072	0.084	0.107	0.143	0.259	0.281	0.360	0.610	0.763	1.401	1.868	3.220
Base speed/Max. speed [r/min]	1500/2000											
Rated current [A]	10/10	15/15	21/21	29/29	36/35	41/41	57/54	72/72	83/83	100/100	135/135	158/158
Vibration	V10 or less											
Cooling fan	Voltage [V], frequency [Hz]	200 to 240/50/60						400 to 420/50,400 to 440/60				
	Number of phases/poles	3-phase, 2P						3-phase, 4P				
	Input power [W]	38 to 44/56 to 58				54 to 58/70 to 78		90/120		150/210		
	Current [A]	0.13 to 0.16/0.18 to 0.16				0.18 to 0.18/0.22 to 0.21		0.27/0.24 to 0.25		0.38/0.39 to 0.4		
Approx. weight [kg]	51	55	69	78	100	106	127	170	192	247	325	420

3-phase 400V series standard specification

Item		Specifications							
Dedicated motor rated output [kW]		110	132	160	200	220	250	280	300
Applicable motor type (GNF_)		2224B	2226B	2254B	2256B	2284B	2284B	2286B	2286B
Moment of inertia of rotor [kg·m ²]		0.882	0.994	1.96	2.22	2.89		3.24	
Rotor GD ² [kgf·m ²]		3.53	3.98	7.84	8.88	11.6		13.0	
Base speed/Max. speed [r/min]		1500/2000							
Rated current [A]		198	232	273	340	369	420	480	520
Vibration		V10 or less							
Cooling fan	Voltage [V]	380,400,415/400,415,440,460							
	Number of phases/poles	3-phase, 4P							
	frequency [Hz]	50/60							
	Input power [W]	80/120			270/390				
	Current [A]	0.36,0.38,0.41/0.4,0.4,0.4,0.4			0.95,0.95,1/1,1,1,1				
Approx. weight [kg]		520	580	760	810	1020		1080	

Common specifications








Item	Specifications
Insulation class/Number of poles	Class F/6P
Terminal design	Main terminal box (lug type): 3 or 6 main circuit terminals NTC thermister terminals = 2 pcs(1 pc is a spare), 110kW or more
	Auxiliary terminal box (terminal block): cooling fan (FU, FV, FW)
	Pulse encoder (connector type), cooling fan (FU, FV, FW)
Rotation direction	CCW direction when viewed from operator
Mounting method	Legs mounted (IMB3) NOTE: Contact FUJI for other methods.
Overload resistance	150% 1min.
Time rating	S1
Degree of protection, Cooling method	IP44, Totally enclosed forced-ventilation system with cooling fan motor.A cooling fan blows air over the motor toward the drive-end.
Installation location	Indoor, 1000m or less in altitude.
Ambient temperature, humidity	-10 to +40°C, 90%RH or less (no condensation)
Noise	5.5kW to 90kW:80dB(A) or less at1m,110kW to 300kW:90dB(A) or less at1m
Vibration resistance	6.86m/s ² (0.7G)
Finishing color	Munsell N1.2
Standard conformity	JEM 1487:2005
Standard built-in part	Pulse encoder (1024P/R, DC+5V, A, B, Z, U, V, W line driver output), NTC thermister 1 pc (2 pcs for 110kW or more), cooling fan



External dimensions of dedicated motors (Synchronous motor with sensor)

GNF2

Shaft extension

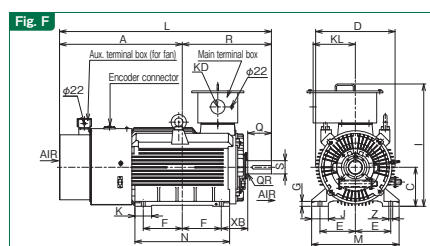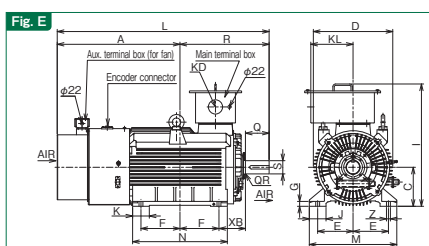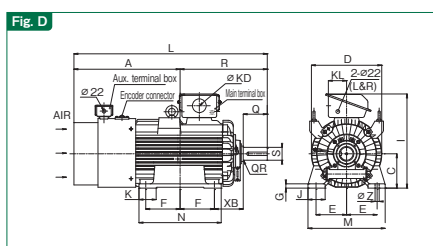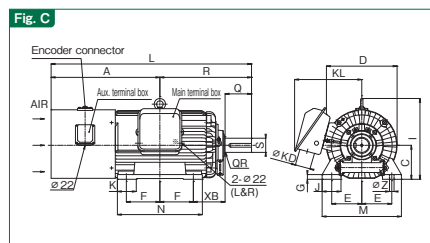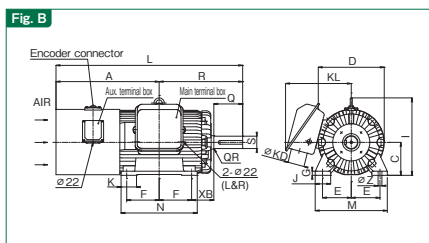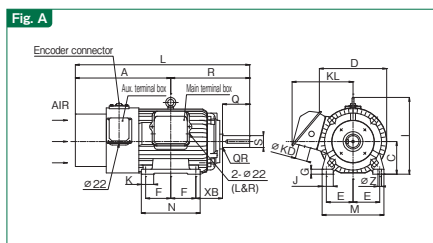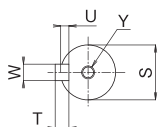

[Unit:mm]

Motor rated output [kW]	Motor type	Flame no.	Fig.	Dimensions																Shaft extension										Approx. weight [kg]
				A	C	D	E	F	G	I	J	K	KD	KL	L	M	N	R	XB	Z	Q	QR	S	T	U	W	Y			
5.5	GNF2114A	112Mh	A	335.5	112	235	95	70	14	270	40	50	34	200	555.5	224	175	220	70	12	80	0.5	38k6	8	5	10	M10x20	51		
7.5	GNF2115A			335.5	112	235	95	70	14	270	40	50	34	200	555.5	224	175	220	70	12	80	0.5	38k6	8	5	10	M10x20	55		
11	GNF2117A	112Jh	A	380.5	112	235	95	100	18	270	55	50	48	235	698.5	228	238	318	108	14.5	110	1	42k6	8	5	12	M10x20	69		
15	GNF2118A			380.5	112	235	95	100	18	270	55	50	48	235	698.5	228	238	318	108	14.5	110	1	42k6	8	5	12	M10x20	78		
18.5	GNF2136A	132Lh	A	386	132	272	108	101.5	20	311	45	50	48	247	705.5	250	238	319.5	108	14.5	110	1.5	48k6	9	5.5	14	M10x20	100		
22	GNF2137A			386	132	272	108	101.5	20	311	45	50	48	247	705.5	250	238	319.5	108	14.5	110	1.5	48k6	9	5.5	14	M10x20	106		
30	GNF2139A	132Hh	A	424.5	132	272	108	140	20	311	45	50	60	247	782.5	250	313	358	108	14.5	110	1.5	55m6	10	6	16	M10x20	127		
37	GNF2165A	160Lg	B	470.5	160	319	139.5	127	20	376	75	75	80	320	845.5	350	300	375	108	18.5	140	2	60m6	11	7	18	M12x25	170		
45	GNF2167A	160Jg		501	160	319	139.5	157.5	20	376	75	75	80	320	906.5	350	370	405.5	108	18.5	140	2	60m6	11	7	18	M12x25	192		
55	GNF2185A	180Lg	C	510	180	375	159	139.5	25	428	80	85	80	356	910.5	390	330	400.5	121	18.5	140	2	65m6	11	7	18	M12x25	247		
75	GNF2187A	180Jg		576	180	375	159	177.5	25	428	100	100	80	356	1061.5	420	450	485.5	168	24	140	2	75m6	12	7.5	20	M12x25	325		
90	GNF2207A	200Jg	D	618.5	200	410	178	200	25	549	100	100	80	107	1126.5	450	479	508	168	24	140	2	75m6	12	7.5	20	M12x25	420		
110	GNF2224B	225Kg		711	225	446	203	200	28	628	100	120	80	142	1249	506	526	538	168	24	170	1	85m6	14	9	22	M20x35	520		
132	GNF2226B	225Hg	E	761	225	446	203	250	28	628	100	120	80	142	1349	506	626	588	168	24	170	1	85m6	14	9	22	M20x35	580		
160	GNF2254B	250Hg		829	250	508	228.5	280	32	763	100	120	80	203	1469	557	677	640	190	24	170	1	95m6	14	9	25	M20x35	760		
200	GNF2256B	F	280Jf	829	250	505	228.5	280	32	763	100	120	80	203	1469	557	677	640	190	24	170	1	95m6	14	9	25	M20x35	810		
220	GNF2284B			881	280	570	254	280	35	878	120	120	102	303	1521	628	680	640	190	28	170	1	95m6	14	9	25	M20x35	1020		
250	GNF2284B			881	280	570	254	280	35	878	120	120	102	303	1521	628	680	640	190	28	170	1	95m6	14	9	25	M20x35	1020		
280	GNF2286B			881	280	570	254	280	35	878	120	120	102	303	1521	628	680	640	190	28	170	1	95m6	14	9	25	M20x35	1080		
300	GNF2286B			881	280	570	254	280	35	878	120	120	102	303	1521	628	680	640	190	28	170	1	95m6	14	9	25	M20x35	1080		

(Note 1) The models with 110kW or more are designed to be connected directly. If not to be connected directly, contact us.

(Note 2) Allowable tolerance of dimension: Height of rotary shaft C≤250mm..... $_{-0.5}^{+0.5}$ mm, C>250mm..... $_{-1.0}^{+1.0}$ mm

Connector specifications for encoder connection [Manufacturer: Japan Aviation Electronics]

Motor type	Receptacle installed to motor	Items prepared by customer	
		Straight plug	Angle plug
GNF2 type	Type	Type	Type
	JN2AW15PL1 (15P receptacle)	JN2DW15SL1 (15P straight plug)	JN2FW15SL1 (15P angle plug)
	Terminal of receptacle installed to motor	Recommended terminal (solder connection)	
GNF2 type	Type	Terminal type (Note2)	Max applicable cable size
	JN1-22-26P (Crimp type pin)	JN1-22-22F-PKG100	AWG20 (Jacketed OD: ϕ 1.5 mm or less)

Terminal arrangement diagram

Connector NO.	arrangement diagram on plug side	Connector NO.	Symbols on plate	Encoder signal
1		1	+5V	DC+5V
2		2	0V	0V
3		3	A	A
4		4	A̅	Anot
5		5	B	B
6		6	B̅	Bnot
7		7	Z	Z
8		8	Z̅	Znot
9		9	U	U
10		10	U̅	Unot
11		11	V	V
12		12	V̅	Vnot
13		13	W	W
14		14	W̅	Wnot
15		15	—	—

(Note1) The Following PG shield cable is recommended.

Kind	Braided shield cable (twisted pair cable, cable OD: approx. ϕ 10)
No. of cores	14 cores or more
Diameter	0.2mm ² to 0.3mm ²
Jacketed OD	ϕ 1.5 or less


(Note2) The PKG of contact terminal type is in bulk by 100 pieces.

(Note3) Connect the contact terminal by soldering.

(Note4) Contact Fuji if preparing the item mentioned above is difficult. They are available as options. (Specify the plug type and cable length.)

Terminal Functions

Main circuit and analog input terminal

Item	Symbol	Terminal name	Function
Main circuit	L1/R,L2/S,L3/T	Power input	Connects a 3-phase power supply.
	U,V,W	Inverter output	Connects a 3-phase motor.
	P (+),P1	For DC REACTOR	Connects a DC REACTOR. A DC REACTOR is optional for 55kW or less and standard for 75kW or more.
	P (+),N (-)	For BRAKING UNIT	Connects a braking resistor via the braking unit. Used for a DC bus connection system.
	P (+),DB	For EXTERNAL BRAKING RESISTOR	Connects an external braking resistor (optional).
	 G	Grounding	Ground terminal for inverter chassis.
	R0,T0	Auxiliary control power supply	Connects the same AC power supply as that of the main circuit to back up the control circuit power supply.
	R1,T1	Auxiliary input for fan power	Used as a power input for the AC cooling fan inside the inverter to combine with the high factor PWM converter with power regenerative function (on the models of 200V series 37Kw or more, 400V series 75kW or more). Generally this is not necessary as long as the inverter is used individually.
Speed setting	13	Potentiometer power supply	Used for power supply for a speed setting POT (variable resistor: 1 to 5kΩ). 10V DC 10mA Max.
	12	Voltage input for speed setting	Used for analog reference voltage input. • Reversible operation can be selected by \pm signals: 0 to +10V DC /0 to max. speed.
	11	Analog input common	Common terminal to input signals.
Analog input	Ai1	Analog input 1	The following functions can be selected and set according to the external analog input voltage. 0: Input signal off [OFF] 1: Auxiliary speed setting 1 [AUX-N1] 2: Auxiliary speed setting 2 [AUX-N2] 3: Torque limiter (level 1) [TL-REF1] 4: Torque limiter (level 2) [TL-REF2] 5: Torque bias reference [TB-REF] 6: Torque reference [T-REF] 7: Torque current reference [IT-REF] 8: Creep speed 1 in UP/DOWN setting [CRP-N1] 9: Creep speed 2 in UP/DOWN setting [CRP-N2] 10: Magnetic-flux reference [MF-REF] 11: Detected speed [LINE-N] 12: Motor temperature [M-TMP] 13: Speed override [N-OR] 14: Universal AI [U-AI] 15: PID feedback value [PID-FB1] 16: PID reference value [PID-REF] 17: PID correction gain [PID-G] 18-24: Custom Ai1 to 7 [C-AI 1 to 7] 25: Speed main setting [N-REFV] 26: Current input speed setting [N-REFC] Ai2 can be switched between voltage and current inputs by setting the internal switch. However, the current input can apply to only the speed setting.
	Ai2	Analog input 2	
	M	Analog input common	Common terminal to analog input signals.

Digital input terminal

Items	Function
FWD	Forward operation command
REV	Reverse operation command
X1	Digital input 1
X2	Digital input 2
X3	Digital input 3
X4	Digital input 4
X5	Digital input 5
X6	Digital input 6
X7	Digital input 7
X8	Digital input 8
X9	Digital input 9



Items			Function
	PLC	PLC signal power supply	Connects to the PLC output signal power supply. This can be also used as the power for the load connected for transistor output.
	CM	Digital input common	Common terminal to digital input signals.
Digital input (Safety function)	EN1,EN2	Safety function input terminal	When the circuit is open between EN1-PS or EN2-PS terminals, the switching element of the inverter main circuit is turned off and the output is shut off. (Certification being approved)
	PS		

Analog output and transistor output terminal

Items			Function
Analog output	AO1	Analog output 1	<ul style="list-style-type: none"> Provides the monitor signal of 0 to $\pm 10V$ DC for signals from the following: 0: Detected speed (Speedometer, one-way deflection) [N-FB1+] 1: Detected Speed (Speedometer, two-way deflection) [F-FB1\pm] 2: Speed setting 2 (Before acceleration/deceleration calculation) [N-REF2] 3: Speed setting 4 (ASR input) [N-REF4] 4: Detected speed [N-FB2\pm] 5: Detected line speed [LINE-N\pm] 6: Torque current reference (Torque ammeter, two-way deflection) [IT-REF\pm] 7: Torque current reference (Torque ammeter, one-way deflection) [IT-REF+] 8: Torque reference (Torque meter, two-way deflection) [T-REF\pm] 9: Torque reference (Torque meter, one-way deflection) [T-REF+] 10: Motor current rms value [V-AC] 11: Motor voltage rms value [V-AC] 12: Input power (motor output) [PWR] 13: DC link circuit voltage [V-DC] 14: +10V output test [P10] 15: -10V output test [N10] 30: Universal AO [U-AO] 31-37: Custom AO1 to 7 [C-AO1 to 7] 38: Input power [PWR-IN] 39: Magnetic pole position signal [SMP]
	AO2	Analog output 2	
	AO3	Analog output 3	
	M	Analog output common	
Transistor output	Y1	Transistor output 1	<ul style="list-style-type: none"> Outputs the selected signals from the following items: 0: Inverter running [RUN] 1: Speed existence [N-EX] 2: Speed agreement [N-AG1] 3: Speed equivalence [N-AR] 4, 5, 6: Detected speed 1, 2, 3 [4: N-DT1, 5: N-DT2, 6: N-DT3] 7: Stopping on undervoltage [LU] 8: Detected torque polarity (braking/driving) [B/D] 9: Torque limiting [TL] 10, 11: Detected torque [10: T-DT1, 11: T-DT2] 12: KEYPAD operation mode [KP] 13: Inverter stopping [STOP] 14: Operation ready completion [RDY] 15: Magnetic-flux detection signal [MF-DT] 16: Motor M2 selection status [16: SW-M2] 17: Motor M3 selection status [16: SW-M3] 18: Brake release signal [BRK] 19: Alarm indication1 [AL1] 20: Alarm indication 2 [AL2] 21: Alarm indication 3 [AL4] 22: Alarm indication 4 [AL8] 23: Fan operation signal [FAN] 24: Auto-resetting [TRY] 25: Universal DO [U-DO] 26: Heat sink overheat early warning [INV-OH] 27: Synchronization completion signal [SY-C] 28: Lifetime alarm [LIFE] 29: Under accelerating [U-ACC] 30: Under decelerating [U-DEC] 31: Inverter overload early warning [INV-OL] 32: Motor temperature early warning [M-OH] 33: Motor overload early warning [M-OL] 34: DB overload early warning [DB-OL] 35: Link transmission error [LK-ERR] 36: Load adaptive control under limiting [ANL] 37: Load adaptive control under calculation [ANC] 38: Analog torque bias hold [TBH] 39-48: Custom DO 1 to 10 [C-DO 1 to 10] 50: Z-phase detection signal [Z-RDY] 51: Multiple-winding selected status [MTS] 52: Multiple-winding cancel response [MEC-AB] 53: Master selected status [MSS] 54: Parallel system self station alarm [AL-SF] 55: Communications error stopping [LES] 56: Alarm relay [ALM] 57: Minor fault [L-ALM] 58: Maintenance early warning [MNT] 59: Braking transistor error [DBAL] 60: DC fan lock signal [DCFL] 61: Speed agreement 2 [N-AG2] 62: Speed agreement 3 [N-AG3] 63: Axial fan operation stop signal [MFAN] 66: Droop selection response [DSAB] 67: Torque command/torque current command cancel response [TCL-C] 68: Torque limit mode cancel response [F40-AB] 71: 73 loading command [PRT-73] 72: Y-terminal test output ON [Y-ON] 73: Y-terminal test output OFF [Y-OFF]
	Y2	Transistor output 2	
	Y3	Transistor output 3	
	Y4	Transistor output 4	
	CMY	Transistor output common	
Relay output	Y5A,Y5C	Relay output	Functions can be selected for signals like Y1 to Y4.
	30A,30B,30C	Alarm relay output (for any fault)	Outputs a non-voltage contact signal (1C) when a protective function is activated to stop inverter. Can select alarm for exciting or non exciting conditions.
Communications	DX+,DX-	RS-485 communications input/output	Input/output terminals for RS-485 communications. Can connect up to 31 inverters through a multidrop (daisy chain) connection. Half-duplex method.
	USB port	USB port	Front access, connector type: mini-B, USB 2.0 Full Speed
Speed detection	PA,PB	Pulse generator 2-phase signal input	Terminals for connecting 2-phase signal of pulse generator.
	PGP,PGM	Pulse generator power supply	+15V DC pulse generator power supply (or can be switched to +12V).
	FA,FB	Pulse generator output	Outputs the signal with which the pulse encoder signal is divided by free ratio (can be set by the function code). Open collector and complimentary (same voltage as PGP terminal) can be switched.
	CM	Pulse generator output common	Common terminals to FA and FB.
Temperature detection	TH1,THC	NTC Thermistor PTC Thermistor	Motor temperature can be detected with the NTC and the PTC thermistors. The motor overheat protective level can be specified by the PTC thermistor function.



Terminal Arrangement Diagram

Terminal Arrangement



Control
circuit
terminals

A02	A03	13	Ai2	TH1	PLC	X6	X7	X8	X9	Y2	Y3	Y4	FB	Y5C	Y5A	30B
A01	M	12	Ai1	THC	X1	X2	X3	X4	X5	CMY		Y1	FA	30C	30A	
DX+	DX-	11	M	CM	EN1	PS	EN2	CM	FWD	REV	CM	PGM	PGP	PA	PB	

Main circuit terminals

FRN0.75VG1S-2J~FRN7.5VG1S-2J
FRN0.75VG1S-4J~FRN7.5VG1S-4J

Fig.A Charge lamp



Screw size:
Main circuit:M5 Grounding:M5 Aux power(R0,T0):M3.5

FRN11VG1S-2J~FRN22VG1S-2J
FRN11VG1S-4J~FRN22VG1S-4J


Fig.B Charge lamp



Screw size:
Main circuit:M6 Grounding:M6 Aux power(R0,T0):M3.5

FRN30VG1S-2J
FRN30VG1S-4J~FRN55VG1S-4J


Fig.C Charge lamp



Screw size:
Main circuit:M8 Grounding:M8 Aux power(R0,T0):M3.5

FRN37VG1S-2J~FRN55VG1S-2J
FRN75VG1S-4J~FRN110VG1S-4J


Fig.D/ Fig.E Charge lamp

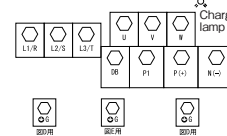

Screw size:
Main circuit:M10 Grounding:M8 Aux power(R0,T0):M3.5

FRN132VG1S-4J,FRN160VG1S-4J


Fig.F Charge lamp



Screw size:
Main circuit:M12 Grounding:M10 Aux power(R0,T0):M3.5

FRN90VG1S-2J
FRN200VG1S-4J~FRN220VG1S-4J


Fig.H Charge lamp

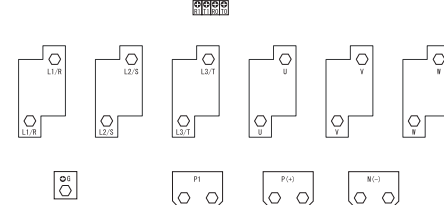

Screw size:
Main circuit:M12 Grounding:M10
Aux power(R0,T0):M3.5

FRN90VG1S-2J
FRN200VG1S-4J~FRN220VG1S-4J


Fig.G Charge lamp



Screw size:
Main circuit:M12 Grounding:M10
Aux power(R0,T0):M3.5

FRN280VG1S-4J~FRN315VG1S-4J


Fig.I Charge lamp

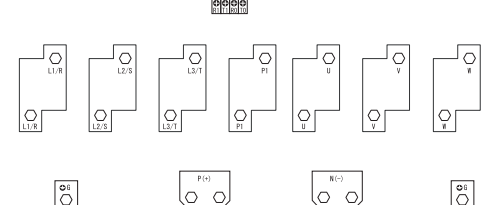

Screw size:
Main circuit:M12 Grounding:M10
Aux power(R0,T0):M3.5

FRN500VG1S-4J~FRN630VG1S-4J


Fig.K Charge lamp

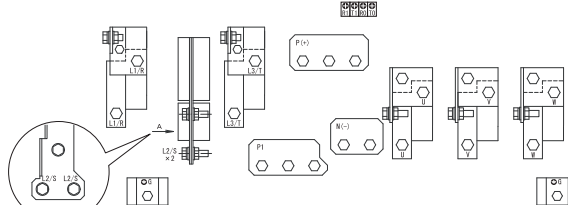

Screw size:
Main circuit:M12 Grounding:M10
Aux power(R0,T0):M3.5

FRN355VG1S-4J~FRN400VG1S-4J


Fig.J Charge lamp



Screw size:
Main circuit:M12 Grounding:M10
Aux power(R0,T0):M3.5

Names and Functions of the KEYPAD and Features

Names and Functions of the KEYPAD



Up/Down keys
Operation mode:
 Increases or decreases the speed.
Program mode:
 Changes the function codes and specified data values.

Program key
 Switches the display to the menu screen or the initial screens for the operation and alarm modes.

Shift key (column shift)
 Used to move the cursor horizontally for data change and to jump to another function block (when pressed with the UP/DOWN keys)

Reset key
Program mode:
 Cancels the current input data and changes the screen.
Trip mode:
 Releases from a trip stoppage.

Function/Data select key
 Used to switch the displayed value of LED monitor, input the speed setting and store the function code data.

Unit indication
 Displays the unit for the information that appears on the LED monitor.

LED monitor
Operation mode:
 Displays the setting frequency, output current, output voltage, motor speed, and line speed.
Trip mode:
 Displays the cause of a trip.

LCD monitor
 Displays different information ranging from operation status to function data.
 The real-time clock is installed as standard. **NEW**
 Operation guidance is displayed scrolling at the bottom.

Operation key
 Starts motor operation.

RUN LED
 Lit during operation by the FWD/REV signal or by operation commands via communications.

HELP key **NEW**
 Displays guidance screens including the key operation guidance from each LCD monitor display.

Stop key
 Stops motor operation.


Features

- LCD with backlight that has a high level of visibility
- Large size 7-segment LED with 5-digit display
- Data of up to three inverters can be copied.
- Supported languages: Japanese, English, Chinese, Korean (hangul character), German* French*, Spain*, Italian*


* Available soon

<Display sample>


Japanese

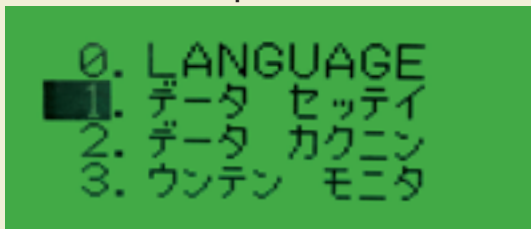

English

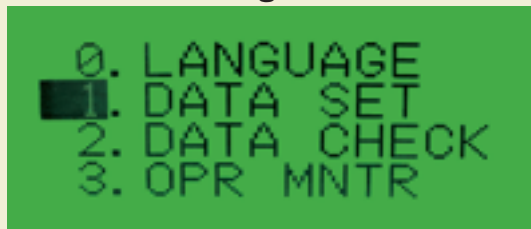

Chinese

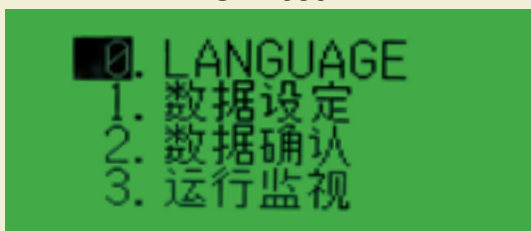

Korean (hangul character)





Function setting

■ indicates the factory setting.

F: Fundamental Functions

Function code	485 No.	Link No.	Name	Setting range
F00	0h	80(50h)	Data protection	0-1
F01	1h		Speed setting N1	0-9
F02	2h		Operation method	0-1
F03	3h	81(51h)	M1 max. speed	50-1500-3000r/min
F04	4h	82(52h)	M1 rated speed	50-3000r/min
F05	5h	83(53h)	M1 rated voltage	80-999V
F07	7h	84(54h)	Acceleration time 1	0.01-5.00-99.99s 100.0-999.9s 1000-3600s
F08	8h	85(55h)	Deceleration time 1	0.01-5.00-99.99s 100.0-999.9s 1000-3600s
F10	Ah	86(56h)	M1 electronic thermal overload relay (Select)	0-2
F11	Bh	87(57h)	M1 electronic thermal overload relay (Level)	0.01-99.99A 100.0-999.9A 1000-2000A
F12	Ch	88(58h)	M1 electronic thermal overload relay (Thermal time constant)	0.5-75.0min
F14	Eh		Restart mode after momentary power failure (Select)	0-5
F17	11h		Gain (for speed setting signal 12)	0.0-100.0-200.0%
F18	12h		Bias (for speed setting signal 12)	-30000-0-30000r/min
F20	14h	89(59h)	DC brake (Starting speed)	0-3600r/min
F21	15h	90(5Ah)	DC brake (Braking level)	0-100%
F22	16h	91(5Bh)	DC brake (Braking time)	0.0-30.0s
F23	17h	92(5Ch)	Starting speed	0.0-150.0r/min
F24	18h	93(5Dh)	Starting speed (Holding time)	0.00-10.00s
F26	1Ah	94(5Eh)	Motor sound (Carrier freq.)	2-7-15kHz
F36	24h		30RY operation mode	0-1
F37	25h	96(60h)	Stop speed	0.0-10.0-150.0r/min
F38	26h	97(61h)	Stop speed (Detection method)	0-1
F39	27h	98(62h)	Stop speed (Zero speed holding time)	0.00-0.50-10.00s
F40	28h	99(63h)	Torque limiter mode 1	0-3
F41	29h	100(64h)	Torque limiter mode 2	0-3
F42	2Ah	101(65h)	Torque limiter value (level 1) selection	0-5
F43	2Bh	102(66h)	Torque limiter value (level 2) selection	0-5
F44	2Ch	103(67h)	Torque limiter value (level 1)	-300-150-300%
F45	2Dh	104(68h)	Torque limiter value (level 2)	-300-10-300%
F46	2Eh	105(69h)	Mechanical loss compensation value	-300.00-0.00-300.00%
F47	2Fh	106(6Ah)	Torque bias T1	-300.00-0.00-300.00%
F48	30h		Torque bias T2	-300.00-0.00-300.00%
F49	31h		Torque bias T3	-300.00-0.00-300.00%
F50	32h		Torque bias activation timer	0.00-1.00s
F51	33h	251(FBh)	Torque reference monitor (Polarity selection)	0-1
F52	34h		LED monitor (Display coefficient A)	-999.00-1.00-999.00
F53	35h		LED monitor (Display coefficient B)	-999.00-1.00-999.00
F54	36h		LED monitor (Display filter)	0.0-0.2-5.0s
F55	37h		LED monitor (Display selection)	0-32
F56	38h		LED monitor (Display at stopping state)	0-1
F57	39h		LCD monitor (Display selection)	0-1
F58	3Ah		LCD monitor (Language selection)	0-7
F59	3Bh		LCD monitor (Contrast adjusting)	0-5-10
F60	3Ch		Output unit (HP/kW) selection	0-1
F61	3Dh	107(6Bh)	ASR1-P (Gain)	0.1-10.0-500.0
F62	3Eh	108(6Ch)	ASR1-I (Constant of integration)	0.000-0.200-10.000s
F63	3Fh	109(6Dh)	ASR1-FF (Gain)	0.000-9.999s
F64	40h	110(6Eh)	ASR1 input filter	0.000-0.040-5.000s
F65	41h	111(6Fh)	ASR1 detection filter	0.000-0.005-0.100s
F66	42h	112(70h)	ASR1 output filter	0.000-0.002-0.100s
F67	43h	113(71h)	S-curve acceleration start side 1	0-50%

You can change the setting of the functions indicated with ■ during operation. Stop the operation before changing other functions.

Function code	485 No.	Link No.	Name	Setting range
F68	44h	114(72h)	S-curve acceleration end side 1	0-50%
F69	45h	115(73h)	S-curve deceleration start side 1	0-50%
F70	46h	116(74h)	S-curve deceleration end side 1	0-50%
F72	48h		Spare excitation mode selection	0-1
F73	49h		Magnetic-flux level at light load	10-100%
F74	4Ah	117(75h)	Pre-excitation time	0.0-10.0s
F75	4Bh	118(76h)	Pre-excitation initial level	100-400%
F76	4Ch		Speed limiter (method selection)	0-3
F77	4Dh	79(4Fh)	Speed limiter level 1	-110.0-100.0-110.0%
F78	4Eh	254(FEh)	Speed limiter level 2	-110.0-100.0-110.0%
F79	4Fh	119(77h)	Motor selection (M1, M2, M3)	0-2
F80	50h		Current rating switching	0-3
F81	51h		Offset (for speed setting signal 12)	-30000-0-30000r/min
F82	52h		Dead-band (for speed setting signal 12)	0.0-150.0r/min
F83	53h		Filter (for speed setting signal 12)	0.000-0.005-5.000s
F84	54h		Cumulative power data display coefficient	0.000-0.010-9999
F85	55h		Torque calculation value filter	0.000-0.100-1.000

E: Extension Terminal Functions

Function code	485 No.	Link No.	Name	Setting range
E01	101h	120(78h)	X1 function selection	0-76
E02	102h	121(79h)	X2 function selection	0-1-76
E03	103h	122(7Ah)	X3 function selection	0-2-76
E04	104h	123(7Bh)	X4 function selection	0-3-76
E05	105h	124(7Ch)	X5 function selection	0-4-76
E06	106h	125(7Dh)	X6 function selection	0-5-76
E07	107h	126(7Eh)	X7 function selection	0-7-76
E08	108h	127(7Fh)	X8 function selection	0-8-76
E09	109h	128(80h)	X9 function selection	0-9-76
E10	10Ah	129(81h)	X11 function selection	0-25-76
E11	10Bh	130(82h)	X12 function selection	0-25-76
E12	10Ch	131(83h)	X13 function selection	0-25-76
E13	10Dh	132(84h)	X14 function selection	0-25-76
E14	10Eh		X function normally open/normally closed	0000-01FF
E15	10Fh	133(85h)	Y1 function selection	0-1-73
E16	110h	134(86h)	Y2 function selection	0-2-73
E17	111h	135(87h)	Y3 function selection	0-3-73
E18	112h	136(88h)	Y4 function selection	0-4-73
E19	113h	137(89h)	Y5 function selection	0-14-73
E20	114h	138(8Ah)	Y11 function selection	0-26-73
E21	115h	139(8Bh)	Y12 function selection	0-26-73
E22	116h	140(8Ch)	Y13 function selection	0-26-73
E23	117h	141(8Dh)	Y14 function selection	0-26-73
E24	118h	142(8Eh)	Y15 function selection	0-26-73
E25	119h	143(8Fh)	Y16 function selection	0-26-73
E26	11Ah	144(90h)	Y17 function selection	0-26-73
E27	11Bh	145(91h)	Y18 function selection	0-26-73
E28	11Ch		Y function normally open/normally closed	0000-001F
E29	11Dh	146(92h)	PG pulse output selection	0-10
E30	11Eh		Motor overheat protection (Temperature)	50-150-200°C
E31	11Fh		Motor overheat early warning (Temperature)	50-75-200°C
E32	120h	205(CDh)	M1-M3 PTC operation level	0.00-1.60-5.00V
E33	121h		Inverter overload early warning	25-90-100%
E34	122h		Motor overload early warning	25-90-100%
E35	123h		DB overload protection	0-100%
E36	124h		DB overload early warning	0-80-100%
E37	125h		DB thermal time constant	0-300-1000s
E38	126h	147(93h)	Speed detection method	000-111
E39	127h	148(94h)	Speed detection level 1	0-1500-30000r/m

Function setting

Function code	485 No.	Link No.	Name	Setting range
E40	128h	149(95h)	Speed detection level 2	-30000—1500—30000r/m
E41	129h	150(96h)	Speed detection level 3	-30000—1500—30000r/m
E42	12Ah	151(97h)	Speed equivalence (Detection range)	1.0—3.0—20.0%
E43	12Bh	152(98h)	Speed agreement (Detection range)	1.0—3.0—20.0%
E44	12Ch	153(99h)	Speed agreement (Off delay timer)	0.000—0.100—5.000s
E45	12Dh	154(9Ah)	Enable/disable alarm for speed disagreement	00—21
E46	12Eh	155(9Bh)	Torque detection level 1	0—30—300%
E47	12Fh	156(9Ch)	Torque detection level 2	0—30—300%
E48	130h	157(9Dh)	Magnetic-flux detection level	10—100 %
E49	131h		Ai1 function selection	0—26
E50	132h		Ai2 function selection	0—26
E51	133h		Ai3 function selection	0—26
E52	134h		Ai4 function selection	0—26
E53	135h		Ai1 gain setting	-10.000—1.000—10.000(times)
E54	136h		Ai2 gain setting	-10.000—1.000—10.000(times)
E55	137h		Ai3 gain setting	-10.000—1.000—10.000(times)
E56	138h		Ai4 gain setting	-10.000—1.000—10.000(times)
E57	139h		Ai1 bias setting	-100.0—0.0—100.0%
E58	13Ah		Ai2 bias setting	-100.0—0.0—100.0%
E59	13Bh		Ai3 bias setting	-100.0—0.0—100.0%
E60	13Ch		Ai4 bias setting	-100.0—0.0—100.0%
E61	13Dh		Ai1 filter setting	0.000—0.010—0.500s
E62	13Eh		Ai2 filter setting	0.000—0.010—0.500s
E63	13Fh		Ai3 filter setting	0.000—0.010—0.500s
E64	140h		Ai4 filter setting	0.000—0.010—0.500s
E65	141h		Increment/decrement limiter (Ai1)	0.00—60.00s
E66	142h		Increment/decrement limiter (Ai2)	0.00—60.00s
E67	143h		Increment/decrement limiter (Ai3)	0.00—60.00s
E68	144h		Increment/decrement limiter (Ai4)	0.00—60.00s
E69	145h		A01 function selection	0—1—39
E70	146h		A02 function selection	0—6—39
E71	147h		A03 function selection	0—3—39
E72	148h		A04 function selection	0—39
E73	149h		A05 function selection	0—39
E74	14Ah		A01 gain setting	-100.00—1.00—100.00(times)
E75	14Bh		A02 gain setting	-100.00—1.00—100.00(times)
E76	14Ch		A03 gain setting	-100.00—1.00—100.00(times)
E77	14Dh		A04 gain setting	-100.00—1.00—100.00(times)
E78	14Eh		A05 gain setting	-100.00—1.00—100.00(times)
E79	14Fh		A01 bias setting	-100.0—0.0—100.0%
E80	150h		A02 bias setting	-100.0—0.0—100.0%
E81	151h		A03 bias setting	-100.0—0.0—100.0%
E82	152h		A04 bias setting	-100.0—0.0—100.0%
E83	153h		A05 bias setting	-100.0—0.0—100.0%
E84	154h		A01-5 filter setting	0.000—0.010—0.500s
E90	15Ah		Link command function selection 1	0—12
E91	15Bh		Link command function selection 2	0—12
E101	1E01h		Ai1 offset	-100.00—0.00—100.00%
E102	1E02h		Ai2 offset	-100.00—0.00—100.00%
E103	1E03h		Ai3 offset	-100.00—0.00—100.00%
E104	1E04h		Ai4 offset	-100.00—0.00—100.00%
E105	1E05h		Ai1 dead-band	0.00—10.00%
E106	1E06h		Ai2 dead-band	0.00—10.00%
E107	1E07h		Ai3 dead-band	0.00—10.00%
E108	1E08h		Ai4 dead-band	0.00—10.00%
E109	1E09h		Pulse dividing (numerator)	1—1000—65535
E110	1E0Ah		Pulse dividing (denominator)	1—1000—65535
E114	1E0Eh		Speed agreement no.2 (detection range)	1.0—3.0—20.0%
E115	1E0Fh		Speed agreement no.2 (off delay timer)	0.000—0.100—5.000s
E116	1E10h		Speed agreement no.3 (detection range)	1.0—3.0—20.0%

You can change the setting of the functions indicated with during operation. Stop the operation before changing other functions.

indicates the factory setting.

Function code	485 No.	Link No.	Name	Setting range
E117	1E11h		Speed agreement no.3 (off delay timer)	0.000—0.100—5.000s
E118	1E12h		Axial fan stop signal setting temperature	0—200°C

C:Control Functions of Frequency

Function code	485 No.	Link No.	Name	Setting range
C01	201h		Jump speed 1	0—30000r/m
C02	202h		Jump speed 2	0—30000r/m
C03	203h		Jump speed 3	0—30000r/m
C04	204h		Jump hysteresis	0—1000r/m
C05	205h	158(9Eh)	Multistep speed 1	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C06	206h	159(9Fh)	Multistep speed 2	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C07	207h	160(A0h)	Multistep speed 3	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C08	208h	161(A1h)	Multistep speed 4	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C09	209h	162(A2h)	Multistep speed 5	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C10	20Ah	163(A3h)	Multistep speed 6	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C11	20Bh	164(A4h)	Multistep speed 7	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C12	20Ch		Multistep speed 8	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C13	20Dh		Multistep speed 9	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C14	20Eh		Multistep speed 10	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C15	20Fh		Multistep speed 11	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C16	210h		Multistep speed 12	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C17	211h		Multistep speed 13	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C18	212h		Multistep speed 14/Creep speed 1	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C19	213h		Multistep speed 15/Creep speed 2	0—30000r/m / 0.00—100.00% / 0.0—999.9m/m
C20	214h		Multistep speed reference agreement timer	0.000—0.100s
C21	215h		Multistep setting definition	0—2
C25	219h		Speed setting N2	0—9
C29	21Dh		Jogging speed	0—50—30000r/m
C30	21Eh		ASR-P (Gain) JOG	0.1—10.0—500.0(times)
C31	21Fh		ASR-I (Constant of integration) JOG	0.000—0.200—10.000s
C32	220h		ASR-JOG input filter	0.000—0.040—5.000s
C33	221h		ASR-JOG detection filter	0.000—0.005—0.100s
C34	222h		ASR-JOG output filter	0.000—0.002—0.100s
C35	223h		Acceleration time JOG	0.01—5.00—99.99s 100.0—999.9s 1000—3600s
C36	224h		Deceleration time JOG	0.01—5.00—99.99s 100.0—999.9s 1000—3600s
C37	225h		S-curve start side JOG	0—50%
C38	226h		S-curve end side JOG	0—50%
C40	228h		ASR2-P Gain	0.1—10.0—500.0(times)
C41	229h		ASR2-I (Constant of integration)	0.000—0.200—10.000s
C42	22Ah		ASR2-FF (Gain)	0.000—9.999s
C43	22Bh		ASR2 input filter	0.000—0.040—5.000s



■ indicates the factory setting.

Function code	485 No.	Link No.	Name	Setting range
C44	22Ch		ASR2 detection filter	0.000— 0.005 —0.100s
C45	22Dh		ASR2 output filter	0.000— 0.002 —0.100s
C46	22Eh		Acceleration time 2	0.01— 5.00 —99.99s 100.0—999.9s 1000—3600s
C47	22Fh		Deceleration time 2	0.01— 5.00 —99.99s 100.0—999.9s 1000—3600s
C48	230h		S-curve start side 2	0 —50%
C49	231h		S-curve end side 2	0 —50%
C50	232h		ASR3-P gain	0.1— 10.0 —500.0(times)
C51	233h		ASR3-I (Constant of integration)	0.000— 0.200 —10.000s
C52	234h		ASR3-FF (Gain)	0.000 —9.999s
C53	235h		ASR3 input filter	0.000— 0.040 —5.000s
C54	236h		ASR3 detection filter	0.000— 0.005 —0.100s
C55	237h		ASR3 output filter	0.000— 0.002 —0.100s
C56	238h		Acceleration time 3	0.01— 5.00 —99.99s 100.0—999.9s 1000—3600s
C57	239h		Deceleration time 3	0.01— 5.00 —99.99s 100.0—999.9s 1000—3600s
C58	23Ah		S-curve start side 3	0 —50%
C59	23Bh		S-curve end side 3	0 —50%
C60	23Ch		ASR4-P gain	0.1— 10.0 —500.0(times)
C61	23Dh		ASR4-I (Constant of integration)	0.000— 0.200 —10.000s
C62	23Eh		ASR4-FF (Gain)	0.000 —9.999s
C63	23Fh		ASR4 input filter	0.000— 0.040 —5.000s
C64	240h		ASR4 detection filter	0.000— 0.005 —0.100s
C65	241h		ASR4 output filter	0.000— 0.002 —0.100s
C66	242h		Acceleration time 4	0.01— 5.00 —99.99s 100.0—999.9s 1000—3600s
C67	243h		Deceleration time 4	0.01— 5.00 —99.99s 100.0—999.9s 1000—3600s
C68	244h		S-curve start side 4	0 —50%
C69	245h		S-curve end side 4	0 —50%
C70	246h		ASR switching time	0.00— 1.00 —2.55s
C71	247h	165 (A5h)	Acceleration/deceleration time switching speed	0.00 —100.00%
C72	248h	166 (A6h)	ASR switching time	0.00 —100.00%
C73	249h		Creep speed switching (on UP/DOWN control)	00 —11

P:Motor Parameters

Function code	485 No.	Link No.	Name	Setting range
P01	301h		M1 control method	0 —5
P02	302h		M1 motor selection	0—50
P03	303h	167 (A7h)	M1 rated capacity	0.00—1200kW(F60=0) 0.00—1600HP(F60=1)
P04	304h	168 (A8h)	M1 rated current	0.01—99.99A 100.0—999.9A 1000—2000A
P05	305h	169 (A9h)	M1 pole number	2— 4 —100(poles)
P06	306h	170 (AAh)	M1-%R1	0.00—30.00%
P07	307h	171 (ABh)	M1-%X	0.00—200.00%
P08	308h	172 (ACh)	M1 exciting current/ Magnetic-flux damped current (-Id)	0.01—99.99A 100.0—999.9A 1000—2000A

You can change the setting of the functions indicated with ■ during operation. Stop the operation before changing other functions.

Function code	485 No.	Link No.	Name	Setting range
P09	309h	173 (ADh)	M1 torque current	0.01—99.99A 100.0—999.9A 1000—2000A
P10	30Ah	174 (AEh)	M1 slip on driving	0.001—10.000Hz
P11	30Bh	175 (AFh)	M1 slip on braking	0.001—10.000Hz
P12	30Ch	176 (B0h)	M1 iron loss coefficient 1	0.00—10.00%
P13	30Dh	177 (B1h)	M1 iron loss coefficient 2	0.00—10.00%
P14	30Eh	178 (B2h)	M1 iron loss coefficient 3	0.00—10.00%
P15	30Fh	179 (B3h)	M1 magnetic saturation coefficient 1	0.0—100.0%
P16	310h	180 (B4h)	M1 magnetic saturation coefficient 2	0.0—100.0%
P17	311h	181 (B5h)	M1 magnetic saturation coefficient 3	0.0—100.0%
P18	312h	182 (B6h)	M1 magnetic saturation coefficient 4	0.0—100.0%
P19	313h	183 (B7h)	M1 magnetic saturation coefficient 5	0.0—100.0%
P20	314h	184 (B8h)	M1 secondary time constant	0.001—9.999s
P21	315h	185 (B9h)	M1 induced voltage coefficient	0—999V
P22	316h	186 (BAh)	M1 R2 correction coefficient 1	0.500—5.000
P23	317h	187 (BBh)	M1 R2 correction coefficient 2	0.500—5.000
P24	318h	188 (BCh)	M1 R2 correction coefficient 3	0.010—5.000
P25	319h	189 (BDh)	M1 exciting current correction coefficient	0.000—5.000
P26	31Ah	190 (BEh)	M1-ACR-P (Gain)	0.1— 1.0 —20.0
P27	31Bh	191 (BFh)	M1-ACR-I (Integration time)	0.1— 1.0 —100.0ms
P28	31Ch	192 (C0h)	M1-PG pulse number	100— 1024 —60000
P29	31Dh	214 (D6h)	M1 external PG correction coefficient	0000— 4000 —4FFF
P30	31Eh	193 (C1h)	M1 thermistor selection	0— 1 —3
P32	320h		M1 online auto tuning	0 —1
P33	321h		M1 maximum output voltage/ Maximum voltage limit value	200V:80— 220 —999V 400V:80— 440 —999V
P34	322h		M1 slip compensation amount	-20.000— 0.000 —5.000Hz
P35	323h		M1 torque boost	0.0 —20.0
P36	324h		M1 current vibration suppressing gain	0.00— 0.20 —1.00

H:High Performance Functions

Function code	485 No.	Link No.	Name	Setting range
H01	401h		Tuning operation selection	0 —4
H02	402h	14 (Eh)	All save function	0 —1
H03	403h		Data initializing	0 —1
H04	404h		Auto-reset (Times)	0 —10
H05	405h		Auto-reset (Reset interval)	0.01— 5.00 —20.00s
H06	406h		Fan stop operation	0 —1
H08	408h		Rev. phase sequence lock	0 —1
H09	409h	194 (C2h)	Start mode (Rotating motor pick up)	0— 2
H10	40Ah	195 (C3h)	Energy-saving operation	0 —1
H11	40Bh		Automatic operation OFF function	0 —4
H13	40Dh	196 (C4h)	Auto-restart (Restart time)	0.1— 0.5 —5.0s
H14	40Eh		Auto-restart (Speed fall rate)	1— 500 —3600r/m/s
H15	40Fh		Auto-restart (Holding DC voltage)	3-phase 200V:200— 235 —300V 3-phase 400V:400— 470 —600V
H16	410h		Auto-restart (Operation command selfhold setting)	0— 1
H17	411h		Auto-restart (Operation command selfhold time)	0.0— 30.0 s
H19	413h	197 (C5h)	Active drive	0 —1
H20	414h	198 (C6h)	PID control	0 —3
H21	415h	199 (C7h)	Command selection	0 —1
H22	416h	201 (C9h)	P-gain	0.000— 1.000 —10.000(times)
H23	417h	202 (CAh)	I-gain	0.00— 1.00 —100.00s
H24	418h	203 (CBh)	D-gain	0.000 —10.000s
H25	419h	200 (C8h)	Output upper limit value	-300— 100 —300%

Function setting

indicates the factory setting.

Function code	485 No.	Link No.	Name	Setting range
H26	41Ah	204(CCh)	Output lower limit value	-300—100—300%
H27	41Bh	206(CEh)	Speed reference selection	0—2
H28	41Ch	207(CFh)	Droop operation	0.0—25.0%
H29	41Dh		Link function protection	0—1
H30	41Eh	208(D0h)	Serial link	0—3
H31	41Fh		RS-485 (Address)	0—1—255
H32	420h		RS-485 (Mode select on no response error)	0—3
H33	421h		RS-485 (Timer)	0.01—2.00—20.00s
H34	422h		RS-485 (Baud rate)	0—4
H35	423h		RS-485 (Data length)	0—1
H36	424h		RS-485 (Parity check)	0—1—2
H37	425h		RS-485 (Stop bits)	0—1
H38	426h		RS-485 (No response error detection time)	0.0—60.0s
H39	427h		RS-485 (Response interval)	0.00—0.01—1.00s
H40	428h		Protocol selection	0—1—2
H41	429h	209(D1h)	Torque reference selection	0—5
H42	42Ah	210(D2h)	Torque current reference selection	0—4
H43	42Bh	211(D3h)	Magnetic-flux reference selection	0—3
H44	42Ch	212(D4h)	Magnetic-flux reference value	10—100%
H46	42Eh	215(D7h)	Observer type selection	0—2
H47	42Fh	216(D8h)	M1 compensation gain	0.00—1.00(times)
H48	430h		M2 compensation gain	0.00—1.00(times)
H49	431h	217(D9h)	M1 integration time	0.005—0.100—1.000s
H50	432h		M2 integration time	0.005—0.100—1.000s
H51	433h	218(DAh)	M1 load inertia	0.001—50.000kgm ²
H52	434h		M2 load inertia	0.001—50.000kgm ²
H53	435h	213(D5h)	Line speed feedback selection	0—3
H55	437h		Zero speed control (Gain)	0—5—100(times)
H56	438h		Zero speed control (completion range)	0—100 pulse
H57	439h		Overvoltage suppressing function	0—1
H58	43Ah		Overcurrent suppressing function	0—1
H60	43Ch		Load adaptive control function definition 1	0—3
H61	43Dh		Load adaptive control function definition 2	0—1
H62	43Eh		Winding up speed	0.0—999.9m/m
H63	43Fh		Counter weight mass	0.00—600.00t
H64	440h		Safety coefficient	0.50—1.00—1.20
H65	441h		Mechanical efficiency	0.500—1.000
H66	442h		Rated loading	0.00—600.00t
H68	444h		Trip data delete	0—1
H70	446h		Reserved 1	0—9999
H71	447h		Reserved 2	0—10
H74	44Ah		PG detection circuit self-shutoff mode selection	0—1
H75	44Bh		Main circuit output wiring phase sequence setting	0—1
H76	44Ch		Main power supply cut detection	0—1
H77	44Dh		Cooling fan ON-OFF control continuation timer	0—600s
H78	44Eh		Number of starts/Operation time initialization	0—6
H79	44Fh		Cooling fan accumulated operation time Factory default setting	0—65535(10h)
H80	450h		Main circuit capacitor capacity Factory default measurement	0—32767
H81	451h		Setting main circuit accumulated time for capacitor life to Factory default	0—65535(10h)
H82	452h		Maintenance setting number of starts	0—65535
H83	453h		Maintenance setting time	0—8760—65535(10h)
H85	455h		Setting time: year/month	0000—0001—FFFF
H86	456h		Setting time: day/time	0000—0100—FFFF
H87	457h		Setting time: min/sec	0000—FFFF
H88	458h		Clock time setting	0—1
H90	45Ah		Overspeed alarm detection level	100—120—160%
H103	1F03h		Protection/maintenance mode selection 1	0000—0101—1111
H104	1F04h		Protection/maintenance mode selection 2	0000—1110—1111

You can change the setting of the functions indicated with during operation. Stop the operation before changing other functions.

*1: Soon to be supported

Function code	485 No.	Link No.	Name	Setting range
H105	1F05h		Protection/maintenance mode selection 3	0000—1111
H106	1F06h		Minor fault definition 1	0000—1111
H107	1F07h		Minor fault definition 2	0000—1111
H108	1F08h		Minor fault definition 3	0000—1111
H109	1F09h		Minor fault definition 4	0000—1111
H110	1F0Ah		Minor fault definition 5	0000—1111
H111	1F0Bh		Minor fault definition 6	0—1
H112	1F0Ch		M1 magnetic saturation expansion coefficient 6	0.0—43.8—100.0 %
H113	1F0Dh		M1 magnetic saturation expansion coefficient 7	0.0—37.5—100.0 %
H114	1F0Eh		M1 magnetic saturation expansion coefficient 8	0.0—31.3—100.0 %
H115	1F0Fh		M1 magnetic saturation expansion coefficient 9	0.0—25.0—100.0 %
H116	1F10h		M1 magnetic saturation expansion coefficient 10	0.0—18.8—100.0 %
H117	1F11h		M1 magnetic saturation expansion coefficient 11	0.0—12.5—100.0 %
H118	1F12h		M1 magnetic saturation expansion coefficient 12	0.0—6.3—100.0 %
H125	1F19h		M3 compensation gain	0.00—1.00(times)
H126	1F1Ah		M3 integration time	0.005—0.100—1.000s
H127	1F1Bh		M3 load inertia	0.001—50,000kgm ²
H142	1F2Ah		Simulated fault	0—1
H149	1F31h		Mechanical runaway detection speed setting	0.0—20.0%
H201	2001h		Load adaptive control parameter switching*1	0—1
H202	2002h		Load inertia (winding up 1)*1	0.001—50,000 kgm ²
H203	2003h		Safety coefficient (winding up 1)*1	0.50—1.00—1.20
H204	2004h		Mechanical efficiency (winding up 1)*1	0.500—1.000
H205	2005h		Load inertia (winding up 2)*1	0.001—50,000 kgm ²
H206	2006h		Safety coefficient (winding up 2)*1	0.50—1.00—1.20
H207	2007h		Mechanical efficiency (winding up 2)*1	0.500—1.000
H208	2008h		Load inertia (winding down 1)*1	0.001—50,000 kgm ²
H209	2009h		Safety coefficient (winding down 1)*1	0.50—1.00—1.20
H210	200Ah		Mechanical efficiency (winding down 1)*1	0.500—1.000
H211	200Bh		Load inertia (winding down 2)*1	0.001—50,000 kgm ²
H212	200Ch		Safety coefficient (winding down 2)*1	0.50—1.00—1.20
H213	200Dh		Mechanical efficiency (winding down 2)*1	0.500—1.000
H214	200Eh		Multilimit speed pattern function selection*1	0—1
H215	200Fh		Multilimit speed pattern *1 (maximum speed)	0.1—50.0—100.0 %
H216	2010h		Multilimit speed pattern*1 (rated speed)	0.1—100.0 %
H217	2011h		Multilimit speed pattern*1 (rated speed ×1.1)	0.1—90.9—100.0 %
H218	2012h		Multilimit speed pattern*1 (rated speed ×1.2)	0.1—83.3—100.0 %
H219	2013h		Multilimit speed pattern*1 (rated speed ×1.4)	0.1—71.4—100.0 %
H220	2014h		Multilimit speed pattern*1 (rated speed ×1.6)	0.1—62.5—100.0 %
H221	2015h		Multilimit speed pattern*1 (rated speed ×1.8)	0.1—55.5—100.0 %
H222	2016h		Multilimit speed pattern*1 (rated speed ×2.0)	0.1—50.0—100.0 %
H223	2017h		Multilimit speed pattern*1 (rated speed ×2.5)	0.1—40.0—100.0 %
H224	2018h		Multilimit speed pattern*1 (rated speed ×3.0)	0.1—33.3—100.0 %
H225	2019h		Limit speed judgment zone*1 (start speed)	0.1—75.0—100.0 %
H226	201Ah		Limit speed judgment zone*1 (end speed)	0.1—93.7—100.0 %
H227	201Bh		Load adaptive control function definition 3 *1	0—2
H228	201Ch		Load inertia ratio setting*1	0—2



A: Alternative Motor Parameters

Function code	Communications address 485No. Link No.	Name	Setting range
A01	501h	M2 control method	0–5
A02	502h	M2 rated capacity	0.00–1200kW(F60=0) 0.00–1600HP(F60=1)
A03	503h	M2 rated current	0.01–99.99A 100.0–999.9A 1000–2000A
A04	504h	M2 rated voltage	80–999V
A05	505h	M2 rated speed	50–1500–3000r/min
A06	506h	M2 maximum speed	50–1500–3000r/min
A07	507h	M2 pole number	2–4–100(poles)
A08	508h	M2-%R1	0.00–30.00%
A09	509h	M2-%X	0.00–200.00%
A10	50Ah	M2 exciting current/ Magnetic-flux damped current (–Id)	0.01–99.99A 100.0–999.9A 1000–2000A
A11	50Bh	M2 torque current	0.01–99.99A 100.0–999.9A 1000–2000A
A12	50Ch	M2 slip on driving	0.001–10.000Hz
A13	50Dh	M2 slip on braking	0.001–10.000Hz
A14	50Eh	M2 iron loss coefficient 1	0.00–10.00%
A15	50Fh	M2 iron loss coefficient 2	0.00–10.00%
A16	510h	M2 iron loss coefficient 3	0.00–10.00%
A17	511h	M2 magnetic saturation 1	0.0–93.8–100.0%
A18	512h	M2 magnetic saturation 2	0.0–87.5–100.0%
A19	513h	M2 magnetic saturation 3	0.0–75.0–100.0%
A20	514h	M2 magnetic saturation 4	0.0–62.5–100.0%
A21	515h	M2 magnetic saturation 5	0.0–50.0–100.0%
A22	516h	M2 secondary time constant	0.001–9.999s
A23	517h	M2 induced voltage coefficient	0–999V
A24	518h	M2 R2 correction coefficient 1	0.000–1.000–5.000
A25	519h	M2 R2 correction coefficient 2	0.000–1.000–5.000
A26	51Ah	M2 R2 correction coefficient 3	0.010–1.000–5.000
A27	51Bh	M2 exciting current correction coefficient	0.000–5.000
A28	51Ch	M2-ACR-P (Gain)	0.1–1.0–20.0
A29	51Dh	M2-ACR-I (Integration time)	0.1–1.0–100.0ms
A30	51Eh	M2-PG pulse number	100–1024–60000
A31	51Fh	M2 thermistor selection	0–1–3
A32	520h	M2 electronic thermal overload relay (Select)	0–2
A33	521h	M2 electronic thermal overload relay (Level)	0.01–99.99A 100.0–999.9A 1000–2000A
A34	522h	M2 electronic thermal overload relay (Thermal time constant)	0.5–75.0min
A51	533h	M2 External PG correction coefficient	0000–4000–4FFF
A52	534h	M2 online auto tuning	0–1
A53	535h	M2 maximum output voltage/ Maximum voltage limit value	80–999V
A54	536h	M2 slip compensation amount	–20.000–0.000–5.000Hz
A55	537h	M2 torque boost	0.0–20.0
A56	538h	M2 current vibration suppressing gain	0.00–0.20–1.00
A59	53Bh	M2 ABS signal input definition	0–16
A60	53Ch	M2 magnetic pole position offset	0.0–359.9
A61	53Dh	M2 salient pole ratio (%Xq/%Xd)	1.000–3.000
A64	540h	M2 overcurrent protection level	0.00, 0.01–2000A
A101	2401h	M3 control method	0–5
A102	2402h	M3 motor rated capacity	0.00–1200kW(F60=0) 0.00–1600HP(F60=1)

You can change the setting of the functions indicated with during operation. Stop the operation before changing other functions.

* 1: Soon to be supported

 indicates the factory setting.

Function code	Communications address 485No. Link No.	Name	Setting range
A103	2403h	M3 motor rated current	0.01–99.99A 100.0–999.9A 1000–2000A
A104	2404h	M3 rated voltage	80–999V
A105	2405h	M3 rated speed	50–1500–3000r/min
A106	2406h	M3 maximum speed	50–1500–3000r/min
A107	2407h	M3 motor pole number	2–4–100(poles)
A108	2408h	M3 %R1	0.00–30.00%
A109	2409h	M3 %X	0.00–200.00%
A110	240Ah	M3 exciting current/ Magnetic-flux damped current (–Id)	0.01–99.99A 100.0–999.9A 1000–2000A
A111	240Bh	M3 torque current	0.01–99.99A 100.0–999.9A 1000–2000A
A112	240Ch	M3 slip on driving	0.001–10.000Hz
A113	240Dh	M3 slip on braking	0.001–10.000Hz
A114	240Eh	M3 iron loss coefficient 1	0.00–10.00%
A115	240Fh	M3 iron loss coefficient 2	0.00–10.00%
A116	2410h	M3 iron loss coefficient 3	0.00–10.00%
A117	2411h	M3 magnetic saturation 1	0.0–93.8–100.0%
A118	2412h	M3 magnetic saturation 2	0.0–87.5–100.0%
A119	2413h	M3 magnetic saturation 3	0.0–75.0–100.0%
A120	2414h	M3 magnetic saturation 4	0.0–62.5–100.0%
A121	2415h	M3 magnetic saturation 5	0.0–50.0–100.0%
A122	2416h	M3 secondary time constant	0.001–9.999s
A123	2417h	M3 induced voltage coefficient	0–999V
A124	2418h	M3 R2 correction coefficient 1	0.500–1.000–5.000
A125	2419h	M3 R2 correction coefficient 2	0.500–1.000–5.000
A126	241Ah	M3 R2 correction coefficient 3	0.010–1.000–5.000
A127	241Bh	M3 exciting current correction coefficient	0.000–5.000
A128	241Ch	M3 ACR-P gain	0.1–1.0–20.0
A129	241Dh	M3 ACR-I time	0.1–1.0–100.0ms
A130	241Eh	M3 PG pulse number	100–1024–60000
A131	241Fh	M3 thermistor selection	0–1–3
A132	2420h	M3 electronic thermal overload relay (Select)	0–2
A133	2421h	M3 electronic thermal overload relay (Level)	0.01–99.99A 100.0–999.9A 1000–2000A
A134	2422h	M3 electronic thermal overload relay (Thermal time constant)	0.5–75.0min
A151	2433h	M3 external PG correction coefficient	0000–4000–4FFF
A152	2434h	M3 online auto tuning	0–1
A153	2435h	M3 maximum output voltage / Maximum voltage limit value	80–999V
A154	2436h	M3 slip compensation control	–20.000–0.000–5.000Hz
A155	2437h	M3 torque boost	0.0–20.0
A156	2438h	M3 current vibration ppressing gain	0.00–0.20–1.00
A159	243Bh	M3 ABS signal input definition	0–16
A160	243Ch	M3 magnetic pole position offset	0.0–359.9
A161	243Dh	M3 salient pole ratio (%Xq/%Xd)	1.000–3.000
A164	2440h	M3 overcurrent protection level	0.00, 0.01–2000A

O: Optional Functions

Function code	Communications address 485No. Link No.	Name	Setting range
o01	601h	DIA function selection	0–1
o02	602h	DIB function selection	0–1
o03	603h	DIA BCD input setting	99–1000–7999
o04	604h	DIB BCD input setting	99–1000–7999
o05	605h	PG (PD) option setting (feedback pulse selection)	0–2

Function setting

indicates the factory setting.

Function code	Communications address		Name	Setting range
	485No.	Link No.		
o06	606h		PG(LD) option setting Digital line speed detection definition (encoder pulse number)	100—1024—60000P/R
o07	607h		PG(LD)option setting Digital line speed detection definition (detection pulse correction 1)	1—1000—9999
o08	608h		PG(LD)option setting Digital line speed detection definition (detection pulse correction 2)	1—1000—9999
o09	609h		M1 ABS signal input definition	0—16
o10	60Ah	247(F7h)	M1 magnetic pole position offset	0.0—359.9
o11	60Bh		M1 salient pole ratio (%Xq/%Xd)	1.000—3.000
o12	60Ch	248(F8h)	PG(PR) pulse train option setting Command pulse selection	0—1
o13	60Dh	249(F9h)	PG(PR) pulse train option setting Pulse train input format selection	0—2
o14	60Eh	250(FAh)	PG(PR) pulse train option setting Command pulse correction 1	1—1000—9999
o15	60Fh		PG(PR) pulse train option setting Command pulse correction 2	1—1000—9999
o16	610h		PG(PR) pulse train option setting APR gain 1	0.1—1.0—999.9(times)
o17	611h		PG(PR) pulse train option setting F/F gain 1	0.0—1.5(times)
o18	612h		PG(PR) pulse train option setting Deviation over width	0—65535 pulse
o19	613h	253(FDh)	PG(PR) pulse train option setting Deviation zero width	0—20—1000pulse
o29	61Dh		Operation continuing signal mode selection on alarm	0—2
o30	61Eh		Operation at communication error	0—9
o31	61Fh		Operation time at communication error	0.01—0.10—20.00s
o32	620h		Transmission format	0—4
o33	621h		Multiwinding system	0—1
o34	622h		Number of multiwinding system slave stations	1—5
o50	632h		Multiwinding system (MWS) station no. setting	0—9

L:Lift Functions

Function code	Communications address		Name	Setting range
	485No.	Link No.		
L01	901h		Password data 1	0—9999
L02	902h		Password data 2	0—9999
L03	903h		Elevating machine rated speed	0.0—100.0—999.9m/min
L04	904h		Fixed S-curve pattern	0—2
L05	905h		S-curve setting 1	0—50%
L06	906h		S-curve setting 2	0—50%
L07	907h		S-curve setting 3	0—50%
L08	908h		S-curve setting 4	0—50%
L09	909h		S-curve setting 5	0—50%
L10	90Ah		S-curve setting 6	0—50%
L11	90Bh		S-curve setting 7	0—50%
L12	90Ch		S-curve setting 8	0—50%
L13	90Dh		S-curve setting 9	0—50%
L14	90Eh		S-curve setting 10	0—50%
L15	90Fh		Reserved	0—1

You can change the setting of the functions indicated with during operation. Stop the operation before changing other functions.

U:User Functions

Function code	Communications address		Name	Setting range
	485No.	Link No.		
U01	B01h	219(DBh)	USER P1	-32768—0—32767
U02	B02h	220(DCh)	USER P2	-32768—0—32767
U03	B03h	221(DDh)	USER P3	-32768—0—32767
U04	B04h	222(DEh)	USER P4	-32768—0—32767
U05	B05h	223(DFh)	USER P5	-32768—0—32767
U06	B06h	224(E0h)	USER P6	-32768—0—32767
U07	B07h	225(E1h)	USER P7	-32768—0—32767
U08	B08h	226(E2h)	USER P8	-32768—0—32767
U09	B09h	227(E3h)	USER P9	-32768—0—32767
U10	B0Ah	228(E4h)	USER P10	-32768—0—32767
U11	B0Bh		USER P11	-32768—0—32767
U12	B0Ch		USER P12	-32768—0—32767
U13	B0Dh		USER P13	-32768—0—32767
U14	B0Eh		USER P14	-32768—0—32767
U15	B0Fh		USER P15	-32768—0—32767
U16	B10h		USER P16	-32768—0—32767
U17	B11h		USER P17	-32768—0—32767
U18	B12h		USER P18	-32768—0—32767
U19	B13h		USER P19	-32768—0—32767
U20	B14h		USER P20	-32768—0—32767
U21	B15h		USER P21	-32768—0—32767
U22	B16h		USER P22	-32768—0—32767
U23	B17h		USER P23	-32768—0—32767
U24	B18h		USER P24	-32768—0—32767
U25	B19h		USER P25	-32768—0—32767
U26	B1Ah		USER P26	-32768—0—32767
U27	B1Bh		USER P27	-32768—0—32767
U28	B1Ch		USER P28	-32768—0—32767
U29	B1Dh		USER P29	-32768—0—32767
U30	B1Eh		USER P30	-32768—0—32767
U31	B1Fh		USER P31	-32768—0—32767
U32	B20h		USER P32	-32768—0—32767
U33	B21h		USER P33	-32768—0—32767
U34	B22h		USER P34	-32768—0—32767
U35	B23h		USER P35	-32768—0—32767
U36	B24h		USER P36	-32768—0—32767
U37	B25h		USER P37	-32768—0—32767
U38	B26h		USER P38	-32768—0—32767
U39	B27h		USER P39	-32768—0—32767
U40	B28h		USER P40	-32768—0—32767
U41	B29h		USER P41	-32768—0—32767
U42	B2Ah		USER P42	-32768—0—32767
U43	B2Bh		USER P43	-32768—0—32767
U44	B2Ch		USER P44	-32768—0—32767
U45	B2Dh		USER P45	-32768—0—32767
U46	B2Eh		USER P46	-32768—0—32767
U47	B2Fh		USER P47	-32768—0—32767
U48	B30h		USER P48	-32768—0—32767
U49	B31h		USER P49	-32768—0—32767
U50	B32h		USER P50	-32768—0—32767
U51	B33h		USER P51	-32768—0—32767
U52	B34h		USER P52	-32768—0—32767
U53	B35h		USER P53	-32768—0—32767
U54	B36h		USER P54	-32768—0—32767
U55	B37h		USER P55	-32768—0—32767
U56	B38h		USER P56	-32768—0—32767
U57	B39h		USER P57	-32768—0—32767
U58	B3Ah		USER P58	-32768—0—32767
U59	B3Bh		USER P59	-32768—0—32767
U60	B3Ch		USER P60	-32768—0—32767



■ indicates the factory setting.

Function code	Communications address	Name	Setting range
	485No. Link No.		
U61	B3Dh 75(4Bh)	USER P61/U-Ai1	-32768 – 0 – 32767
U62	B3Eh 76(4Ch)	USER P62/U-Ai2	-32768 – 0 – 32767
U63	B3Fh 77(4Dh)	USER P63/U-Ai3	-32768 – 0 – 32767
U64	B40h 78(4Eh)	USER P64/U-Ai4	-32768 – 0 – 32767

The function codes "S" and "M" are codes to access the inverter through links (RS-485 communications, T-Link, SX bus, etc). Therefore, they cannot be operated with the KEYPAD panel.

Though you can access the codes "F", "E", and "C" through these links, these links are specifically designed to access the code "S" for operation and control and the "M" for data monitoring.

S:Serial Communication Functions

Function code	Communications address	Name	Setting range
	485No. Link No.		
S01	701h 1(1h)	Frequency/ speed reference (Setting 1)	-30000 – 30000 r/m : (data)*Nmax/20000
S02	702h 2(2h)	Torque reference	0.01% / 1d
S03	703h 3(3h)	Torque current reference	0.01% / 1d
S04	704h 4(4h)	Magnetic-flux reference	0.01% / 1d
S05	705h 5(5h)	Orientation position reference	0000 – FFFF
S06	706h 6(6h)	Operation method 1	0000 – FFFF
S07	707h 7(7h)	Universal Do	0000 – FFFF
S08	708h 8(8h)	Acceleration time	0.01 – 3600.0 s
S09	709h 9(9h)	Deceleration time	0.01 – 3600.0 s
S10	70Ah 10(Ah)	Torque limiter level 1	0.01% / 1d
S11	70Bh 11(Bh)	Torque limiter level 2	0.01% / 1d
S12	70Ch 12(Ch)	Operation method 2	0000 – FFFF
S13	70Dh	Universal Ao	-16384 – 16384
S16	710Eh	General purpose setting 1	-32768 – 32767
S17	711Fh	General purpose setting 2	-32768 – 32767

M:Monitoring Functions

Function code	Communications address	Name	Setting range
	485No. Link No.		
M01	801h 15(Fh)	Speed setting 4 (ASR input)	-30000 – 30000 r/m : (data)*Nmax/20000
M02	802h 16(10h)	Torque reference	0.01% / 1d
M03	803h 17(11h)	Torque current reference	0.01% / 1d
M04	804h 18(12h)	Magnetic-flux reference	0.01% / 1d
M05	805h 19(13h)	Output frequency reference	0.1Hz / 1d
M06	806h 20(14h)	Detected speed value	-30000 – 30000 r/m : (data)*Nmax/20000
M07	807h 21(15h)	Calculated torque value	0.01% / 1d
M08	808h 22(16h)	Calculated torque current value	0.01% / 1d
M09	809h 23(17h)	Output frequency	0.1Hz / 1d
M10	80Ah 24(18h)	Motor output	0.1kW / 1d
M11	80Bh 25(19h)	Output current rms value	0.1A / 1d
M12	80Ch 26(1Ah)	Output voltage rms value	0.1V / 1d
M13	80Dh 27(1Bh)	Operation method (final command)	0000 – FFFF
M14	80Eh 28(1Ch)	Operation status	0000 – FFFF
M15	80Fh 29(1Dh)	Output terminals Y1 - Y18	0000 – FFFF
M16	810h 30(1Eh)	Latest alarm (multiple, cause)	0000 – 552F
M17	811h 31(1Fh)	Latest alarm data	0000 – 552F
M18	812h 32(20h)	Last alarm data	0000 – 552F
M19	813h 33(21h)	Second last alarm data	0000 – 552F
M20	814h 34(22h)	Accumulated operation time	0 – 65535 h
M21	815h 35(23h)	DC link circuit voltage	1V / 1d
M22	816h 36(24h)	Motor temperature	1°C / 1d
M23	817h 37(25h)	Type code	0000 – FFFF

You can change the setting of the functions indicated with ■ during operation. Stop the operation before changing other functions.

Function code	Communications address	Name	Setting range
	485No. Link No.		
M24	818h 38(26h)	Capacity code	0 – 34
M25	819h 39(27h)	Inverter ROM (main control) version	0000 – FFFF
M26	81Ah 40(28h)	Communications error code	0000 – FFFF
M27	81Bh 41(29h)	Alarm (latest): speed reference value	-30000 – 30000 r/m : (data)*Nmax/20000
M28	81Ch 42(2Ah)	Alarm (latest): torque reference value	0.01% / 1d
M29	81Dh 43(2Bh)	Alarm (latest): torque reference value	0.01% / 1d
M30	81Eh 44(2Ch)	Alarm (latest): magnetic-flux reference value	0.01% / 1d
M31	81Fh 45(2Dh)	Alarm (latest): output frequency reference value	0.1Hz / 1d
M32	820h 46(2Eh)	Alarm (latest): detected speed	-30000 – 30000 r/m : (data)*Nmax/20000
M33	821h 47(2Fh)	Alarm (latest): calculated torque	0.01% / 1d
M34	822h 48(30h)	Alarm (latest): calculated torque current	0.01% / 1d
M35	823h 49(31h)	Alarm (latest): output frequency	0.1Hz / 1d
M36	824h 50(32h)	Alarm (latest): motor output	0.1kW / 1d
M37	825h 51(33h)	Alarm (latest): output current rms value	0.1A / 1d
M38	826h 52(34h)	Alarm (latest): output voltage rms value	0.1V / 1d
M39	827h 53(35h)	Alarm (latest): operation method	0000 – FFFF
M40	828h 54(36h)	Alarm (latest): operation status	0000 – FFFF
M41	829h 55(37h)	Alarm (latest): output signal	0000 – FFFF
M42	82Ah 56(38h)	Alarm (latest): accumulated operation time	0 – 65535 h
M43	82Bh 57(39h)	Alarm (latest): DC link voltage	1V / 1d
M44	82Ch 58(3Ah)	Alarm (latest): inverter internal temperature	1°C / 1d
M45	82Dh 59(3Bh)	Alarm (latest): heat sink temperature	1°C / 1d
M46	82Eh 60(3Ch)	Main circuit capacitor capacity	0 – 100 %
M47	82Fh 61(3Dh)	PC board capacitor life	0 – 65535(10h)
M48	830h 62(3Eh)	Cooling fan life	0 – 65535(10h)
M49	831h 63(3Fh)	Speed setting 1 (before multistep speed command)	-30000 – 30000 r/m : (data)*Nmax/20000
M50	832h 64(40h)	Speed setting 2 (before calculation of accel./decel.)	-30000 – 30000 r/m : (data)*Nmax/20000
M51	833h 65(41h)	Speed setting 3 (after speed limit)	-30000 – 30000 r/m : (data)*Nmax/20000
M52	834h 66(42h)	Control output 1	0000 – FFFF
M53	835h 67(43h)	Control output 2	0000 – FFFF
M54	836h 68(44h)	Control output 3	0000 – FFFF
M55	837h 69(45h)	Option monitor 1	0000 – FFFF
M56	838h 70(46h)	Option monitor 2	0000 – FFFF
M57	839h 71(47h)	Option monitor 3	0 – 65535
M58	83Ah 72(48h)	Option monitor 4	0 – 65535
M59	83Bh 73(49h)	Option monitor 5	-32768 – 32767
M60	83Ch 74(4Ah)	Option monitor 6	-32768 – 32767
M61	83Dh	Current date: year/month	0000 to FFFF Upper 2-digit: year, lower 2-digit: month
M62	83Eh	Current date: day/time	0000 to FFFF Upper 2-digit: day, lower 2-digit: time
M63	83Fh	Current date: min/sec	0000 to FFFF Upper 2-digit: minute, lower 2-digit: second
M64	840h	Alarm (latest): occurrence date: year/month	0000 to FFFF Upper 2-digit: year, lower 2-digit: month
M65	841h	Alarm (latest): occurrence date: day/time	0000 to FFFF Upper 2-digit: day, lower 2-digit: time
M66	842h	Alarm (latest): occurrence date: min/sec	0000 to FFFF Upper 2-digit: minute, lower 2-digit: second
M67	843h	Alarm (latest): canceled date: year/month	0000 to FFFF Upper 2-digit: year, lower 2-digit: month
M68	844h	Alarm (latest): canceled date: day/time	0000 to FFFF Upper 2-digit: day, lower 2-digit: time
M69	845h	Alarm (latest): canceled date: min/sec	0000 to FFFF Upper 2-digit: minute, lower 2-digit: second
M70	846h	Alarm (latest): extension identification	0 – 1
M71	847h	Multiple alarm (latest): no.2	0000 – FFFF

Function setting

indicates the factory setting.

Function code	Communications address		Name	Setting range
	485No.	Link No.		
M72	848h		Multiple alarm (latest): no.3	0000 – FFFF
M73	849h		Multiple alarm (latest): no.4	0000 – FFFF
M74	84Ah		Multiple alarm (latest): no.5	0000 – FFFF
M75	84Bh		Alarm (latest): sub code	0000 – FFFF
M76	84Ch		Alarm (latest): maximum speed	0 – 65535 r/m
M77	84Dh		Alarm (latest): input power	0 – 65535 kW
M78	84Eh		Alarm (latest): motor temperature	1°C / 1d
M79	84Fh		Alarm (latest): operation status 2 (a)	0000 – FFFF
M80	850h		Alarm (latest): operation status 2 (b)	0000 – FFFF
M81	851h		Alarm (latest): operation method (communications)	0000 – FFFF
M82	852h		Alarm (latest): operation method 2 (communications)	0000 – FFFF
M83	853h		Alarm (latest): output signal 2	0000 – FFFF
M84	854h		Alarm (latest): M1 number of starts	0 – 65535 (times)
M85	855h		Alarm (latest): M2 number of starts	0 – 65535 (times)
M86	856h		Alarm (latest): M3 number of starts	0 – 65535 (times)
M87	857h		Alarm (latest): EN terminal input	0000 – FFFF
M91	85Bh		Communications error flag 1	0000 – FFFF
M92	85Ch		Communications error flag 2	0000 – FFFF
M93	85Dh		Minor fault (latest)	0 – 255
M94	85Eh		Minor fault (last)	0 – 255
M95	85Fh		Minor fault (second last)	0 – 255
M96	860h		Minor fault (third last)	0 – 255
M98	862h		EN terminal input	0000 – FFFF
M100	2900h		Effective parameter set condition	0000 – FFFF
M101	2901h		Operation method 2 (final command)	0000 – FFFF
M102	2902h		Load factor	-327.68 – 327.67 %
M103	2903h		Input power	0.00 – 655.35 %
M104	2904h		Operation status 2 (a)	0000 – FFFF
M105	2905h		Operation status 2 (b)	0000 – FFFF
M106	2906h		Load rotation detected speed	-30000 – 30000 r/m
M107	2907h		Line detected speed	-30000 – 30000 r/m
M108	2908h		PID command value	-327.68 – 327.67 %
M109	2909h		PID feedback value	-327.68 – 327.67 %
M110	290Ah		PID output value	-327.68 – 327.67 %
M112	290Ch		Motor 1 electronic internal thermal part Integrated value output	0 – 65535 %
M113	290Dh		Motor 2 electronic internal thermal part Integrated value output	0 – 65535 %
M114	290Eh		Motor 3 electronic internal thermal part Integrated value output	0 – 65535 %
M115	290Fh		Integral power consumption	0.000 – 9999
M116	2910h		Integral power data	0.000 – 9999
M117	2911h		Integral power consumption (middle-order: 16 bit)	0000 – FFFF
M118	2912h		Integral power consumption (high-order: 16 bit)	0000 – FFFF
M119	2913h		Inverter internal temperature (real-time value)	-32768 – 32767 °C
M120	2914h		Heat sink temperature (real-time value)	-32768 – 32767 °C
M121	2915h		Main circuit capacitor life (elapsed time)	0 – 65535 [10h]
M123	2917h		M1 number of starts	0 – 65535 (times)
M124	2918h		M2 number of starts	0 – 65535 (times)
M125	2919h		M3 number of starts	0 – 65535 (times)
M126	291Ah		M1 motor accumulated operation time	0 – 65535 [10h]
M127	291Bh		M2 motor accumulated operation time	0 – 65535 [10h]
M128	291Ch		M3 motor accumulated operation time	0 – 65535 [10h]
M129	291Dh		Running operation command (communications)	0000 – FFFF
M130	291Eh		Torque bias	-32768 – 32767
M131	291Fh		Magnetic pole position signal	-32767 – 32767
M132	2920h		Universal AO1	0000 – FFFF
M134	2922h		Control input 1	0000 – FFFF
M135	2923h		Control input 2	0000 – FFFF
M136	2924h		Control input 3	0000 – FFFF

You can change the setting of the functions indicated with during operation. Stop the operation before changing other functions.

Function code	Communications address		Name	Setting range
	485No.	Link No.		
M137	2925h		Control input 4	0000 – FFFF
M138	2926h		Control input 5	0000 – FFFF
M139	2927h		Control input 6	0000 – FFFF
M140	2928h		Control input 7	0000 – FFFF
M141	2929h		Control input 8	0000 – FFFF
M142	292Ah		Control output 4	0000 – FFFF
M143	292Bh		Control output 5	0000 – FFFF
M144	292Ch		Control output 6	0000 – FFFF
M147	292Fh		Exciting current command	-327.68 – 327.67 %
M148	2930h		Exciting current detection	-327.68 – 327.67 %
M149	2931h		Magnetic-flux calculation	0.00 – 655.35 %
M161	293Dh		Ai adjustment value (12)	-32768 – 32767
M162	293Eh		Ai adjustment value (Ai1)	-32768 – 32767
M163	293Fh		Ai adjustment value (Ai2)	-32768 – 32767
M164	2940h		Ai adjustment value (Ai3)	-32768 – 32767
M165	2941h		Ai adjustment value (Ai4)	-32768 – 32767
M166	2942h		Input signal (terminal)	0000 – FFFF
M167	2943h		Analog input signal (12)	-32768 – 32767
M168	2944h		Analog input signal (Ai1)	-32768 – 32767
M169	2945h		Analog input signal (Ai2)	-32768 – 32767
M170	2946h		Analog output signal (Ao1)	-32768 – 32767
M171	2947h		Analog output signal (Ao2)	-32768 – 32767
M172	2948h		Analog output signal (Ao3)	-32768 – 32767
M173	2949h		AIO I/O status 1 (Ai3)	-32767 – 32767
M174	294Ah		AIO I/O status 1 (Ai4)	-32767 – 32767
M175	294Bh		AIO I/O status 1 (Ao4)	-32767 – 32767
M176	294Ch		AIO I/O status 1 (Ao5)	-32767 – 32767
M177	294Dh		PG(SD) input pulse	-32768 – 32767
M178	294Eh		PG(LD) input pulse	-32768 – 32767
M179	294Fh		PG(PR) input pulse	-32768 – 32767
M180	2950h		PG(PD) input pulse	-32768 – 32767
M181	2951h		DIOA I/O status (terminal)	0000 – FFFF
M182	2952h		DIOA I/O status (via communications)	0000 – FFFF
M183	2953h		DIOB option input status	0000 – FFFF
M184	2954h		DIOB option output status	0000 – FFFF
M220	2A14h		Load adaptive speed limit value	-30000 – 30000 r/m
M221	2A15h		Lifting weight calculated result monitor	0 – 65535 kg
M222	2A16h		Travel torque calculation monitor	0 – 65535 %



Option guides

For main power input and inverter output

Ferrite ring for reducing radio noise
[ACL-40B, ACL-74B, F200160]

Used to reduce radio noise. Suppressive effect to the frequency band is available by approximately 1MHz or more. This is appropriate as a simple measure against noise since it affects broad range in the frequency band.

It is recommended to insert it on the power supply side if the cable length between a motor and an inverter is short (roughly 20m or less) or on the output side if the cable length exceeds 20m.

EMC compliance filter (coming soon)
[EFL-□□□, FS□□, FN□□]

Dedicated filter to comply with the European EMC Directive (Emission). Install the filter while referring to the details in the installation manual.

Power filter for input circuit *Technica*
[RNF□C□□-□□]

This filter can be used for the same purpose as the EMC compliance filter, but is not an EMC compliance.

Filter capacitor for reducing radio noise *Technica*
[NFM□□M315KPD□]

Used to reduce radio noise. This is effective for the AM radio frequency band.

*Do not use it on the inverter output side.

[Made by Nippon Chemi-con, dealt by Fuji Electric Technica]

Power filter for output circuit *Technica*
[RNF□S□□-□□]

This will become more effective in noise reduction if used together with the power filter for input circuit.

Output circuit filter [OFL-□□□-4A]

Connected to the output of an inverter to:

- Suppress fluctuations of motor terminal voltage.
- Prevent damages to the motor insulation due to surge voltage in 400V series inverter.

*This filter is not limited by carrier frequency. Also, motor can be tuned with this option in the installed state.

Surge suppression unit
[SSU □□□TA-NS]

Surge voltage is generated if the cable between an inverter and a motor is several ten meters long. This product suppresses the surge voltage, preventing the motor from being damaged.

Surge killer

Absorbs surge voltage coming from L-load of magnetic contactor and solenoid valve to protect electronic devices from malfunctioning.

Surge absorber *Technica*

(Connect in parallel to the coil that is a generation source of surge.)


[S2-A-0 (for magnetic contactor and solenoid valve)]
[S1-B-0 (for mini control relay and timer)]

Surge killer for L-load

(Connect to the power circuit that is a generation source of surge.)

[FSL-323 (for 3-phase)]

[FSL-123 (for single -phase)]

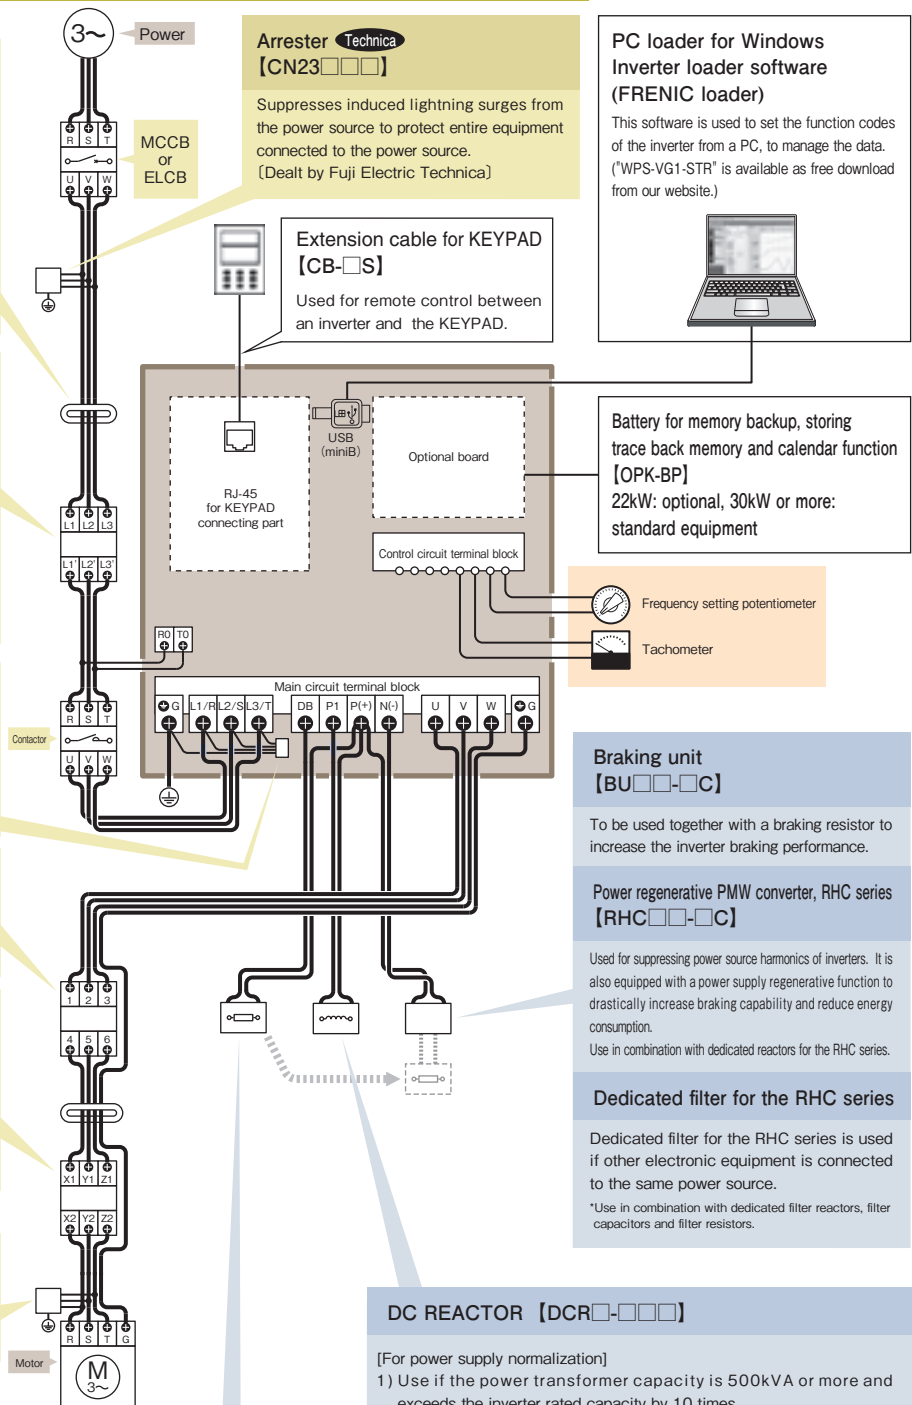
Braking resistor [DB□□V-□□]

Increases braking capability for highly frequent stopping and large moment of inertia. When used together with a braking unit, connect this to the connection terminal of the braking unit.

DC REACTOR [DCR□-□□□]

[For power supply normalization]

- 1) Use if the power transformer capacity is 500kVA or more and exceeds the inverter rated capacity by 10 times.
- 2) Use if the inverter and a thyristor converter are connected with the same transformer.
*Check if the thyristor converter uses a commutation reactor. If not, an AC reactor must be connected to the power supply side.
- 3) Connect to prevent trips when trip occurs due to opening/closing of the phase-advancing capacitor for the power supply lines.
- 4) Use if the voltage unbalance exceeds 2%.

[For improving the input power-factor and reducing harmonics]

- Used to reduce the input harmonic current (correcting power-factor)

PC loader for Windows
Inverter loader software
(FRENIC loader)

This software is used to set the function codes of the inverter from a PC, to manage the data. ("WPS-VG1-STR" is available as free download from our website.)


Battery for memory backup, storing
trace back memory and calendar function
[OPK-BP]

22kW: optional, 30kW or more: standard equipment

Frequency setting potentiometer

Tachometer

Braking unit
[BU□□-□C]

To be used together with a braking resistor to increase the inverter braking performance.

Power regenerative PMW converter, RHC series
[RHC□□-□C]

Used for suppressing power source harmonics of inverters. It is also equipped with a power supply regenerative function to drastically increase braking capability and reduce energy consumption.

Use in combination with dedicated reactors for the RHC series.

Dedicated filter for the RHC series

Dedicated filter for the RHC series is used if other electronic equipment is connected to the same power source.

*Use in combination with dedicated filter reactors, filter capacitors and filter resistors.

Peripheral and structure options

Attachment for external cooling

The attachment to install the heat sink part of the inverter outside the panel. [PBVG7-7.5 (for up to 7.5kW)] [PB-F1-30 (for 11 to 22kW)]

* The items indicated with * *Technica* are dealt by Fuji Electric Technica.

Options

Option cards

Category	Name	Type	Switch with SW on the PCB.	Specifications	Remarks	
Analog card	Synchronized operation card	OPC-VG1-SN		Synchronizing interface circuits for dancer control	coming soon	
	F/V converter	OPC-VG1-FV		F/V converter	coming soon	
	Aio extension card	OPC-VG1-AIO		Extension card of Ai 2 points + Ao 2 points	○	
	Ai extension card	OPC-VG1-AI		Extension card of Ai 2 points	○	
Digital card (for 8-bit bus)	Di interface card	OPC-VG1-DI	OPC-VG1-DI(A)	16-bit Di of binary or 4-digit BCD + sign	○	
			OPC-VG1-DI(B)	For setting the speed, torque and the torque current reference.	○	
	Dio extension card	OPC-VG1-DIO	OPC-VG1-DIO(A)	Extension of Di(4 bits) and Do(8 bits) for function selecting Dio option card for direct landing control. Di × 16 bit + Do × 10 bit	○	
			OPC-VG1-DIO(B)	UPAC exclusive use	coming soon	
	PG interface extension card	OPC-VG1-PG	OPC-VG1-PG(SD)	+5V line drivers type, voltage output PGs (A,B and Z-phase signals). Used for detecting motor speed, line speed, position reference and position detection.	○	
			OPC-VG1-PG(LD)		○	
			OPC-VG1-PG(PR)		○	
			OPC-VG1-PG(PD)		○	
		OPC-VG1-PGo	OPC-VG1-PGo(SD)	Open collector type voltage output PGs (A,B and Z-phase signals). Used for detecting motor speed, line speed, position reference and position detection.	○	
			OPC-VG1-PGo(LD)		○	
			OPC-VG1-PGo(PR)		○	
			OPC-VG1-PGo(PD)		○	
	OPC-VG1-SPGT		ABS encoder with 17-bit high resolution		○	
	T-Link interface card	OPC-VG1-TL		T-Link interface card		○
	CC-Link interface card	OPC-VG1-CCL		CC-Link compliant card (Ver2.00)		○
	PG card for synchronous motor driving	OPC-VG1-PMPG		+5V line drivers type	A, B + magnetic pole	○
		OPC-VG1-PMPGo		Open collector type	position (max. 4 bits)	○
Digital card (for 16-bit bus)	SX bus interface card	OPC-VG1-SX		SX bus interface card		○
	E-SX bus interface card	OPC-VG1-ESX		E-SX bus interface card		○
	User Programmable Application Card	OPC-VG1-UPAC		Technology card		coming soon
Safety card	Function safety card	OPC-VG1-SAFE		Safety standard compliant card		○
Fieldbus interface card	PROFIBUS-DP	OPC-VG1-PDP		PROFIBUS-DP interface card		coming soon
	DeviceNet	OPC-VG1-DEV		DeviceNet interface card		coming soon
Control circuit terminal	Terminal block for high-speed serial communications	OPC-VG1-TBSI		Used for multiple-winding motor drive system, reactor connection system		○
Loader	Inverter support loader	WPS-VG1-STR		For Windows. (Free version)		○
		WPS-VG1-PCL		For Windows. (Paid version)		○
Package software	Tension control software	WPS-VG1-TEN		For Windows.		coming soon
	Dancer control software	WPS-VG1-DAN		Supplied with inverter support loader (Paid)		coming soon
	Position control software	WPS-VG1-POS		CD-ROM.		coming soon

Cable

Category	Name	Type	Length(m)	Specifications
Cable	Extension cable for KEYPAD	CB-5S	5m	Connection cable between an inverter and the KEYPAD panel
		CB-3S	3m	
		CB-1S	1m	

Combination with built-in control option

Category	Maximum installable number			
	Pattern 1	Pattern 2	Pattern 3	Pattern 4
Digital card (8bit bus supported)	1	1	1	1
Digital card (8bit bus supported)	1	1	0	0
Digital card (16bit bus supported)	1	0	0	1

Restrictions for installing built-in option cards

- When you use OPC-VG1-PG for detecting motor speed, the input from the terminals (PA, PB) on the control PC board of the main unit is disabled.
- When you install OPC-VG1-PMPG, you should select terminals according to the control method. The terminals (PA, PB) on the control PC board of the main unit are enabled if vector control with the induction motor speed sensor is selected. The OPC-VG1-PMPG is enabled if vector control with the synchronous motor speed sensor is selected.
- You cannot use OPC-VG1-TL (T-Link interface) and OPC-VG1-CCL (CC-Link interface) simultaneously. If these are used at the same time, the operation procedure error (Er6) will be issued.
- You can select how to use OPC-VG1-PG, PGo with the switch setting on the control PC board.
You can install a pair of either OPC-VG1-PG, PGo. If the setting of the switches selecting how to use them are the same, the operation procedure error (Er6) will be issued.




Braking resistor, braking unit (max. 150% torque, 10%ED)

Power supply voltage	Nominal applied motor [kW]	Inverter type HD spec	Braking unit		Braking resistor			Continuous braking (150% torque conversion value)			Repetitive braking (100s or less cycle)																																																																							
			Type	Q'ty	Type	Ohmic value	Q'ty	Max. braking torque [%]	Braking time [s]	Discharging capability [kW]	Duty cycle [%ED]	Average loss [kW]																																																																						
200V	0.75	FRN0.75VG1S-2J	Built-in inverter		DB2.2V-21B	30Ω	1	150%	10s	16.5	10%ED	0.165																																																																						
	1.5	FRN1.5VG1S-2J																																																																																
	2.2	FRN2.2VG1S-2J																																																																																
	3.7	FRN3.7VG1S-2J																																																																																
	5.5	FRN5.5VG1S-2J																																																																																
	7.5	FRN7.5VG1S-2J																																																																																
	11	FRN11VG1S-2J																																																																																
	15	FRN15VG1S-2J																																																																																
	18.5	FRN18.5VG1S-2J																																																																																
	22	FRN22VG1S-2J																																																																																
	30	FRN30VG1S-2J																																																																																
	37	FRN37VG1S-2J																																																																																
	45	FRN45VG1S-2J																																																																																
	55	FRN55VG1S-2J																																																																																
	75	FRN75VG1S-2J	BU55-2C	2	DB75V-21C	2.4/2Ω	1	562.5	5.625																																																																									
90	FRN90VG1S-2J	BU90-2C	2	DB90V-21C	2/2Ω	1	675	6.75																																																																										
400V	3.7	FRN3.7VG1S-4J	Built-in inverter		DB3.7V-41B	96Ω	1	150%	10s	27.75	10%ED	0.2775																																																																						
	5.5	FRN5.5VG1S-4J											DB5.5V-41B	64Ω	1	41.25	0.4125																																																																	
	7.5	FRN7.5VG1S-4J																DB7.5V-41B	48Ω	1	56.25	0.5625																																																												
	11	FRN11VG1S-4J																					DB11V-41B	32Ω	1	82.5	0.825																																																							
	15	FRN15VG1S-4J																										DB15V-41B	24Ω	1	112.5	1.125																																																		
	18.5	FRN18.5VG1S-4J																															DB18.5V-41B	18Ω	1	138.75	1.3875																																													
	22	FRN22VG1S-4J																																				DB22V-41B	16Ω	1	165	1.65																																								
	30	FRN30VG1S-4J																																									DB30V-41B	10Ω	1	225	2.25																																			
	37	FRN37VG1S-4J																																														DB37V-41B	9Ω	1	277.5	2.775																														
	45	FRN45VG1S-4J																																																			DB45V-41B	8Ω	1	337.5	3.375																									
	55	FRN55VG1S-4J																																																								DB55V-41C	6.5Ω	1	412.5	4.125																				
	75	FRN75VG1S-4J																																																													DB75V-41C	4.7Ω	1	562.5	5.625															
	90	FRN90VG1S-4J																																																																		DB90V-41C	3.9Ω	1	675	6.75										
	110	FRN110VG1S-4J																																																																							DB110V-41C	3.2Ω	1	825	8.25					
	132	FRN132VG1S-4J																																																																												DB132V-41C	2.6Ω	1	990	9.9
	160	FRN160VG1S-4J																																																																																
	200	FRN200VG1S-4J	BU220-4C	2	DB200V-41C	3.5/2Ω	1	1500	15.0																																																																									
	220	FRN220VG1S-4J			DB220V-41C	3.2/2Ω	1	1650	16.5																																																																									
	280	FRN280VG1S-4J			DB160V-41C	2.2/2Ω	2	2100	21.0																																																																									
	315	FRN315VG1S-4J			DB160V-41C	2.2/2Ω	2	2363	23.6																																																																									
	355	FRN355VG1S-4J	BU220-4C	3	DB132V-41C	2.6/3Ω	3	2663	26.6																																																																									
	400	FRN400VG1S-4J			DB132V-41C	2.6/3Ω	3	3000	30.0																																																																									
	500	FRN500VG1S-4J			4	DB132V-41C	2.6/4Ω	4	3750	37.5																																																																								
	630	FRN630VG1S-4J				DB160V-41C	2.2/4Ω	4	4725	47.3																																																																								

NOTES:

- 1) The duty cycle [%ED] are calculated as the 150% torque braking used for deceleration as described below.
- 2) Two braking resistors are required for each of DB160V-41C, DB200V-41C, or DB220V-41C.
- 3) When connecting three braking units or more in parallel, refer to the supplement document of the DB Unit instruction manual (notes in connecting multiple units) INR-HF51614.

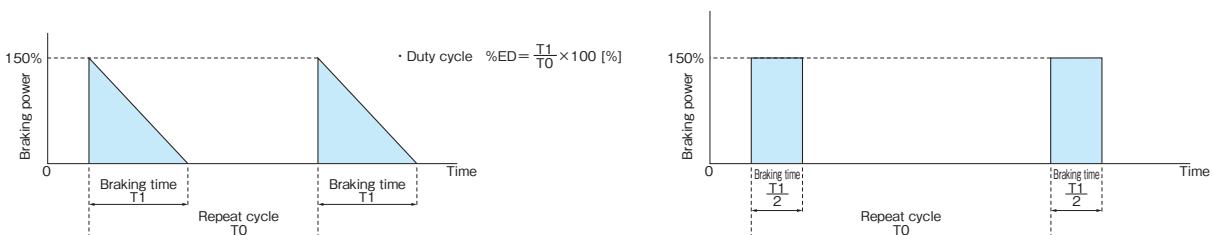


[Selection procedure]

All three conditions listed below must be satisfied simultaneously.

- ① The maximum braking torque does not exceed the value shown on the table.
- ② The energy discharged in the resistor for each braking (the area of the triangle shown in the above figure) does not exceed the discharging capability [kW] on the table.
- ③ The average loss (energy discharged in the resistor divided by the braking interval) does not exceed the average loss [kW] shown on the table.

Options

Braking resistor (max.150% torque, 10%ED)

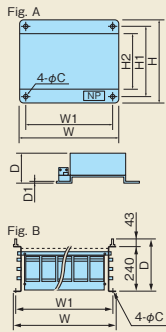

200V Series


Type	Fig.	Dimensions [mm]								Approx. weight [kg]
		W	W1	H	H1	H2	D	D1	C	
DB2.2V-21B		330	298	242	210	165	140	1.6	8	4
DB3.7V-21B		400	368	280	248	203	140	1.6	8	5
DB5.5V-21B		400	368	280	248	203	140	1.6	8	5
DB7.5V-21B		400	368	480	448	377	140	1.6	10	6
DB11V-21B		400	368	480	448	377	140	1.6	10	7
DB15V-21B	A	400	368	660	628	557	140	1.6	10	10
DB18.5V-21B		400	368	660	628	557	140	1.6	10	10
DB22V-21B		400	368	660	628	557	240	1.6	10	13
DB30V-21B		400	368	660	628	557	240	1.6	10	18
DB37V-21B		405	368	750	718	647	240	1.6	10	22
DB45V-21B		405	368	750	718	647	340	1.6	10	26
DB55V-21C		450	420	440	430	250	283	—	12	35
DB75V-21C	B	600	570	440	430	250	283	—	12	33
DB90V-21C		700	670	440	430	250	283	—	12	43

400V Series

Type	Fig.	Dimensions [mm]								Approx. weight [kg]
		W	W1	H	H1	H2	D	D1	C	
DB3.7V-41B		420	388	280	248	203	140	1.6	8	5
DB5.5V-41B		420	388	480	448	377	140	1.6	10	7
DB7.5V-41B		420	388	480	448	377	140	1.6	10	7
DB11V-41B		420	388	480	448	377	140	1.6	10	8
DB15V-41B		420	388	660	628	557	140	1.6	10	11
DB18.5V-41B	A	420	388	660	628	557	140	1.6	10	11
DB22V-41B		420	388	660	628	557	240	1.6	10	14
DB30V-41B		420	388	660	628	557	240	1.6	10	19
DB37V-41B		425	388	750	718	647	240	1.6	10	21
DB45V-41B		425	388	750	718	647	340	1.6	10	26
DB55V-41C		550	520	440	430	250	283	—	12	26
DB75V-41C		550	520	440	430	250	283	—	12	30
DB90V-41C		650	620	440	430	250	283	—	12	41
DB110V-41C	B	750	720	440	430	250	283	—	12	57
DB132V-41C		750	720	440	430	250	283	—	12	43
*DB160V-41C		600	570	440	430	250	283	—	12	37(x2)
*DB200V-41C		725	695	440	430	250	283	—	12	50(x2)
*DB220V-41C		725	695	440	430	250	283	—	12	51(x2)

* For DB160V-41C, DB200V-41C, and DB220V-41C, a pair of resistors of the same type is used.
Be sure to secure the space for installation. A pair of resistors is shipped for the order of one unit.

Braking unit (BU□□-□)

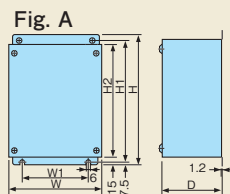


Voltage	Type	Fig.	Dimensions [mm]						Approx. weight [kg]
			W	W1	H	H1	H2	D	
200V series	BU55-2C	A	230	130	240	225	210	160	6
	BU90-2C	A	250	150	370	355	340		9
400V series	BU220-4C	A	250	150	450	435	420	160	13


Fan unit for braking unit (BU-F)



Fan unit

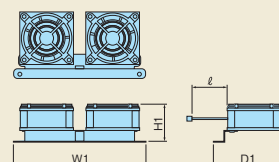

Braking unit + Fan unit

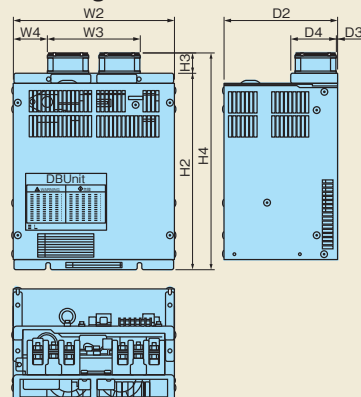

The duty cycle [%ED] of the model with an external braking unit is increased from 10%ED to 30%ED by using this option.

[Fan unit]

Type	Dimensions [mm]			
	W1	H1	D1	ℓ (Fan power supply cable)
BU-F	149	44	76	320

[Braking unit + Fan unit]

Voltage	Type	Dimensions [mm]							
		W2	W3	W4	H2	H3	H4	D2	D3
200V series	BU55-2C+BU-F	230	135	47.5	240	30	270	160	1.2
	BU90-2C+BU-F	250	135	57.5	370	30	400	160	1.2
400V series	BU220-4C+BU-F	250	135	57.5	450	30	480	160	1.2



DC REACTOR (DCR□-□□□)

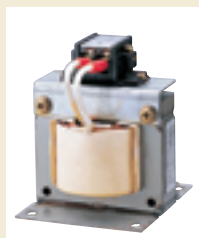


Fig. A

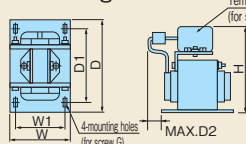


Fig. B

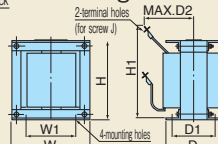


Fig. C

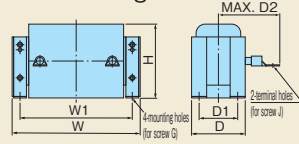


Fig. D

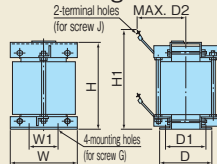


Fig. E


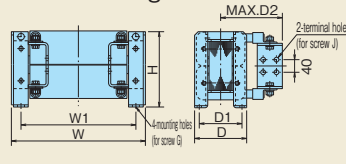


Fig. F

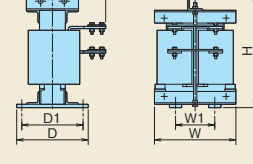

*The DC REACTOR is provided as standard in standard inverters of 75kW or more.






Voltage	Nominal applied motor [kW]	Inverter type			REACTOR type	Fig.	Dimensions [mm]										Approx. weight [kg]
		HD	MD	LD			W	W1	D	D1	D2	G	H	H1	J		
200V series	0.75	FRN0.75VG1S-2J	—	—	DCR2-0.75	A	66	56	90	72	20	M4(5.2×8)	94	—	M4	1.4	
	1.5	FRN1.5VG1S-2J	—	—	DCR2-1.5		66	56	90	72	20	M4(5.2×8)	94	—	M4	1.6	
	2.2	FRN2.2VG1S-2J	—	—	DCR2-2.2		86	71	100	80	10	M5(6×9)	110	—	M4	1.8	
	3.7	FRN3.7VG1S-2J	—	—	DCR2-3.7		86	71	100	80	20	M5(6×9)	110	—	M4	2.6	
	5.5	FRN5.5VG1S-2J	—	—	DCR2-5.5		111	95	100	80	20	M6(7×11)	130	—	M5	3.6	
	7.5	FRN7.5VG1S-2J	—	—	DCR2-7.5		111	95	100	80	23	M6(7×11)	130	—	M5	3.8	
	11	FRN11VG1S-2J	—	—	DCR2-11		111	95	100	80	24	M6(7×11)	137	—	M6	4.3	
	15	FRN15VG1S-2J	—	—	DCR2-15		146	124	120	96	15	M6(7×11)	180	—	M8	5.9	
	18.5	FRN18.5VG1S-2J	—	—	DCR2-18.5		146	124	120	96	25	M6(7×11)	180	—	M8	7.4	
	22	FRN22VG1S-2J	—	—	DCR2-22A		146	124	120	96	25	M6(7×11)	180	—	M8	7.5	
	30	FRN30VG1S-2J	—	—	DCR2-30B	152	90	156	116	115	M6(Φ8)	130	190	M10	12		
	37	FRN37VG1S-2J	—	FRN30VG1S-2J	DCR2-37B	171	110	151	110	115	M6(Φ8)	150	200	M10	14		
			DCR2-37C		C	210	185	101	81	125	M6(7×13)	125	—	M10	7.4		
	45	FRN45VG1S-2J	—	FRN37VG1S-2J	DCR2-45B	B	171	110	166	125	120	M6(Φ8)	150	200	M10	16	
			DCR2-45C		C	210	185	106	86	135	M6(7×13)	125	—	M12	8.4		
	55	FRN55VG1S-2J	—	FRN45VG1S-2J	DCR2-55B	D	190	160	131	90	100	M6(Φ8)	210	250	M12	16	
			DCR2-55C		C	255	225	96	76	140	M6(7×13)	145	—	M12	11		
75	FRN75VG1S-2J	—	FRN55VG1S-2J	DCR2-75C	C	255	225	106	86	145	M6(7×13)	145	—	M12	12		
90	FRN90VG1S-2J	—	FRN75VG1S-2J	DCR2-90C		255	225	116	96	155	M6(7×13)	145	—	M12	14		
110	—	—	FRN90VG1S-2J	DCR2-110C		300	265	116	90	185	M8(10×18)	160	—	M12	17		
400V series	3.7	FRN3.7VG1S-4J	—	—	DCR4-3.7	A	86	71	100	80	20	M5(6×9)	110	—	M4	2.6	
	5.5	FRN5.5VG1S-4J	—	—	DCR4-5.5		86	71	100	80	20	M5(6×9)	110	—	M4	2.6	
	7.5	FRN7.5VG1S-4J	—	—	DCR4-7.5		111	95	100	80	24	M6(7×11)	130	—	M5	4.2	
	11	FRN11VG1S-4J	—	—	DCR4-11		111	95	100	80	24	M6(7×11)	130	—	M5	4.3	
	15	FRN15VG1S-4J	—	—	DCR4-15		146	124	120	96	15	M6(7×11)	168	—	M5	5.9	
	18.5	FRN18.5VG1S-4J	—	—	DCR4-18.5		146	124	120	96	25	M6(7×11)	171	—	M6	7.2	
	22	FRN22VG1S-4J	—	—	DCR4-22A		146	124	120	96	25	M6(7×11)	171	—	M6	7.2	
	30	FRN30VG1S-4J	—	—	DCR4-30B	B	152	90	157	115	100	M6(Φ8)	130	190	M8	13	
	37	FRN37VG1S-4J	—	FRN30VG1S-4J	DCR4-37B	B	171	110	150	110	100	M6(Φ8)	150	200	M8	15	
			DCR4-37C		C	210	185	101	81	105	M6(7×13)	125	—	M8	7.4		
	45	FRN45VG1S-4J	—	FRN37VG1S-4J	DCR4-45B	B	171	110	165	125	110	M6(Φ8)	150	210	M8	18	
			DCR4-45C		C	210	185	106	86	120	M6(7×13)	125	—	M8	8.4		
	55	FRN55VG1S-4J	—	FRN45VG1S-4J	DCR4-55B	B	171	110	170	130	110	M6(Φ8)	150	210	M8	20	
			DCR4-55C		C	255	225	96	76	120	M6(7×13)	145	—	M10	11		
	75	FRN75VG1S-4J	—	FRN55VG1S-4J	DCR4-75C	C	255	225	106	86	125	M6(7×13)	145	—	M10	13	
	90	FRN90VG1S-4J	—	FRN75VG1S-4J	DCR4-90C		255	225	116	96	140	M6(7×13)	145	—	M12	15	
	110	FRN110VG1S-4J	FRN90VG1S-4J	FRN90VG1S-4J	DCR4-110C		300	265	116	90	175	M8(10×18)	155	—	M12	19	
	132	FRN132VG1S-4J	FRN110VG1S-4J	FRN110VG1S-4J	DCR4-132C		300	265	126	100	180	M8(10×18)	160	—	M12	22	
	160	FRN160VG1S-4J	FRN132VG1S-4J	FRN132VG1S-4J	DCR4-160C		350	310	131	103	180	M10(12×22)	190	—	M12	26	
	200	FRN200VG1S-4J	FRN160VG1S-4J	FRN160VG1S-4J	DCR4-200C		350	310	141	113	185	M10(12×22)	190	—	M12	30	
	220	FRN220VG1S-4J	FRN200VG1S-4J	FRN200VG1S-4J	DCR4-220C		350	310	146	118	200	M10(12×22)	190	—	M12	33	
	250	—	FRN220VG1S-4J	—	DCR4-250C	C	350	310	161	133	210	M10(12×22)	190	—	M12	35	
	280	FRN280VG1S-4J	—	FRN220VG1S-4J	DCR4-280C		350	310	161	133	210	M10(12×22)	190	—	M16	37	
	315	FRN315VG1S-4J	FRN280VG1S-4J	—	DCR4-315C		400	345	146	118	200	M10(12×22)	225	—	M16	40	
	355	FRN355VG1S-4J	FRN315VG1S-4J	FRN280VG1S-4J	DCR4-355C		400	345	156	128	200	M10(12×22)	225	—	4×M12	49	
	400	FRN400VG1S-4J	FRN355VG1S-4J	FRN315VG1S-4J	DCR4-400C		445	385	145	117	213	M10(12×22)	245	—	4×M12	52	
	450	—	FRN400VG1S-4J	FRN355VG1S-4J	DCR4-450C		440	385	150	122	215	M10(12×22)	245	—	4×M12	62	
500	FRN500VG1S-4J	—	FRN400VG1S-4J	DCR4-500C	445		390	165	137	220	M10(12×22)	245	—	4×M12	72		
630	FRN630VG1S-4J	—	FRN500VG1S-4J	DCR4-630C	F	285	145	203	170	195	M12(14×20)	480	—	2×M12	75		
710	—	—	FRN630VG1S-4J	DCR4-710C		340	160	295	255	225	M12(Φ15)	480	—	4×M12	95		

- The DC Reactor (DCR) in thick-frame are provided as standard (supplied adding to the unit). The DC Reactor (DCR) is provided as standard for FRN55VG1S-2 and FRN55VG1S-4 of the LD specification, but not provided as standard for those units of HD specification.

* The DCR2/4-□□B type is also prepared for the motor with 75kW or higher that are applicable as standard. Contact us for the product separately.

DC Reactor type	Remarks
Input power factor of DCR2/4-□□□□A/□□B: approx. 90 to 95% This conforms to the Standard Specifications for Public Building Construction Works (for electrical facility works) revised in 2010 which is administrated by Ministry of Land, Infrastructure, Transport and Tourism. (The input power factor is 94% or more when calculated assuming the base frequency is "1" based on the version of 2010.)	The symbol at the end of the type code varies depending on the capacity.
Input power factor of DCR2/4-□□C: approx. 86 to 90%	This can be selected with the inverter of 37kW or more.

Ferrite ring for reducing radio noise (ACL-40B, ACL-74B, F200160)

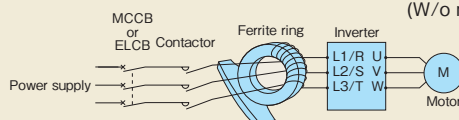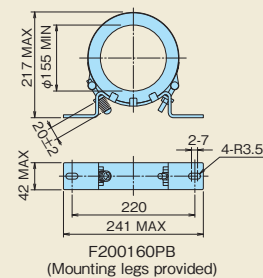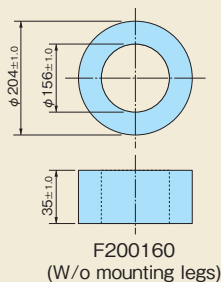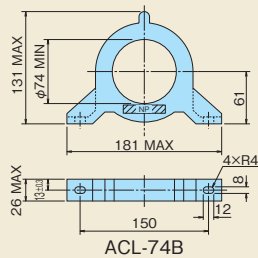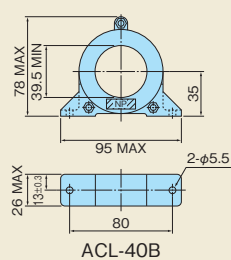

■ Recommended wire size

Ferrite ring types for reducing radio noise	Q'ty	No. of turns	Recommended wire size [mm ²] *)
ACL-40B	1	4	2.0, 3.5, 5.5
	2	2	8, 14
ACL-74B	1	4	8, 14
	2	2	22, 38, 60, 5.5×2, 8×2, 14×2, 22×2
	4	1	100, 150, 200, 250, 325, 38×2, 60×2, 100×2, 150×2
F200160	4	1	200×2, 250×2, 325×2, 325×3
F200160PB	4	1	200×2, 250×2, 325×2, 325×3

NOTE: *) Use a 600V HIV insulation cable (Allowable temp. 75°C).



Output circuit filter (OFL-□□□4A)[400V series]



■ Filter dimensions (22kW or less)

Fig.A

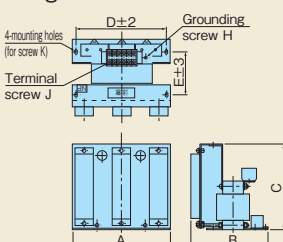


Fig.B

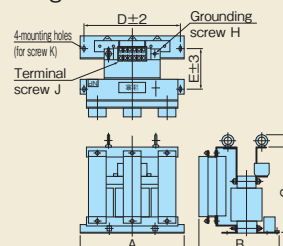


Fig.C

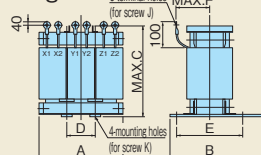


Fig.D

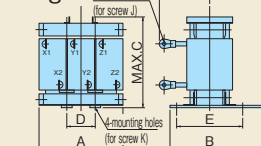


Fig.E


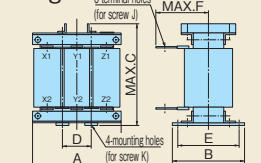



Fig.F

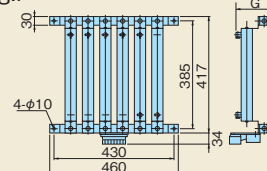

The reactor, capacitor and resistor for filter OFL-30-4A or larger have to be installed separately.

Those items are not included in the mass indicated in the table below. They are shipped as a set by ordering the filter.

Fig.G

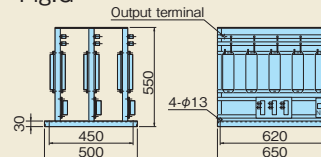

Voltage	Nominal applied motor [kW]	Inverter type			Filter type	Fig.	Dimensions [mm]										Approx. weight [kg]
		HD	MD	LD			A	B	C	D	E	F	G	Grounding screw H	Terminal screw J	Mounting screw K	
400V series	3.7	FRN3.7VG1S-4J	—	—	OFL-3.7-4A	A	220	225	220	200	115	—	—	M4	M4	M5	14
	5.5	FRN5.5VG1S-4J	—	—	OFL-7.5-4A		290	290	230	260	160	—	—	M5	M5	M6	22
	7.5	FRN7.5VG1S-4J	—	—	OFL-15-4A		330	275	310	300	145	—	—	M6	M6	M8	35
	11	FRN11VG1S-4J	—	—	OFL-22-4A	B	330	300	330	300	170	—	—	M6	M6	M8	45
	15	FRN15VG1S-4J	—	—	OFL-30-4A		210	175	210	70	140	90	160	—	M5	M6	12
	18.5	FRN18.5VG1S-4J	—	—	OFL-37-4A		220	190	220	75	150	95	160	—	M5	M6	15
	22	FRN22VG1S-4J	—	—	OFL-45-4A	C/F	220	195	265	70	155	140	160	—	M6	M8	17
	30	FRN30VG1S-4J	—	—	OFL-55-4A		260	200	275	85	160	150	160	—	M6	M8	22
	37	FRN37VG1S-4J	—	FRN30VG1S-4J	OFL-75-4A		260	210	290	85	170	150	233	—	M8	M10	25
	45	FRN45VG1S-4J	—	FRN37VG1S-4J	OFL-90-4A	D/F	260	210	290	85	170	155	233	—	M8	M10	28
	55	FRN55VG1S-4J	—	FRN45VG1S-4J	OFL-110-4A		300	230	330	100	190	170	233	—	M8	M10	38
	75	FRN75VG1S-4J	—	FRN55VG1S-4J	OFL-132-4A		300	240	340	100	200	170	233	—	M10	M10	42
	90	FRN90VG1S-4J	—	FRN75VG1S-4J	OFL-160-4A	E/G	300	240	340	100	200	180	233	—	M10	M10	48
	110	FRN110VG1S-4J	FRN90VG1S-4J	FRN90VG1S-4J	OFL-200-4A		320	270	350	105	220	190	333	—	M10	M12	60
	132	FRN132VG1S-4J	FRN110VG1S-4J	FRN110VG1S-4J	OFL-220-4A		340	300	390	115	250	190	333	—	M10	M12	70
	160	FRN160VG1S-4J	FRN132VG1S-4J	FRN132VG1S-4J	OFL-280-4A	E/G	350	300	430	115	250	200	333	—	M10	M12	78
	200	FRN200VG1S-4J	FRN160VG1S-4J	FRN160VG1S-4J	OFL-315-4A		440	275	450	150	230	170	—	—	M12	M12	90
	220	FRN220VG1S-4J	FRN200VG1S-4J	FRN200VG1S-4J	OFL-355-4A		440	290	480	150	245	175	—	—	M12	M12	100
	250	—	FRN220VG1S-4J	—	OFL-400-4A	E/G	440	295	510	150	240	175	—	—	M12	M12	110
	280	FRN280VG1S-4J	—	FRN220VG1S-4J	OFL-450-4A		440	325	470	150	270	195	—	—	M12	M12	125
	315	FRN315VG1S-4J	FRN280VG1S-4J	—	OFL-500-4A		440	335	500	150	280	210	—	—	M12	M12	145
	355	FRN355VG1S-4J	FRN315VG1S-4J	FRN280VG1S-4J	OFL-630-4A	E/G	480	355	560	150	280	245	—	—	M12	M12	170
	400	FRN400VG1S-4J	FRN355VG1S-4J	FRN315VG1S-4J	—		—	—	—	—	—	—	—	—	—	—	—
	450	—	FRN400VG1S-4J	—	—		—	—	—	—	—	—	—	—	—	—	—
	500	FRN500VG1S-4J	—	FRN400VG1S-4J	—		—	—	—	—	—	—	—	—	—	—	—
	630	FRN630VG1S-4J	—	FRN500VG1S-4J	—		—	—	—	—	—	—	—	—	—	—	—
	710	—	—	FRN630VG1S-4J	—		—	—	—	—	—	—	—	—	—	—	—

* Carrier frequency is not limited with OFL-***-4A.

Power regenerative PWM converter (RHC series)

Features

■ Possible to reduce power supply facility capacity

Its power-factor control realizes the same phase current as the power-supply phase-voltage. The equipment, thus, can be operated with the power-factor of almost "1."

This makes it possible to reduce the power transformer capacity and downsize the other devices, compared with those required without the converter.

■ Upgraded braking performance

Regenerated energy occurring at highly frequent accelerating and decelerating operation and elevating machine operation is entirely returned to power supply side.

Thus, energy saving during regenerative operation is possible.

As the current waveform is sinusoidal during regenerative operation, no troubles are caused to the power supply system.

Rated continuous regeneration :	100%
Rated regeneration for 1 min	150% (CT use)
	120% (VT use)

■ Enhanced maintenance/protective functions

•Failure can be easily analyzed with the trace back function (option).

- ①The past 10 alarms can be displayed with the 7-segment LEDs.

This helps you analyze the alarm causes and take countermeasures.

- ②When momentary power failure occurs, the converter shuts out the gate to enable continuous operation after recovery.

- ③The converter can issue warning signals like overload, heat sink overheating, or the end of service life prior to converter tripping.

■ Enhanced network support

•The converter can be connected to MICREX-SX, F series and CC-Link master devices (using option).

The RS-485 interface is provided as standard.




Comparison of input current waveform


<w/ PWM converter>



<w/o PWM converter>

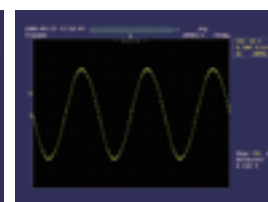

Allowable characteristics of the RHC unit

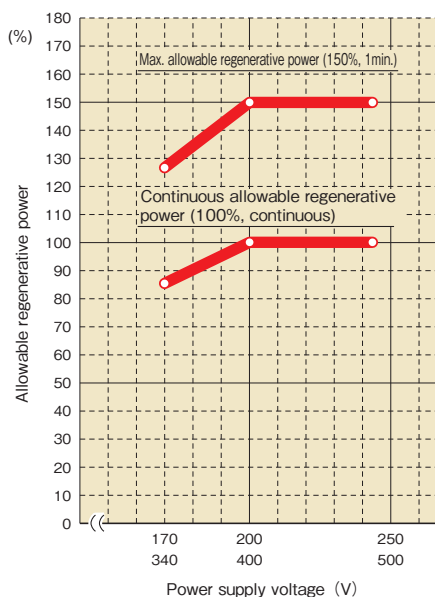



Standard specifications and Common specifications

Standard specifications

■ 200V series

Item			Standard specification										
Type RHC□□□-2C			200V series										
			7.5	11	15	18.5	22	30	37	45	55	75	90
CT use	Applicable inverter capacity[kW]		7.5	11	15	18.5	22	30	37	45	55	75	90
	Output	Continuous capacity[kW]	8.8	13	18	22	26	36	44	53	65	88	103
		Overload rating	150% of rated current for 1min.										
		Voltage 200V	DC320 to 355V (Variable with input power supply voltage) (*3)										
	Required power supply capacity[kVA]		9.5	14	19	24	29	38	47	57	70	93	111
	Carrier frequency		Standard 15kHz										Standard 10kHz
VT use	Applicable inverter capacity[kW]		11	15	18.5	22	30	37	45	55	75	90	110
	Output	Continuous capacity[kW]	13	18	22	26	36	44	53	65	88	103	126
		Overload capability	120% of rated current for 1min.										
		Voltage 200V	DC320 to 355V (Variable with input power supply voltage) (*3)										
	Required power supply capacity[kVA]		14	19	24	29	38	47	57	70	93	111	136
	Carrier frequency		Standard 10kHz										Standard 6kHz
Power supply voltage	Number of phase/Voltage/Frequency		3-phase 3-wire, 200 to 220V 50Hz,220 to 230V 50Hz(*1),200 to 230V 60Hz										
	Voltage/Frequency variation		Voltage+10 to -15%, Frequency ±5%, Voltage unbalance: 2% or less (*4)										

■ 400V series

Item			Standard specification																							
Type RHC□□□-4C			400V series																							
			7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	280	315	355	400	500	630		
CT use	Applicable inverter capacity[kW]		7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	280	315	355	400	500	630		
	Output	Continuous capacity[kW]	8.8	13	18	22	26	36	44	53	65	88	103	126	150	182	227	247	314	353	400	448	560	705		
		Overload rating	150% of rated current for 1min.																							
		Voltage 400V	DC640 to 710V (Variable with input power supply voltage) (*3)																							
	Required power supply capacity(kVA)		9.5	14	19	24	29	38	47	57	70	93	111	136	161	196	244	267	341	383	433	488	610	762		
	Carrier frequency		Standard 15kHz												Standard 10kHz										Standard 6kHz	
VT use	Applicable inverter capacity[kW]		11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	280	315	355	400	500				
	Output	Continuous capacity[kW]	13	18	22	26	36	44	53	65	88	103	126	150	182	227	247	314	353	400	448	560				
		Overload capability	120% of rated current for 1min.																							
		Voltage 400V	DC640 to 710V (Variable with input power supply voltage) (*3)																							
	Required power supply capacity(kVA)		14	19	24	29	38	47	57	70	93	111	136	161	196	244	267	341	383	433	488	610				
	Carrier frequency		Standard 10kHz												Standard 6kHz											
Power supply voltage	Number of phase/Voltage/Frequency		3-phase 3-wire, 380 to 440V 50Hz,380 to 460V 60Hz(*2)																							
	Voltage/Frequency variation		Voltage+15 to -10%, Frequency ±5%, Voltage unbalance: 2% or less(*4)																							

(*1) 220 to 230V/50Hz model available on request.

(*2) The tap in the converter must be switched when the power supply voltage is 380 to 398V/50Hz or 380 to 430V/60Hz. The capacity must be reduced when the power supply voltage is less than 400V.

(*3) The output voltage is 320/640 VDC, 343/686 VDC, 355/710 VDC when the power supply voltage is 200/400V, 220/440V and 230/460V, respectively.

(*4) Voltage unbalance [%] = (Max. voltage [V] - Min. voltage [V]) / Three-phase average voltage [V] × 67

Common specifications

Item		specification
Control	Control method	AVR constant control with DC ACR minor
	Running	Rectification starts with power ON after connected. Pressurization starts with the running signal (RUN-CM short-circuit or running command from communications). Then, preparation for operation is completed.
	Running status signal	Running, driving, regenerating, operation ready, alarm relay output (for any fault), etc.
	CT/VT switching	Selecting from CT: Overload rating 150% (1min.) and VT: Overload rating 120% (1min.)
	Carrier frequency	Fixed to high carrier frequency
	Input power factor	Above 0.99
	Input high-frequency current	According to the guideline for suppressing harmonics issued by the Ministry of Economy, Trade and Industry, the converter factor (Ki) can be set to 0.
	Restart mode after momentary power failure	Shields the gate when the voltage level reaches undervoltage level if momentary power failure occurs, and the converter can automatically restart after the power recovers.
Display	Power limit control	Controls the power not to exceed the preset limit value.
	Alarm display (protective functions)	AC fuse blown, AC overvoltage, AC undervoltage, AC overcurrent, AC input current error, Input phase loss, Synchronous power supply frequency error, DC fuse blown, DC overvoltage, DC undervoltage, Charge circuit error, Heat sink overheat, External alarm, Converter overheat, Overload, Memory error, Keypad communication error, CPU error, Network device error, Operation procedure error, A/D converter error, Optical network error, IPM error
	Alarm history	Records and displays the last 10 alarms. The detailed information of the trip cause for the previous alarm is stored and displayed.
	Monitor	Displays input power, input effective current, input effective voltage, DC intermediate current and power supply frequency.
	Load factor	The load rate can be measured by using the keypad.
	Display language	Function codes can be set or referred to in Japanese, English and Chinese (3 languages).
Charge lamp	Charge lamp	Lights when the main circuit condenser is charged.

Terminal Functions

Terminal Functions

Division	Symbol	Terminal name	Functions
Main circuit	L1/R, L2/S, L3/T	Power input	Connects with a three-phase power supply via the dedicated reactor.
	P(+), N(-)	Converter output	Connects with the inverter power supply input terminal P (+), N (-).
	E(G)	Grounding	Ground terminal for inverter chassis (housing).
	R0, T0	Auxiliary control power supply	Connects with the same power circuit as that for the control power backup terminal and the main power circuit.
Voltage detection	R1, S1, T1	Synchronous power supply input for voltage detection	Voltage detection terminals for controlling the inside of the converter. These are connected with the power supply side of the dedicated reactor and filter.
	R2, T2	Control monitor input	Terminals that connect with the circuit for detecting disconnection caused by blown AC fuse.
Input signal	RUN	RUN command	The converter starts running when this command is ON between RUN and CM, and stops when OFF.
	RST	Alarm reset command	In case of alarm stop, eliminate the cause and turn on this command between RST and CM. The protective function is disabled and the alarm state is released.
	X1	General-purpose transistor input	0: External fault [THR], 1: Current limit cancel [LMT-CCL], 2: 73 answerback [73ANS], 3: Current limit switching [1-LIM], 4: Optional DI [OPY-DI]
	CM	Digital input common	Common terminal for digital input signals.
	PLC	PLC signal power supply	Connects with the PLC output signal power supply. (Rated voltage: 24V (22 to 27V) DC)
Output signal	30A, 30B, 30C	Alarm relay output (for any fault)	Outputs a signal when a protective function is activated to stop the converter. (Contact at 1C, Circuit between 30A and 30C comes ON when an alarm occurs) (Contact capacity: 250V AC, max 50mA.)
	Y1, Y2, Y3, Y11 to Y18	General-purpose transistor output	0: Inverter running [RUN] 1: Operation ready output [RDY] 2: Power supply current limiting [IL] 3: Lifetime alarm [LIFE] 4: Cooling fin overload [PRE-OH] 5: Overload alarm [PRE-OL] 6: Driving [DRV] 7: Regenerating [REG] 8: Current limit alarm [CUR] 9: Under restart [U-RES] 10: Power supply frequency synchronizing [SY-HZ] 11: Alarm indication [AL1] 12: Alarm indication 2 [AL2] 13: Alarm indication 4 [AL4] 14: Optional D0 [OPT-D0]
	CME	Digital output common	* With OPC-VG-AO option, 8-point expanded functions become available (DI function is not available.)
	Y5A, Y5C	Relay output	0: Input power [PWR] 1: Input current rms [I-AC] 2: Input voltage rms [V-AC] 3: DC link circuit voltage [V-DC] 4: Power supply frequency [FREQ] 5: +10V output test [P10] -10V output test [N10]
	A01, A04, A05	General-purpose analog output	* With OPC-VG-AO option, 2-point expanded functions become available (Ai function is not usable.)
	M	Analog output common	Common terminal for analog input signals.
	73A, 73C	Charging resistance input relay output	Control output for the input relay of the external charging resistance (73)

Communications Specifications

Item	Specifications	
Communication specification	General specifications for communication	
	RS-485 (standard)	
	T-Link (optional)	
	SX bus (optional)	
	CC-Link (optional)	
	Trace back (optional)	
	Optical communications (optional)	
	Hardware	Enables to show running information and running status, and to monitor the function code (polling), and to control (selecting) RUN, RST, and X1. * No function code can be written.
	Software	Communicates with the PC or PLC (Fuji protocol and RTU are supported.)
		OPC-VG7-TL option allows T-Link communication with the T-Link module in the MICREX-F or MICREX-SX.
		OPC-VG7-SX option allows connection between SX bus and MICREX-SX.
		OPC-VG7-SX option allows connection with the CC-Link master device.
		OPC-RHC-TR option allows trace-back of the converter operation status data.
		The software (WPS-LD-TR) is required.
		WPS-RHC-TR software allows collecting the trace back data on the PC.
		OPC-VGS-SI option allows sharing the load of the concurrent multitasking system.
		Therefore, the capacity of up to 2400kW can be supported.

Function Settings

Function code	Name
F00	Data protection
F01	High-frequency filter selection
F02	Restart mode after momentary power failure (operation selection)
F03	Current rating switching
F04	LED monitor (Display selection)
F05	LCD monitor (Display selection)
F06	LCD monitor (Language selection)
F07	LCD monitor (Contrast adjusting)
F08	Carrier frequency
E01	X1 function selection
E02 to 13	Y1, Y2, Y3, Y5, Y11 to 18 function selection
E14	I/O function normally open/normally closed
E15	RHC overload early warning level
E16	Cooling fan ON-OFF control
E17	Output while limiting the current (hysteresis width)
E18 to 20	A01, A04, A05 function selection
E21 to 23	A01, A04, A05 gain setting
E24 to 26	A01, A04, A05 bias setting
E27	A01 to 5 filter setting
S01	Operation method
S02,03	Power supply current limit (drive/ control)
H01	Station address
H02	Communication error processing
H03	Timer operation time
H04	Baud rate
H05	Data length selection
H06	Parity check
H07	Stop bit check
H08	No-response error detection time
H09	Response interval
H10	Protocol selection
H11	TL transmission format
H12	Parallel system
H13	Number of slave stations in parallel system
H14	Alarm data deletion
H15,16	Power supply current limit (drive 1/2)
H17,18	Power supply current limit (control 1/2)
H19,20	Current limit early warning (level/ timer)
M09	Power supply frequency
M10	Input power
M11	Effective input current
M12	Effective input voltage
M13	Run command
M14	Running status
M15	Output terminals Y1 to Y18

Protective Functions

Item	LED monitor	Function	Remarks
AC fuse blown	ACF	When the AC fuse is blown (only R and T phases), the converter stops running.	
AC overvoltage	AOV	The converter stops running on detection of AC overvoltage.	
AC undervoltage	ALV	The converter stops running on detection of AC undervoltage.	
AC overcurrent	AOC	The converter stops running if the input current peak value exceeds the overcurrent level.	
AC input current error	ACE	The converter stops running on detection of excessive deviation between AC input and ACR.	
Input phase loss	LPV	The converter stops running if the input phase loss occurs in the power supply.	
Synchronous power supply frequency error	FrE	The power supply frequency is checked after "73" is input. If a frequency error is detected, the converter stops running. Error during converter running (such as momentary power failure) triggers no alarm.	
DC fuse blown	dCF	The converter stops running if the AC fuse is blown (P side).	Above 18.5kW
DC overvoltage	dOV	The converter stops running on detection of DC overvoltage.	200V series: Above 400V±3V 400V series: Above 800V±5V
		If the power failure takes long and the control power goes out, the converter is automatically reset.	
DC undervoltage	dLV	The converter stops running on detection of DC undervoltage.	200V series: Runs at 185V and restarts at 208V 400V series: Runs at 371V and restarts at 417V
		If the power failure takes long and the control power goes out, the converter is automatically reset.	
Charge circuit error	PbF	When the charge circuit error is detected while the answerback signal usage at input of 73 is specified, the converter stops running.	Condition: X1 "73 Answerback" is selected.
Cooling fin overheat	OH1	The converter stops running if the cooling fin overheat is detected.	
External alarm	OH2	The converter stops running if an external signal (THR) is input.	Condition: X1 "External alarm" is selected.
Converter internal overheat	OH3	When overheat is detected in the inverter, the converter stops running.	
Converter overload	OLU	When the output current exceeds the overload characteristic of the inverse time characteristic, the converter stops running.	Start point: 105%, 150% 1 minute
Memory error	Er1	When a fault such as "write error" occurs in the memory (checksum values in EEPROM and RAM do not match), the converter stops running.	
Keypad communication error	Er2	Activated if an error is detected during initial communication. The converter continues operating.	
CPU error	Er3	Activated if an error is detected in the CPU.	
Network device error	Er4	The converter stops running if a fatal error is detected in the master network device (including unconnected power supply).	Applicable to T-Link, SX and CC-Link
Operation procedure error	Er6	When an error is detected in operation procedure, the converter stops running.	
A/D converter error	Er8	When an error is detected in the A/D converter circuit, the converter stops running.	
Optical network error	ErB	The converter stops running if the optical cable is disconnected or a fatal error is detected in an optical device (optional).	
IPM error	IPE	Activated if IPM self-shutoff function is triggered by excessive current or overheat.	Less than 15kW

Structure and environment

Item	Structure, environment and standard		Remarks
Structure specifications	Structure	Installed in the panel and cooled by external device	
	Protective structure	IP00	
	Cooling system	Forced air cooling	
	Installation method	Vertical installation	
	Color	Munsell 5Y3/0.5 half-burnished	
Environment	Maintainability	Structure designed for easy parts change	
	Location	Indoor, location free from corrosive gas, flammable gas, dust and direct light	
	Ambient temperature	-10 to 50°C	
	Humidity	5 to 95%RH Without condensing	
	Altitude	Less than 3000m (output reduction may occur if the altitude is in the range between 1001 and 3000m)	
	Vibration	2 to 9Hz: Amplitude=3mm, 9 to 20Hz: 9.8m/s², 20 to 55Hz: 2m/s² (9 to 55Hz: 2m/s² is used if the power is higher than 90kW.)	
	Storage temperature	-20 to 55°C	
	Storage humidity	5 to 95%RH	



Equipment Configuration List

CT use

Voltage	Nominal applied motor[kw]	PWM converter type	Charging circuit contactor		Contactor for powersource	Charging circuit box ^(*)						Reactor for pressurizing		Resistance for filter		Reactor for filter		Capacitor for filter		Filtering circuit contactor					
			(73)	Q/y		(52)	Q/y	(CU)	Q/y	Charging resistance		Fuse		(Lr)	Q/y	(Rf)	Q/y	(Lf)	Q/y	(Cf)	Q/y	(6F)	Q/y		
										(R0)	Q/y	(F)	Q/y												
200V series	7.5	RHC7.5-2C	SC-5-1	1		CU7.5-2C	1	(80W 7.5Ω)	(3)	(CR2LS-50/UL)	(2)	LR2-7.5C	1	GRZG80 0.42Ω	3	LFC2-7.5C	1	CF2-7.5C	1						
	11	RHC11-2C	SC-N1	1		CU11-2C	1	(HF5C5504)		(CR2LS-75/UL)	(2)	LR2-15C	1	GRZG150 0.2Ω	3	LFC2-15C	1	CF2-15C	1						
	15	RHC15-2C	SC-N2	1		CU15-2C	1			(CR2LS-100/UL)	(2)														
	18.5	RHC18.5-2C	SC-N3	1		CU18.5-2C	1	(GRZG120 2Ω)	(3)			LR2-22C	1	GRZG200 0.13Ω	3	LFC2-22C	1	CF2-22C	1						
	22	RHC22-2C				CU22-2C	1			(CR2L-150/UL)	(2)														
	30	RHC30-2C	SC-N4	1		CU30-2C	1			(CR2L-200/UL)	(2)	LR2-37C	1	GRZG400 0.1Ω	3	LFC2-37C	1	CF2-37C	1						
	37	RHC37-2C	SC-N5	1		CU45-2C	1			(CR2L-260/UL)	(2)														
	45	RHC45-2C	SC-N7	1						(CR2L-400/UL)	(2)	LR2-55C	1			LFC2-55C	1	CF2-55C	1						
	55	RHC55-2C	SC-N8	1		CU55-2C	1																		
75	RHC75-2C	SC-N11	1	CU75-2C	1					LR2-75C	1			LFC2-75C	1	CF2-75C	1								
90	RHC90-2C			CU90-2C	1	(GRZG400 1Ω)	(3)	(A50P600-4)	(2)	LR2-110C	1	GRZG400 0.12Ω [2並列]	6	LFC2-110C	1	CF2-110C	1								
400V series	7.5	RHC7.5-4C	SC-05	1		CU7.5-4C	1	(TK50B 30ΩJ)	(3)	(CR6L-30/UL)	(2)	LR4-7.5C	1	GRZG80 1.74Ω	3	LFC4-7.5C	1	CF4-7.5C	1						
	11	RHC11-4C	SC-4-0	1		CU15-4C	1	(HF5B0416)		(CR6L-50/UL)	(2)	LR4-15C	1	GRZG150 0.79Ω	3	LFC4-15C	1	CF4-15C	1						
	15	RHC15-4C	SC-5-1	1																					
	18.5	RHC18.5-4C	SC-N1	1		CU18.5-4C	1	(80W 7.5Ω)	(3)			LR4-22C	1	GRZG200 0.53Ω	3	LFC4-22C	1	CF4-22C	1						
	22	RHC22-4C				CU22-4C	1	(HF5C5504)		(CR6L-75/UL)	(2)														
	30	RHC30-4C	SC-N2	1		CU30-4C	1			(CR6L-100/UL)	(2)	LR4-37C	1	GRZG400 0.38Ω	3	LFC4-37C	1	CF4-37C	1						
	37	RHC37-4C	SC-N2S	1		CU45-4C	1			(CR6L-150/UL)	(2)														
	45	RHC45-4C	SC-N3	1								LR4-55C	1	GRZG400 0.26Ω	3	LFC4-55C	1	CF4-55C	1						
	55	RHC55-4C	SC-N4	1		CU55-4C	1			(CR6L-200/UL)	(2)														
	75	RHC75-4C	SC-N5	1		CU75-4C	1					LR4-75C	1	GRZG400 0.38Ω	3	LFC4-75C	1	CF4-75C	1						
	90	RHC90-4C	SC-N7	1		CU90-4C	1			(CR6L-300/UL)	(2)	LR4-110C	1	GRZG400 0.53Ω [2並列]	6	LFC4-110C	1	CF4-110C	1						
	110	RHC110-4C	SC-N8	1		CU110-4C	1	(GRZG120 2Ω)	(3)																
	132	RHC132-4C				CU132-4C	1			(A50P400-4)	(2)	LR4-160C	1	RF4-160C	1	LFC4-160C	1	CF4-160C	1						
	160	RHC160-4C	SC-N11	1		CU160-4C	1			(A50P600-4)	(2)														
	200	RHC200-4C	SC-N12	1		CU200-4C	1	(GRZG400 1Ω)	(3)			LR4-220C	1	RF4-220C	1	LFC4-220C	1	CF4-220C	1						
	220	RHC220-4C				CU220-4C	1			(A70QS800-4)	(2)														
	280	RHC280-4C	SC-N3	1		SC-N14	1			GRZG400 1Ω [2並列]	6	A70QS800-4	2	LR4-280C	1	RF4-280C	1	LFC4-280C	1			CF4-280C	1	SC-N4	1
	315	RHC315-4C										A70P1600-4TA	2	LR4-315C	1	RF4-315C	1	LFC4-315C	1			CF4-315C	1		
	355	RHC355-4C												LR4-355C	1	RF4-355C	1	LFC4-355C	1			CF4-355C	1		
	400	RHC400-4C				SC-N16	1							LR4-400C	1	RF4-400C	1	LFC4-400C	1			CF4-400C	1		
	500	RHC500-4C				SC-N11	3							LR4-500C	1	RF4-500C	1	LFC4-500C	1			CF4-500C	1 ₍₂₎		
	630	RHC630-4C				SC-N12	3					A70P2000-4	2	LR4-630C	1	RF4-630C	1	LFC4-630C	1			CF4-630C	1 ₍₂₎	SC-N7	1

VT use


Voltage	Nominal applied motor[kw]	PWM converter type	Charging circuit contactor	Contactor for powersource	Charging circuit box ^(*)						Reactor for pressurizing		Resistance for filter		Reactor for filter		Capacitor for filter		Filtering circuit contactor				
			(73)	Q/y	(52)	Q/y	(CU)	Q/y	Charging resistance		Fuse		(Lr)	Q/y	(Rf)	Q/y	(Lf)	Q/y	(Cf)	Q/y	(6F)	Q/y	
									(R0)	Q/y	(F)	Q/y											
200V series	11	RHC7.5-2C	SC-N1	1		CU7.5-2C	1	(80W 7.5Ω)	(3)	(CR2LS-50/UL)	(2)	LR2-15C	1	GRZG150 0.2Ω	3	LFC2-15C	1	CF2-15C	1				
	15	RHC11-2C	SC-N2	1		CU11-2C	1	(HF5C5504)		(CR2LS-75/UL)	(2)	LR2-22C	1	GRZG200 0.13Ω	3	LFC2-22C	1	CF2-22C	1				
	18.5	RHC15-2C	SC-N3	1		CU15-2C	1			(CR2LS-100/UL)	(2)												
	22	RHC18.5-2C				CU18.5-2C	1	(GRZG120 2Ω)	(3)			LR2-37C	1	GRZG400 0.1Ω	3	LFC2-37C	1	CF2-37C	1				
	30	RHC22-2C	SC-N4	1		CU22-2C	1			(CR2L-150/UL)	(2)		LR2-200/UL		(2)								
	37	RHC30-2C	SC-N5	1		CU30-2C	1			(CR2L-200/UL)	(2)	1			LFC2-55C	1	CF2-55C	1					
	45	RHC37-2C	SC-N7	1		CU45-2C	1			(CR2L-260/UL)	(2)		LR2-55C			1			LFC2-75C			1	CF2-75C
	55	RHC45-2C	SC-N8	1						(CR2L-400/UL)	(2)	LR2-75C		1		LFC2-110C	1					CF2-110C	
	75	RHC55-2C	SC-N11	1		CU55-2C	1						LR2-110C	1			GRZG400 0.12Ω [2並列]	6					
	90	RHC75-2C				CU75-2C	1																
110	RHC90-2C	SC-N12	1	CU90-2C	1	(GRZG400 1Ω)	(3)	(A50P600-4)	(2)														
400V series	11	RHC7.5-4C	SC-4-0	1		CU7.5-4C	1	(TK50B 30ΩJ)	(3)	(CR6L-30/UL)	(2)	LR4-15C	1	GRZG150 0.79Ω	3	LFC4-15C	1	CF4-15C	1				
	15	RHC11-4C	SC-5-1	1		CU15-4C	1	(HF5B0416)		(CR6L-50/UL)	(2)	LR4-22C	1	GRZG200 0.53Ω	3	LFC4-22C	1	CF4-22C	1				
	18.5	RHC15-4C	SC-N1	1																			
	22	RHC18.5-4C				CU18.5-4C	1	(80W 7.5Ω)	(3)			LR4-37C	1	GRZG400 0.38Ω	3	LFC4-37C	1	CF4-37C	1				
	30	RHC22-4C	SC-N2	1		CU22-4C	1	(HF5C5504)		(CR6L-75/UL)	(2)		LR4-110C		1		GRZG400 0.53Ω [2並列]		6			LFC4-110C	1
	37	RHC30-4C	SC-N2S	1		CU30-4C	1			(CR6L-100/UL)	(2)	LR4-160C		1	RF4-160C	1		LFC4-160C	1				CF4-160C
	45	RHC37-4C	SC-N3	1		CU45-4C	1			(CR6L-150/UL)	(2)		LR4-55C	1		GRZG400 0.26Ω	3		LFC4-55C			1	
	55	RHC45-4C	SC-N4	1								LR4-75C		1	GRZG400 0.38Ω		3	LFC4-75C				1	CF4-75C
	75	RHC55-4C	SC-N5	1		CU55-4C	1			(CR6L-200/UL)	(2)		LR4-110C	1		GRZG400 0.53Ω [2並列]	6		LFC4-110C			1	
	90	RHC75-4C	SC-N7	1		CU75-4C	1					LR4-220C		1	RF4-220C		1	LFC4-220C				1	CF4-220C
	110	RHC90-4C	SC-N8	1		CU90-4C	1			(CR6L-300/UL)	(2)		LR4-280C	1		RF4-280C	1		LFC4-280C			1	
	132	RHC110-4C				CU110-4C	1	(GRZG120 2Ω)	(3)			LR4-315C		1	RF4-315C		1	LFC4-315C				1	CF4-315C
	160	RHC132-4C	SC-N11	1		CU132-4C	1			(A50P400-4)	(2)		LR4-355C	1		RF4-355C	1		LFC4-355C			1	
	200	RHC160-4C	SC-N12	1		CU160-4C	1			(A50P600-4)	(2)	LR4-500C		1	RF4-500C		1	LFC4-500C				1	CF4-500C
	220	RHC200-4C				CU200-4C	1	(GRZG400 1Ω)	(3)				LR4-500C	1		RF4-500C	1		LFC4-500C			1	
	280	RHC220-4C	SC-N14	1		CU220-4C	1			(A70QS800-4)	(2)	LR4-355C		1	RF4-355C		1	LFC4-355C				1	CF4-355C
	315	RHC280-4C	SC-N3	1		SC-N14	1		GRZG400 1Ω [2並列]	6	A70QS800-4		2	LR4-315C		1	RF4-315C		1			LFC4-315C	
	355	RHC315-4C				SC-N16	1																
400	RHC355-4C			SC-N11	3																		
500	RHC400-4C																						

Basic Wiring Diagram

■RHC7.5-2C to RHC90-2C (Applicable inverter: 3-phase 200V, 7.5 to 90kW)

■RHC7.5-4C to RHC220-4C (Applicable inverter: 3-phase 400V, 7.5 to 220kW)

*When adapting a charge BOX

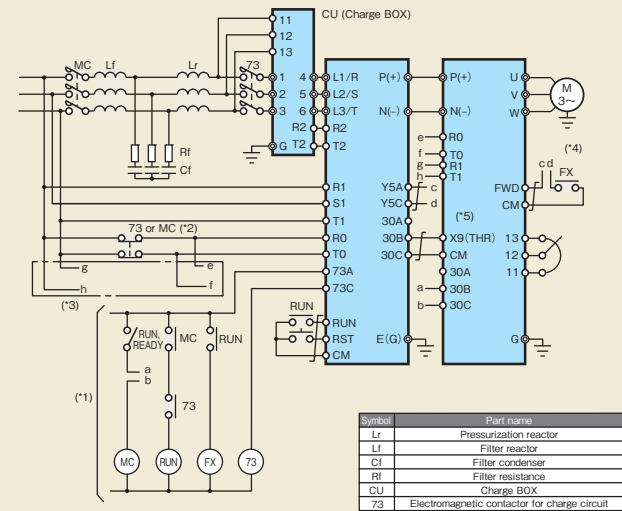

(*1) If the main power supply is 400V series, connect the step-down transformer to limit the voltage of the sequence circuit lower than 220V.

(*2) The auxiliary power supply input terminal for the PWM converter (R0, T0) must be connected to the main power supply via the contact "b" of the electromagnetic contactor for charge circuit (73 or MC).


If 73 is SC-05, SC-4-0, or SC-5-1, use the auxiliary contact unit for the contact "b" of MC or 73.

(*3) Make sure to connect the auxiliary power supply input terminal of the inverter (R0,T0) to the main power supply via the contact "b" of the electromagnetic contactor for charge circuit (73 or MC). For the capacity of FRN37VG1S-2J and FRN75VG1S-4J or more, connect it to the main power supply without passing the inverter fan power auxiliary input terminal (R1,T1) and the contact "b" of 73 or MC.

(*4) Use the sequence that a running signal is input in the inverter after the PWM converter becomes ready.

(*5) One of terminals (X1 to X9) on the inverter unit must be set to external alarm (THR).

■RHC280-4C to RHC400-4C (Applicable inverter: 3-phase 400V, 280 to 400kW)

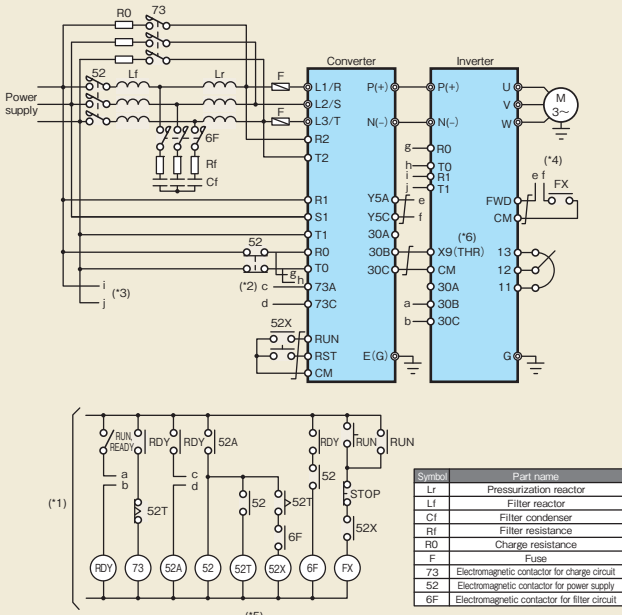

(*1) Connect the step-down transformer to limit the voltage of the sequence circuit lower than 200V.

(*2) The auxiliary power supply input terminal for the PWM converter (R0, T0) must be connected to the main power supply via the contact "b" of the electromagnetic contactor for charge circuit (52).

(*3) Since the AC fan power supply receives power from R0 and T0 terminals, the power supply must be connected without passing the contact "b" of 52.


(*4) Use the sequence that a running signal is input in the inverter after the PWM converter becomes ready.

(*5) The 52T timer must be set to 1 sec.

(*6) One of terminals (X1 to X9) on the inverter must be set to external alarm (THR).

■RHC7.5-2C to RHC90-2C (Applicable inverter: 3-phase 200V, 7.5 to 90kW)

■RHC7.5-4C to RHC220-4C (Applicable inverter: 3-phase 400V, 7.5 to 220kW)

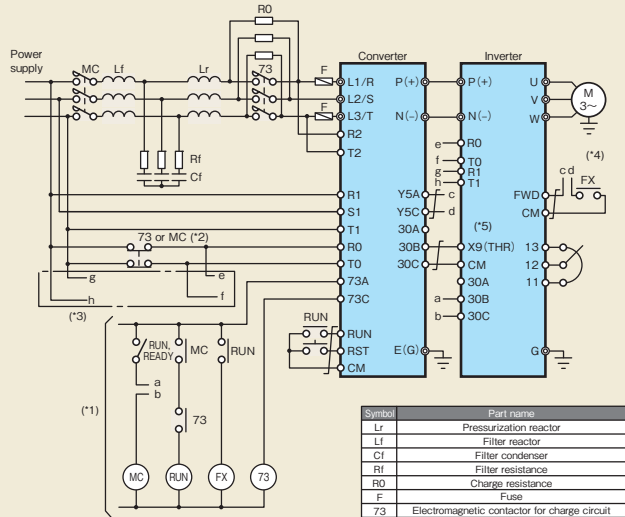

(*1) If the main power supply is 400V series, connect the step-down transformer to limit the voltage of the sequence circuit lower than 220V.

(*2) The auxiliary power supply input terminal for the PWM converter (R0, T0) must be connected to the main power supply via the contact "b" of the electromagnetic contactor for charge circuit (73 or MC).

If 73 is SC-05, SC-4-0, or SC-5-1, use the auxiliary contact unit for the contact "b" of MC or 73.


(*3) Make sure to connect the auxiliary power supply input terminal of the inverter (R0,T0) to the main power supply via the contact "b" of the electromagnetic contactor for charge circuit (73 or MC). For the capacity of FRN37VG1S-2J and FRN75VG1S-4J or more, connect it to the main power supply without passing the inverter fan power auxiliary input terminal (R1,T1) and the contact "b" of 73 or MC.

(*4) Use the sequence that a running signal is input in the inverter after the PWM converter becomes ready.

(*5) One of terminals (X1 to X9) on the inverter unit must be set to external alarm (THR).

■RHC400-4C with VT specification (Applicable inverter: 3-phase 400V, 400kW(LD))

■RHC500-4C, RHC630-4C (Applicable inverter: 3-phase 400V, 500, 630kW)

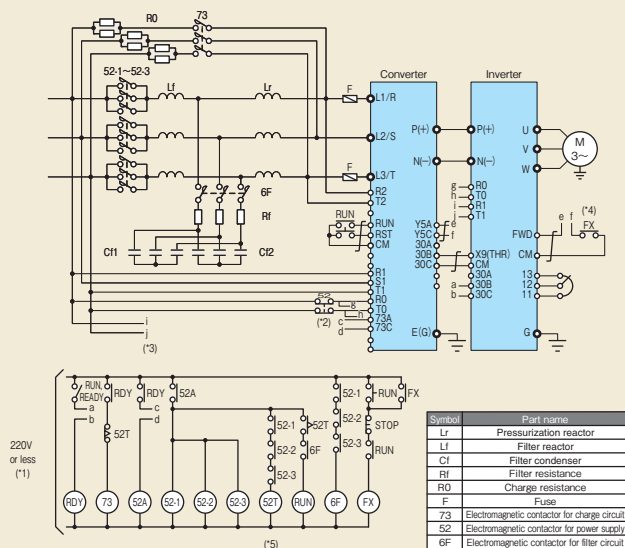

(*1) Connect the step-down transformer to limit the voltage of the sequence circuit lower than 200V.

(*2) The auxiliary power supply input terminal for the PWM converter (R0, T0) must be connected to the main power supply via the contact "b" of the electromagnetic contactor for charge circuit (52).

(*3) Since the AC fan power supply receives power from R0 and T0 terminals, the power supply must be connected without passing the contact "b" of 73 or 52.

(*4) Use the sequence that a running signal is input in the inverter after the PWM converter becomes ready.

(*5) The 52T timer must be set to 1 sec.


(*6) One of terminals (X1 to X9) on the inverter must be set to external alarm (THR).

(*7) Be sure to arrange the phase sequence in the same order when wiring for terminals L1/R, L2/S, L3/T, R2, T2, R1, S1 and T1.




External Dimensions

PMW converter main body

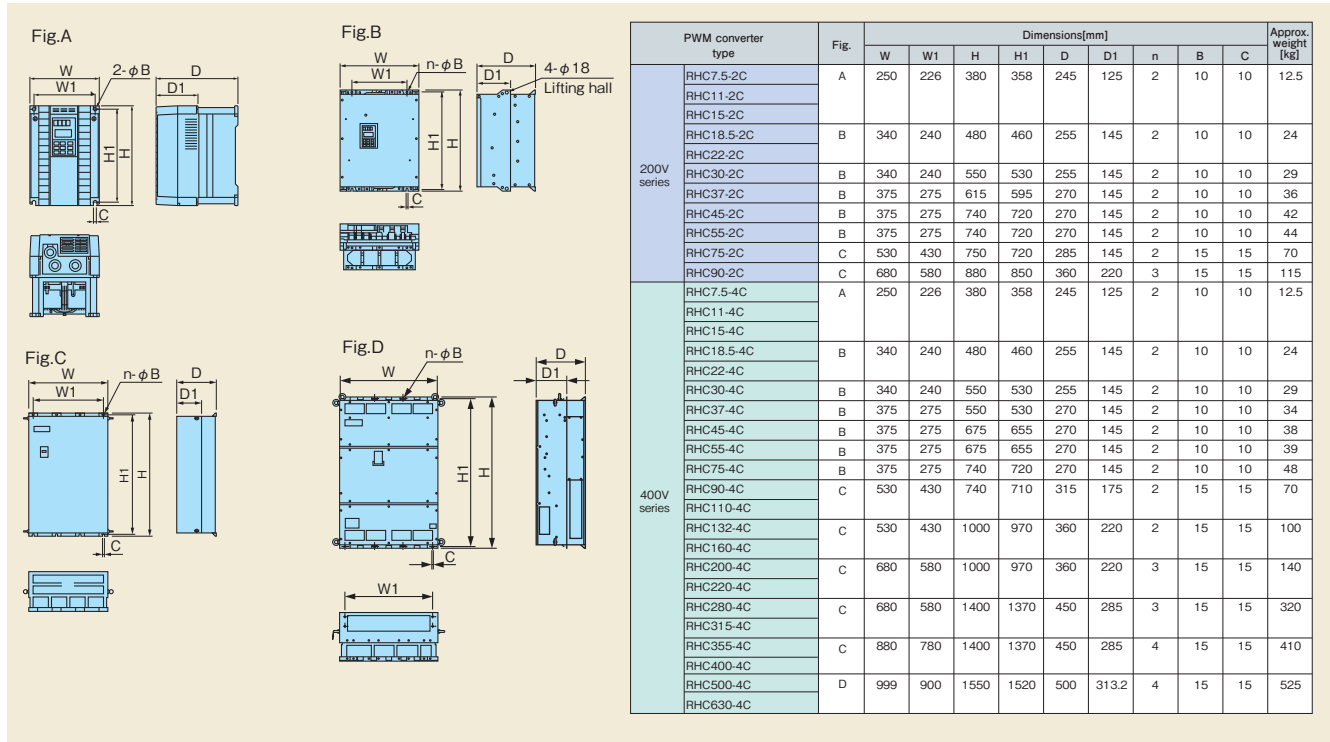

〈Reactor for step-up〉

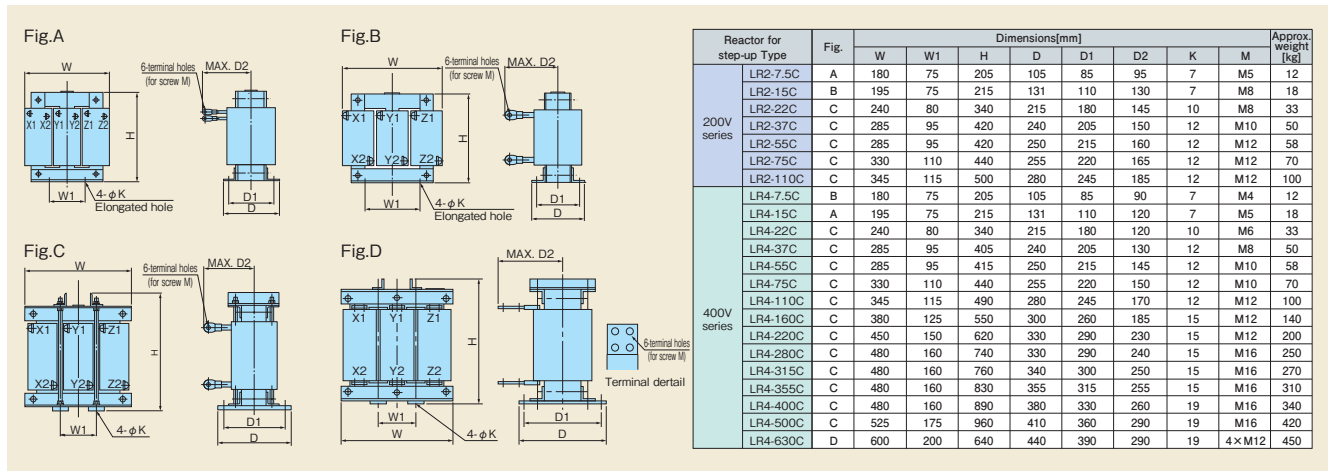

Wiring equipment

Wiring circuit breaker / wire sizes

Power supply voltage	Nominal applied motor [kW]	Inverter type	use	MCCB or ELCB rated current [A]		Magnetic contactor type					Recommended wire size [mm ²]																												
						For the input circuit		For the output circuit			Input circuit(L1/R/L2/S/L3/T)		Output circuit(U,V,W)			DC link circuit(P1,P(+))			Braking circuit(P(+),DB,N(-))																				
				DCR		DCR		HD	MD	LD	DCR		HD	MD	LD	HD	MD	LD	HD	MD	LD																		
				provided	—	provided	—				provided	—																											
3-phase 200V	0.75	FRN0.75VG1S-2J	HD	5	10	SC-05	SC-05	SC-05				2.0	2.0	2.0			2.0			2.0																			
	1.5	FRN1.5VG1S-2J		10	15																																		
	2.2	FRN2.2VG1S-2J		20	30																																		
	3.7	FRN3.7VG1S-2J		30	50																																		
	5.5	FRN5.5VG1S-2J		40	75																																		
	7.5	FRN7.5VG1S-2J		50	100	SC-5-1	SC-N1	SC-N1	3.5	5.5	5.5	—	3.5	5.5	—	2.0		—																					
	11	FRN11VG1S-2J		75	125	SC-N2	SC-N3	SC-N2	5.5	14	8.0(*3)								8.0(*3)																				
	15	FRN15VG1S-2J		100	150	SC-N2S	SC-N4	SC-N2S	14	22	14								14																				
	18.5	FRN18.5VG1S-2J		175	250	SC-N5	SC-N3	22	38(*1)	22	22																												
	22	FRN22VG1S-2J		200	300	SC-N4	SC-N7	SC-N4	38	60	38								38																				
	30	FRN30VG1S-2J	LD	150	200	SC-N5	SC-N8	—	—	SC-N5	38	60	—	—	38	—	—	60	—	—	3.5	—	—																
	37	FRN37VG1S-2J	HD	175	250	SC-N7	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	45	FRN45VG1S-2J	LD	200	300	SC-N8	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
			HD	250	350	SC-N8	SC-N11	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	55	FRN55VG1S-2J	LD	250	350	SC-N8	SC-N11	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
			HD	350	—	—	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
75	FRN75VG1S-2J	LD	—	400	SC-N11	—	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
		HD				—	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
90	FRN90VG1S-2J	LD	—	400	SC-N11	—	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
		HD				—	—	—																—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
110	FRN90VG1S-2J	LD	500	—	SC-N12	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
3-phase 400V	3.7	FRN3.7VG1S-4J	HD	10	20	SC-05	SC-05	SC-05				2.0	2.0	2.0			2.0			2.0																			
	5.5	FRN5.5VG1S-4J		15	30																																		
	7.5	FRN7.5VG1S-4J		20	40																																		
	11	FRN11VG1S-4J		30	50																																		
	15	FRN15VG1S-4J		40	60																																		
	18.5	FRN18.5VG1S-4J		75	125	SC-5-1	SC-N1	SC-5-1	3.5	5.5	3.5	—	3.5	5.5	—	2.0		—																					
	22	FRN22VG1S-4J		100	150	SC-N1	SC-N2	SC-N1	5.5	8.0(*3)	5.5								8.0(*3)																				
	30	FRN30VG1S-4J	HD	125	200	SC-N2	SC-N3	SC-N2	14	22	14								14																				
	37	FRN37VG1S-4J	LD	150	250	SC-N2S	SC-N4	SC-N2S	22	38	22								22																				
	45	FRN45VG1S-4J	HD	200	300	SC-N3	SC-N5	SC-N3	38	60	38								38																				
	55	FRN55VG1□-4J	LD	250	350	SC-N4	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	350	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
	75	FRN75VG1□-4J	LD	400	—	SC-N7	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	90	FRN90VG1□-4J	LD	500	—	SC-N7	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	110	FRN110VG1□-4J	MD/LD	700	—	SC-N8	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	132	FRN132VG1□-4J	MD/LD	800	—	SC-N8	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	160	FRN160VG1□-4J	MD/LD	900	—	SC-N11	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	1000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	200	FRN200VG1□-4J	MD/LD	1000	—	SC-N12	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	1100	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	220	FRN220VG1□-4J	MD/LD	1100	—	SC-N12	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	1200	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	250	FRN220VG1□-4J	MD	1200	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			LD	1300	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	280	FRN280VG1□-4J	HD	1300	—	SC-N14	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			MD	1400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	315	FRN315VG1□-4J	LD	1400	—	SC-N14	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
			HD	1500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
	355	FRN315VG1□-4J	MD	1500	—	SC-N14	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																
LD			1600	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
400	FRN355VG1□-4J	HD	1600	—	SC-N16	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
		MD	1700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
450	FRN355VG1□-4J	LD	1700	—	SC-N16	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
		HD	1800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
450	FRN400VG1□-4J	MD	1800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
		LD	1900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
500	FRN500VG1□-4J	HD	1900	—	610CM(*4)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
		LD	2000	—	610CM(*4)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
630	FRN630VG1□-4J	HD	2000	—	610CM(*4)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
		LD	2100	—	610CM(*4)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
710	FRN630VG1□-4J	HD	2100	—	610CM(*4)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	
		LD	2200	—	610CM(*4)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—																	



To all our customers who purchase Fuji Electric products included in this catalog:

Please take the following items into consideration when placing your order.

When requesting an estimate and placing your orders for the products included in these materials, please be aware that any items such as specifications which are not specifically mentioned in the contract, catalog, specifications or other materials will be as mentioned below.

In addition, the products included in these materials are limited in the use they are put to and the place where they can be used, etc., and may require periodic inspection. Please confirm these points with your sales representative or directly with this company.

Furthermore, regarding purchased products and delivered products, we request that you take adequate consideration of the necessity of rapid receiving inspections and of product management and maintenance even before receiving your products.

1. Free of Charge Warranty Period and Warranty Range

1-1 Free of charge warranty period

- (1) The product warranty period is "1 year from the date of purchase" or 24 months from the manufacturing date imprinted on the name plate, whichever date is earlier.
- (2) However, in cases where the use environment, conditions of use, use frequency and times used, etc., have an effect on product life, this warranty period may not apply.
- (3) Furthermore, the warranty period for parts restored by Fuji Electric's Service Department is "6 months from the date that repairs are completed."

1-2 Warranty range

- (1) In the event that breakdown occurs during the product's warranty period which is the responsibility of Fuji Electric, Fuji Electric will replace or repair the part of the product that has broken down free of charge at the place where the product was purchased or where it was delivered. However, if the following cases are applicable, the terms of this warranty may not apply.
 - 1) The breakdown was caused by inappropriate conditions, environment, handling or use methods, etc. which are not specified in the catalog, operation manual, specifications or other relevant documents.
 - 2) The breakdown was caused by the product other than the purchased or delivered Fuji's product.
 - 3) The breakdown was caused by the product other than Fuji's product, such as the customer's equipment or software design, etc.
 - 4) Concerning the Fuji's programmable products, the breakdown was caused by a program other than a program supplied by this company, or the results from using such a program.
 - 5) The breakdown was caused by modifications or repairs affected by a party other than Fuji Electric.
 - 6) The breakdown was caused by improper maintenance or replacement using consumables, etc. specified in the operation manual or catalog, etc.
 - 7) The breakdown was caused by a science or technical problem that was not foreseen when making practical application of the product at the time it was purchased or delivered.
 - 8) The product was not used in the manner the product was originally intended to be used.
 - 9) The breakdown was caused by a reason which is not this company's responsibility, such as lightning or other disaster.
- (2) Furthermore, the warranty specified herein shall be limited to the purchased or delivered product alone.
- (3) The upper limit for the warranty range shall be as specified in item (1) above and any damages (damage to or loss of machinery or equipment, or lost profits from the same, etc.) consequent to or resulting from breakdown of the purchased or delivered product shall be excluded from coverage by this warranty.

1-3. Trouble diagnosis

As a rule, the customer is requested to carry out a preliminary trouble diagnosis. However, at the customer's request, this company or its service network can perform the trouble diagnosis on a chargeable basis. In this case, the customer is asked to assume the burden for charges levied in accordance with this company's fee schedule.

2. Exclusion of Liability for Loss of Opportunity, etc.

Regardless of whether a breakdown occurs during or after the free of charge warranty period, this company shall not be liable for any loss of opportunity, loss of profits, or damages arising from special circumstances, secondary damages, accident compensation to another company, or damages to products other than this company's products, whether foreseen or not by this company, which this company is not be responsible for causing.

3. Repair Period after Production Stop, Spare Parts Supply Period (Holding Period)

Concerning models (products) which have gone out of production, this company will perform repairs for a period of 7 years after production stop, counting from the month and year when the production stop occurs. In addition, we will continue to supply the spare parts required for repairs for a period of 7 years, counting from the month and year when the production stop occurs. However, if it is estimated that the life cycle of certain electronic and other parts is short and it will be difficult to procure or produce those parts, there may be cases where it is difficult to provide repairs or supply spare parts even within this 7-year period. For details, please confirm at our company's business office or our service office.

4. Transfer Rights

In the case of standard products which do not include settings or adjustments in an application program, the products shall be transported to and transferred to the customer and this company shall not be responsible for local adjustments or trial operation.

5. Service Contents

The cost of purchased and delivered products does not include the cost of dispatching engineers or service costs. Depending on the request, these can be discussed separately.

Required Delivery Period and Code

Inverters

Model	Standard applicable motor [kW]		Standard type			
	HD specification	LD specification	Type	HD/LD	Product no. code	Delivery period
3-phase 200V	0.75	—	FRN0.75VG1S-2J	HD	RHJ2701	Standard product
	1.5	—	FRN1.5VG1S-2J		RHJ2702	
	2.2	—	FRN2.2VG1S-2J		RHJ2703	
	3.7	—	FRN3.7VG1S-2J		RHJ2704	
	5.5	—	FRN5.5VG1S-2J		RHJ2705	
	7.5	—	FRN7.5VG1S-2J		RHJ2706	
	11	—	FRN11VG1S-2J		RHJ2707	
	15	—	FRN15VG1S-2J		RHJ2708	
	18.5	—	FRN18.5VG1S-2J		RHJ2709	
	22	—	FRN22VG1S-2J		RHJ2710	
	30	37	FRN30VG1S-2J	HD / LD	RHJ2711	BTO
	37	45	FRN37VG1S-2J	HD / LD	RHJ2712	
	45	55	FRN45VG1S-2J	HD / LD	RHJ2713	
	55	—	FRN55VG1S-2J	HD	RHJ2714	
	—	75	*	LD	RHJ2733	
3-phase 400V	3.7	—	FRN3.7VG1S-4J	HD	RHJ4051	Standard product
	5.5	—	FRN5.5VG1S-4J		RHJ4052	
	7.5	—	FRN7.5VG1S-4J		RHJ4053	
	11	—	FRN11VG1S-4J		RHJ4054	
	15	—	FRN15VG1S-4J		RHJ4055	
	18.5	—	FRN18.5VG1S-4J		RHJ4056	
	22	—	FRN22VG1S-4J		RHJ4057	
	30	37	FRN30VG1S-4J	HD / LD	RHJ4058	BTO
	37	45	FRN37VG1S-4J	HD / LD	RHJ4059	
	45	55	FRN45VG1S-4J	HD / LD	RHJ4060	
	55	—	FRN55VG1S-4J	HD	RHJ4061	
	—	75	*	LD	RHJ4304	BTO

* When a motor which is larger than the inverter by one frame or more is driven with FRN55VG1 □-2J/4J or more (applicable motor 75kW or more), the DC Reactor that comes equipped with as standard is different between HD and LD specifications. (Shifted by one frame)

* For the inverters with a capacity or of a type other than the above, contact our Sales department.

Options1

Category	Name	Type	Product no. code	Delivery period
Analog	Aio extended card	OPC-VG1-AIO	RHWJ296	BTO
	Ai extended card	OPC-VG1-AI	RHWJ297	
	Di interface card	OPC-VG1-DI	RHWJ298	
Digital (8bit bus supported)	Dio extended card	OPC-VG1-DIO	RHWJ299	
	PG interface extended card	OPC-VG1-PG	RHWJ285	
		OPC-VG1-PGo	RHWJ287	
		OPC-VG1-SPGT	RHWJ291	
	PG card for synchronous motor drive	OPC-VG1-PMPG	RHWJ286	
		OPC-VG1-PMPGo	RHWJ290	
	T-Link interface card	OPC-VG1-TL	RHWJ280	
	CC-Link interface card	OPC-VG1-CCL	RHWJ282	
Digital (16bit bus supported)	SX bus interface card	OPC-VG1-SX	RHWJ281	
	E-SX bus interface card	OPC-VG1-ESX	RHWJ293	
Safety	Safety function card	OPC-VG1-SAFE	RHWJ302	
Control circuit terminal	Terminal block for high-speed serial communications	OPC-VG1-TBSI	RHWJ305	
Battery	Memory backup battery *1	OPK-BP	RHWJ288	
PC loader	FRENIC-VG loader	WPS-VG1-PCL	RHWJ901	Standard product

*1: Optional to the models up to 22kW; standard equipment for the models up to 30kW.

Options2

Unit	Input power of applicable inverter	Type	Product no. code	Delivery period
Braking resistor (10% ED)	3-phase 200V	DB2.2V-21B	RHWJ30A	Standard product
		DB3.7V-21B	RHWJ30B	
		DB5.5V-21B	RHWJ30C	
		DB7.5V-21B	RHWJ30D	
		DB11V-21B	RHWJ30E	
		DB15V-21B	RHWJ30F	
		DB18.5V-21B	RHWJ30G	
		DB22V-21B	RHWJ30H	
		DB30V-21B	RHWJ30I	
		DB37V-21B	RHWJ30J	
		DB45V-21B	RHWJ30K	
		DB55V-21C	RHWJ30L	BTO
	3-phase 400V	DB3.7V-41B	RHWJ31A	Standard product
		DB5.5V-41B	RHWJ31B	
		DB7.5V-41B	RHWJ31C	
		DB11V-41B	RHWJ31D	
		DB15V-41B	RHWJ31E	
		DB18.5V-41B	RHWJ31F	
		DB22V-41B	RHWJ31G	
		DB30V-41B	RHWJ31H	
		DB37V-41B	RHWJ31I	
		DB45V-41B	RHWJ31J	
		DB55V-41C	RHWJ31K	BTO

Dedicated motor (induction motor)

Input power	Capacity[kW]	Type	Product no. code	Delivery period
3-phase 200V	0.75	MVK8095A	MVK2201	Standard product
	1.5	MVK8097A	MVK2202	
	2.2	MVK8107A	MVK2203	
	3.7	MVK8115A	MVK2204	
	5.5	MVK8133A	MVK2205	
	7.5	MVK8135A	MVK2206	
	11	MVK8165A	MVK2107	
	15	MVK8167A	MVK2108	
	18.5	MVK8184A	MVK2109	
	22	MVK8185A	MVK2110	
	30	MVK8187A	MVK2111	
	37	MVK8207A	MVK2112	
	45	MVK8208A	MVK2113	
3-phase 400V	3.7	MVK8115A	MVK2254	Standard product
	5.5	MVK8135A	MVK2255	
	7.5	MVK8135A	MVK2256	
	11	MVK8165A	MVK2157	
	15	MVK8167A	MVK2158	
	18.5	MVK8184A	MVK2159	
	22	MVK8185A	MVK2160	
	30	MVK8187A	MVK2161	
	37	MVK8207A	MVK2162	
	45	MVK8208A	MVK2163	

Dedicated motor (induction motor w/ sensor)

Input power	Capacity[kW]	Type	Product no. code	Delivery period
3-phase 200V	5.5	GNF2114A	GNF1010	Standard product
	7.5	GNF2115A	GNF1011	
	11	GNF2117A	GNF1012	
	15	GNF2118A	GNF1013	
	18.5	GNF2136A	GNF1014	
	22	GNF2137A	GNF1015	
	30	GNF2139A	GNF1016	
	37	GNF2165A	GNF1017	
3-phase 400V	45	GNF2167A	GNF1018	BTO
	55	GNF2185A	—	
	5.5	GNF2114A	GNF1020	Standard product
	7.5	GNF2115A	GNF1021	
	11	GNF2117A	GNF1022	
	15	GNF2118A	GNF1023	
	18.5	GNF2136A	GNF1024	
	22	GNF2137A	GNF1025	
	30	GNF2139A	GNF1026	
	37	GNF2165A	GNF1027	
	45	GNF2167A	GNF1028	
	55	GNF2185A	GNF1029	
	75	GNF2187A	GNF1030	
	90	GNF2207A	GNF1031	

Guideline for Suppressing Harmonics

FUJI INVERTERS



Application to "Guideline for Suppressing Harmonics by the Users Who Receive High Voltage or Special High Voltage"

Our FRENIC series are the products specified in the "Guideline for Suppressing Harmonics by Customers Receiving High Voltage or Special High Voltage." When you enter into a new contract with an electric power company or update a contract, you are requested by the electric power company to submit an accounting statement form.

(1) Scope of regulation

In principle, the guideline applies to the customers that meet the following two conditions:

- The customer receives high voltage or special high voltage.
- The "equivalent capacity" of the converter load exceeds the standard value for the receiving voltage (50kVA at a receiving voltage of 6.6kV).

(2) Regulation method

The level (calculated value) of the harmonic current that flows from the customer's receiving point out to the system is subjected to the regulation. The regulation value is proportional to the contract demand. The regulation values specified in the guideline are shown in Table 1.

Table 1 Upper limits of harmonic outflow current per kW of contract demand [mA/kW]

Receiving voltage	5th	7th	11th	13th	17th	19th	23th	Over 25th
6.6kV	3.5	2.5	1.6	1.3	1.0	0.90	0.76	0.70
22kV	1.8	1.3	0.82	0.69	0.53	0.47	0.39	0.36

1. Calculation of Equivalent Capacity (Pi)

Although the equivalent capacity (Pi) is calculated using the equation of (input rated capacity) x (conversion factor), catalog of conventional inverters do not contain input rated capacities. A description of the input rated capacity is shown below:

(1) "Inverter rated capacity" corresponding to "Pi"

- Calculate the input fundamental current I1 from the kW rating and efficiency of the load motor, as well as the efficiency of the inverter. Then, calculate the input rated capacity as shown below:

Input rated capacity = $\sqrt{3} \times (\text{power supply voltage}) \times I1 \times 1.0228 / 1000 [\text{kVA}]$

Where 1.0228 is the 6-pulse converter's value obtained by (effective current) / (fundamental current).

- When a general-purpose motor or inverter motor is used, the appropriate value shown in Table 2 can be used. Select a value based on the kW rating of the motor used, irrespective of the inverter type.

Table 2 "Input rated capacities" of general-purpose inverters determined by the nominal applied motors

Nominal applied motor [kW]	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22
Pi [kVA]	200V	0.57	0.97	1.95	2.81	4.61	6.77	9.07	13.1	17.6	21.8
	400V	0.57	0.97	1.95	2.81	4.61	6.77	9.07	13.1	17.6	21.8
Nominal applied motor [kW]	30	37	45	55	75	90	110	132	160	200	220
Pi [kVA]	200V	34.7	42.8	52.1	63.7	87.2	104	127			
	400V	34.7	42.8	52.1	63.7	87.2	104	127	153	183	229
Nominal applied motor [kW]	250	280	315	355	400	450	500	530	560	630	
Pi [kVA]	200V										
	400V	286	319	359	405	456	512	570	604	638	718

(2) Values of "Ki (conversion factor)"

- Depending on whether an optional ACR (AC REACTOR) or DCR (DC REACTOR) is used, apply the appropriate conversion factor specified in the appendix to the guideline. The values of the converter factor are shown in Table 3.

Table 3 "Conversion factors Ki" for general-purpose inverters determined by reactors

Circuit category	Circuit type	Conversion factor Ki	Main applications
3	Three-phase bridge 3 (capacitor smoothing)	Without a reactor	K31=3.4
		With a reactor (ACR)	K32=1.8
		With a reactor (DCR)	K33=1.8
		With reactors (ACR and DCR)	K34=1.4

2. Calculation of Harmonic Current

(1) Value of "input fundamental current"

- Apply the appropriate value shown in Table 4 based on the kW rating of the motor, irrespective of the inverter type or whether a reactor is used.
- * If the input voltage is different, calculate the input fundamental current in inverse proportion to the voltage.

Table 4 "Input fundamental currents" of general-purpose inverters determined by the nominal applied motors

Nominal applied motor [kW]	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22
Input fundamental current [A]	200V	1.62	2.74	5.50	7.92	13.0	19.1	25.6	36.9	49.8	61.4
	400V	0.81	1.37	2.75	3.96	6.50	9.55	12.8	18.5	24.9	30.7
6.6 kV converted value [mA]		49	83	167	240	394	579	776	1121	1509	1860
Nominal applied motor [kW]	30	37	45	55	75	90	110	132	160	200	220
Input fundamental current [A]	200V	98.0	121	147	180	245	293	357			
	400V	49.0	60.4	73.5	89.9	123	147	179	216	258	323
6.6 kV converted value [mA]		2970	3660	4450	5450	7450	8910	10850	13090	15640	19580
Nominal applied motor [kW]	250	280	315	355	400	450	500	530	560	630	
Input fundamental current [A]	200V										
	400V	403	450	506	571	643	723	804	852	900	1013
6.6 kV converted value [mA]		24400	27300	30700	34600	39000	43800	48700	51600	54500	61400

(2) Calculation of harmonic current

Table 5 Generated harmonic current [%], 3-phase bridge (capacitor smoothing)

Degree	5th	7th	11th	13th	17th	19th	23th	25th
Without a reactor	65	41	8.5	7.7	4.3	3.1	2.6	1.8
With a reactor (ACR)	38	14.5	7.4	3.4	3.2	1.9	1.7	1.3
With a reactor (DCR)	30	13	8.4	5.0	4.7	3.2	3.0	2.2
With reactors (ACR and DCR)	28	9.1	7.2	4.1	3.2	2.4	1.6	1.4

- ACR: 3%
- DCR: Accumulated energy equal to 0.08 to 0.15ms (100% load conversion)
- Smoothing capacitor: Accumulated energy equal to 15 to 30ms (100% load conversion)
- Load: 100%

$$\blacksquare \text{ nth harmonic current [A]} = \text{Fundamental current [A]} \times \frac{\text{Generated nth harmonic current [\%]}}{100}$$

Calculate the harmonic current of each degree using the following equation:

(3) Maximum availability factor

- For a load for elevators, which provides intermittent operation, or a load with a sufficient designed motor rating, reduce the current by multiplying the equation by the "maximum availability factor" of the load.
- The "maximum availability factor of an appliance" means the ratio of the capacity of the harmonic generator in operation at which the availability reaches the maximum, to its total capacity, and the capacity of the generator in operation is an average for 30 minutes.
- In general, the maximum availability factor is calculated according to this definition, but the standard values shown in Table 6 are recommended for inverters for building equipment.

Table 6 Availability factors of inverters, etc. for building equipment (standard values)

Equipment type	Inverter capacity category	Single inverter availability factor
Air conditioning system	200kW or less	0.55
	Over 200kW	0.60
Sanitary pump	—	0.30
Elevator	—	0.25
Refrigerator, freezer	50kW or less	0.60
UPS (6-pulse)	200kVA	0.60

[Correction coefficient according to contract demand level]

- Since the total availability factor decreases with increase in the building scale, calculating reduced harmonics with the correction coefficient s defined in Table 7 below is permitted.

Table 7 Correction coefficient according to the building scale

Contract demand [kW]	Correction coefficient b
300	1.00
500	0.90
1000	0.85
2000	0.80

*If the contract demand is between two specified values shown in Table 7, calculate the value by interpolation.

(4) Degree of harmonics to be calculated

Calculate only the "5th and 7th" harmonic currents



NOTES

When running general-purpose motors

• Driving a 400V general-purpose motor

When driving a 400V general-purpose motor with an inverter using extremely long cables, damage to the insulation of the motor may occur. Use an output circuit filter (OFL) if necessary after checking with the motor manufacturer. Fuji's motors do not require the use of output circuit filters because of their reinforced insulation.

• Torque characteristics and temperature rise

When the inverter is used to run a general-purpose motor, the temperature of the motor becomes higher than when it is operated using a commercial power supply. In the low-speed range, the cooling effect will be weakened, so decrease the output torque of the motor. If constant torque is required in the low-speed range, use a Fuji inverter motor or a motor equipped with an externally powered ventilating fan.

• Vibration

When the motor is mounted to a machine, resonance may be caused by the natural frequencies, including that of the machine. Operation of a 2-pole motor at 60Hz or more may cause abnormal vibration.

* Study use of tie coupling or dampening rubber.

* It is also recommended to use the inverter jump frequency control to avoid resonance points.

• Noise

When an inverter is used with a general-purpose motor, the motor noise level is higher than that with a commercial power supply. To reduce noise, raise carrier frequency of the inverter. High-speed operation at 60Hz or more can also result in more noise.

When running special motors

• Explosion-proof motors

When driving an explosion-proof motor with an inverter, use a combination of a motor and an inverter that has been approved in advance.

• Brake motors

For motors equipped with parallel-connected brakes, their braking power must be supplied from the primary circuit (commercial power supply). If the brake power is connected to the inverter power output circuit (secondary circuit) by mistake, problems may occur.

Do not use inverters for driving motors equipped with series-connected brakes.

• Geared motors

If the power transmission mechanism uses an oil-lubricated gearbox or speed changer/reducer, then continuous motor operation at low speed may cause poor lubrication. Avoid such operation.

• Single-phase motors

Single-phase motors are not suitable for inverter-driven variable speed operation. Use three-phase motors.

Environmental conditions

• Installation location

Use the inverter in a location with an ambient temperature range of -10 to 50°C.

The inverter and braking resistor surfaces become hot under certain operating conditions. Install the inverter on nonflammable material such as metal.

Ensure that the installation location meets the environmental conditions specified in "Environment" in inverter specifications.

Combination with peripheral devices

• Installing a molded case circuit breaker (MCCB)

Install a recommended molded case circuit breaker (MCCB) or an earth leakage circuit breaker (ELCB) in the primary circuit of each inverter to protect the wiring. Ensure that the circuit breaker capacity is equivalent to or lower than the recommended capacity.

• Installing a magnetic contactor (MC) in the output (secondary) circuit

If a magnetic contactor (MC) is mounted in the inverter's secondary circuit for switching the motor to commercial power or for any other purpose, ensure that both the inverter and the motor are fully stopped before you turn the MC on or off. Remove the surge killer integrated with the MC.

• Installing a magnetic contactor (MC) in the input (primary) circuit

Do not turn the magnetic contactor (MC) in the primary circuit on or off more than once an hour as an inverter fault may result. If frequent starts or stops are required during motor operation, use FWD/REV signals.

• Protecting the motor

The electronic thermal facility of the inverter can protect the general-purpose motor. The operation level and the motor type (general-purpose motor, inverter motor) should be set. For high-speed motors or water-cooled motors, set a small value for the thermal time constant to protect the motor.

If you connect the motor thermal relay to the motor with a long cable, a high-frequency current may flow into the wiring stray capacitance. This may cause the relay to trip at a current lower than the set value for the thermal relay. If this happens, lower the carrier frequency or use the output circuit filter (OFL).

• Discontinuance of power-factor correcting capacitor

Do not mount power factor correcting capacitors in the inverter (primary) circuit. (Use the DC REACTOR to improve the inverter power factor.) Do not use power factor correcting capacitors in the inverter output circuit (secondary). An overcurrent trip will occur, disabling motor operation.

• Discontinuance of surge killer

Do not mount surge killers in the inverter output (secondary) circuit.

• Reducing noise

Use of a filter and shielded wires are typical measures against noise to ensure that EMC Directives are met.

• Measures against surge currents

If an overvoltage trip occurs while the inverter is stopped or operated under a light load, it is assumed that the surge current is generated by open/close of the phase-advancing capacitor in the power system.

We recommend connecting a DC REACTOR to the inverter.

• Megger test

When checking the insulation resistance of the inverter, use a 500V megger and follow the instructions contained in the Instruction Manual.

Wiring

• Wiring distance of control circuit

When performing remote operation, use the twisted shield wire and limit the distance between the inverter and the control box to 20m.

• Wiring length between inverter and motor

If long wiring is used between the inverter and the motor, the inverter will overheat or trip as a result of overcurrent (high-frequency current flowing into the stray capacitance) in the wires connected to the phases. Ensure that the wiring is shorter than 50m. If this length must be exceeded, lower the carrier frequency or mount an output circuit filter (OFL).

When wiring is longer than 50m, and sensorless vector control or vector control with speed sensor is selected, execute off-line tuning.

• Wiring size

Select cables with a sufficient capacity by referring to the current value or recommended wire size.

• Wiring type

Do not use multicore cables that are normally used for connecting several inverters and motors.

• Grounding

Securely ground the inverter using the grounding terminal.

Selecting inverter capacity

• Driving general-purpose motor

Select an inverter according to the applicable motor ratings listed in the standard specifications table for the inverter. When high starting torque is required or quick acceleration or deceleration is required, select an inverter with a capacity one size greater than the standard.

• Driving special motors

Select an inverter that meets the following condition: Inverter rated current > Motor rated current.

Transportation and storage

When transporting or storing inverters, follow the procedures and select locations that meet the environmental conditions that agree with the inverter specifications.

Fuji Electric Co., Ltd.

Gate City Ohsaki, East Tower, 11-2,

Osaki 1-chome, Shinagawa-ku,

Tokyo 141-0032, Japan

Phone: +81-3-5435-7057 Fax: +81-3-5435-7420

URL: <http://www.fujielectric.com/>

Printed on recycled paper

Information in this catalog is subject to change without notice.

Printed in Japan 2011-9(I11/I11)CM 30 FOLS